

# marantz®

Model CC4001 User Guide

---

5 Disc CD Changer

CLASS 1 LASER PRODUCT  
LUOKAN 1 LASERLAITE  
KLASS 1 LASERAPPARAT

COMPACT  
disc  
DIGITAL AUDIO

## ENGLISH

### **WARRANTY**

For warranty information, contact your local Marantz distributor.

### **RETAIN YOUR PURCHASE RECEIPT**

Your purchase receipt is your permanent record of a valuable purchase. It should be kept in a safe place to be referred to as necessary for insurance purposes or when corresponding with Marantz.

### **IMPORTANT**

When seeking warranty service, it is the responsibility of the consumer to establish proof and date of purchase. Your purchase receipt or invoice is adequate for such proof.

### **FOR U.K. ONLY**

This undertaking is in addition to a consumer's statutory rights and does not affect those rights in any way.

## FRANÇAIS

### **GARANTIE**

Pour des informations sur la garantie, contacter le distributeur local Marantz.

### **CONSERVER L'ATTESTATION D'ACHAT**

L'attestation d'achat est la preuve permanente d'un achat de valeur. La conserver en lieu sûr pour s'y reporter aux fins d'obtention d'une couverture d'assurance ou dans le cadre de correspondances avec Marantz.

### **IMPORTANT**

Pour l'obtention d'un service couvert par la garantie, il incombe au client d'établir la preuve de l'achat et d'en corroborer la date. Le reçu ou la facture constituent des preuves suffisantes.

## DEUTSCH

### **GARANTIE**

Bei Garantiefragen wenden Sie sich bitte an Ihren Marantz-Händler.

### **HEBEN SIE IHRE QUITTING GUT AUF**

Die Quittung dient Ihnen als bleibende Unterlage für Ihren wertvollen Einkauf. Das Aufbewahren der Quittung ist wichtig, da die darin enthaltenen Angaben für Versicherungszwecke oder bei Korrespondenz mit Marantz angeführt werden müssen.

### **WICHTIG!**

Bei Garantiefragen muß der Kunde eine Kaufunterlage mit Kaufdatum vorlegen. Ihre Quittung oder Rechnung ist als Unterlage ausreichend.

## NEDERLANDS

### **GARANTIE**

Voor inlichtingen omtrent garantie dient u zich tot uw plaatselijke Marantz.

### **UW KWITANTIE, KASSABON E.D. BEWAREN**

Uw kwitantie, kassabon e.d. vormen uw bewijs van aankoop van een waardevol artikel en dienen op een veilige plaats bewaard te worden voor evt. verwijzing bijv. in verband met verzekering of bij correspondentie met Marantz.

### **BELANGRIJK**

Bij een evt. beroep op de garantie is het de verantwoordelijkheid van de consument een gedateerd bewijs van aankoop te tonen. Uw kassabon of factuur zijn voldoende bewijs.

## ESPAÑOL

### **GARANTIA**

Para obtener información acerca de la garantía póngase en contacto con su distribuidor Marantz.

### **GUARDE SU RECIBO DE COMPRA**

Su recibo de compra es su prueba permanente de haber adquirido un aparato de valor. Este recibo deberá guardarlo en un lugar seguro y utilizarlo como referencia cuando tenga que hacer uso del seguro o se ponga en contacto con Marantz.

### **IMPORTANTE**

Cuando solicite el servicio otorgado por la garantía el usuario tiene la responsabilidad de demostrar cuando efectuó la compra. En este caso, su recibo de compra será la prueba apropiada.

## ITALIANO

### **GARANZIA**

L'apparecchio è coperto da una garanzia di buon funzionamento della durata di un anno, o del periodo previsto dalla legge, a partire dalla data di acquisto comprovata da un documento attestante il nominativo del Rivenditore e la data di vendita. La garanzia sarà prestata con la sostituzione o la riparazione gratuita delle parti difettose.

Non sono coperti da garanzia difetti derivanti da uso improprio, errata installazione, manutenzione effettuata da personale non autorizzato o, comunque, da circostanze che non possano riferirsi a difetti di funzionamento dell'apparecchio. Sono inoltre esclusi dalla garanzia gli interventi inerenti l'installazione e l'allacciamento agli impianti di alimentazione.

Gli apparecchi verranno riparati presso i nostri Centri di Assistenza Autorizzati. Le spese ed i rischi di trasporto sono a carico del cliente.

La casa costruttrice declina ogni responsabilità per danni diretti o indiretti provocati dalla inosservanza delle prescrizioni di installazione, uso e manutenzione dettagliate nel presente manuale o per guasti dovuti ad uso continuato a fini professionali.

## SVENSKA

### **GARANTI**

För information om garantin, kontakta Marantz lokalagent.

### **SPAR KVITTOT**

Kvittot är ett inköpsbevis på en värdefull vara. Det skall förvaras säkert och hänvisas till vid försäkringsfall eller vidkorrespondens med Marantz.

### **VIKTIGT**

Fö att garantin skall gälla är det kundens sak att framställa bevis och datum om köpet. Kvitto eller faktura är tillräckligt bevis för detta.

# CE MARKING

- English**  
The CC4001 is in conformity with the EMC directive and low-voltage directive.
- Français**  
Le CC4001 est conforme à la directive EMC et à la directive sur les basses tensions.
- Deutsch**  
Das Modell CC4001 entspricht den EMC-Richtlinien und den Richtlinien für Niederspannungsgeräte.
- Nederlands**  
De CC4001 voldoet aan de EMC eisen en de vereisten voor laag-voltage.
- Español**  
El CC4001 está de acuerdo con las normas EMC y las relacionadas con baja tensión.
- Italiano**  
Il CC4001 è conforme alle direttive CEE ed a quelle per i bassi voltaggi.
- Svenska**  
CC4001 är tillverkad i enlighet med EMC direktiven och direktiven för lågvoltstrusning.

## English

### WARNINGS

- Do not expose the equipment to rain or moisture.
- Do not remove the cover from the equipment.
- Do not insert anything into the equipment through the ventilation holes.
- Do not handle the mains cord with wet hands.
- Do not cover the ventilation with any items such as tablecloths, newspapers, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the equipment.
- When disposing of used batteries, please comply with governmental regulations or environmental public instruction's rules that apply in your country or area.
- Make a space of about 0.1 meter around the unit.
- No objects filled with liquids, such as vases, shall be placed on the equipment.
- When the switch is in the OFF position, the equipment is not completely switched off from MAINS.
- The equipment shall be installed near the power supply so that the power supply is easily accessible.

## Français

### AVERTISSEMENTS

- Ne pas exposer l'appareil à la pluie ni à l'humidité.
- Ne pas essayer de retirer le boîtier de l'appareil.
- Ne rien insérer dans l'appareil par les orifices de ventilation.
- Ne pas manipuler le cordon d'alimentation avec les mains mouillées.
- Ne pas recouvrir les ouïes de ventilation avec un objet quelconque comme une nappe, un journal, un rideau, etc.
- Ne placer aucune source de flamme nue, comme une bougie allumée, sur l'appareil.
- Pour mettre au rebut les piles usées, respecter les lois gouvernementales ou les règlements officiels concernant l'environnement qui s'appliquent à votre pays ou région.
- Veiller à ce qu'aucun objet ne soit à moins de 0,1 mètre des côtés de l'appareil.
- Aucun objet rempli de liquide, un vase par exemple, ne doit être placé sur l'appareil.
- Lorsque l'interrupteur est sur la position OFF, l'appareil n'est pas complètement déconnecté du SECTEUR (MAINS).
- L'appareil sera installé près de la source d'alimentation, de sorte que cette dernière soit facilement accessible.

## Deutsch

### WARNHINWEISE

- Das Gerät nicht Regen oder Feuchtigkeit aussetzen.
- Die Abdeckung nicht vom Gerät abnehmen.
- Keine Gegenstände durch die Belüftungsschlitze stecken.
- Das Netzkabel nicht mit feuchten oder nassen Händen anfassen.
- Decken Sie die Lüftungsöffnungen nicht mit einem Tischtuch, einer Zeitung, einem Vorhang usw. ab.
- Es dürfen keine Gegenstände mit offener Flamme, wie etwa brennende Kerzen, auf dem Gerät aufgestellt werden.
- Beachten Sie bei der Entsorgung der verbrauchten Batterien alle geltenden lokalen und überregionalen Regelungen.
- Auf allen Geräteseiten muß ein Zwischenraum von ungefähr 0,1 meter vorhanden sein.
- Auf das Gerät dürfen keine mit Flüssigkeiten gefüllte Behälter, wie etwa eine Vase, gestellt werden.
- Wenn der Schalter ausgeschaltet ist (OFF-Position), ist das Gerät nicht vollständig vom Stromnetz (MAINS) abgetrennt.
- Das Gerät sollte in der Nähe einer Netzsteckdose aufgestellt werden, damit es leicht an das Stromnetz angeschlossen werden kann.

## Nederlands

### WAARSCHUWINGEN

- Stel het apparaat niet bloot aan regen of vocht.
- Verwijder de afdekplaat van het apparaat niet.
- Duw niets door de ventilatieopeningen in het apparaat.
- Raak het netsnoer niet met natte handen aan.
- Bedek de ventilatieopeningen niet met enige voorwerpen, zoals tafelkleden, kranten, gordijnen, enz.
- Plaats geen brandende voorwerpen, zoals kaarsen, op het apparaat.
- Volg bij het weggooiën van verbruikte batterijen de overheidswetgeving of milieuvorschriften op die van kracht zijn in het land of de regio waarin u zich bevindt.
- Zorg dat er 0,1 meter vrije ruimte rond het toestel is.
- Plaats geen voorwerpen met een vloeistof erin, zoals een bloemenvaas, op het apparaat.
- Als de schakelaar op OFF staat, is het apparaat niet volledig losgekoppeld van de netspanning (MAINS).
- De apparatuur wordt in de buurt van het stopcontact geïnstalleerd, zodat dit altijd gemakkelijk toegankelijk is.

## **Español**

### **ADVERTENCIAS**

- No exponga el equipo a la lluvia ni a la humedad.
- No extraiga la tapa del equipo.
- No introduzca nada en el interior del equipo a través de los orificios de ventilación.
- No maneje el cable de alimentación con las manos mojadas.
- No cubra la ventilación con objetos como manteles, periódicos, cortinas, etc.
- No deben colocarse sobre el equipo elementos con fuego, por ejemplo velas encendidas.
- Cuando se eliminen baterías usadas, deben cumplirse las reglamentaciones oficiales o las normas de protección medioambiental aplicables en su país o en su zona.
- Deje un espacio de unos 0,1 metro alrededor de la unidad.
- No se deben colocar sobre el aparato recipientes que contengan líquidos, como por ejemplo jarrones.
- Cuando el interruptor está en la posición OFF, el equipo no está completamente desconectado de la alimentación MAINS.
- El equipo se instalará cerca de la fuente de alimentación de manera que resulte fácil acceder a ella.

## **Italiano**

### **AVVERTENZE**

- Non esporre l'apparecchio alla pioggia o all'umidità.
- Non rimuovere il coperchio dell'apparecchio.
- Non introdurre oggetti all'interno dell'apparecchio attraverso i fori di ventilazione.
- Non toccare il cavo di alimentazione con le mani bagnate.
- Non coprire le fessure di ventilazione con tovaglie, giornali, tende od oggetti analoghi.
- Non posare sull'apparecchio sorgenti di fiamme scoperte quali candele accese.
- Smaltire le pile usate in conformità alle norme governative o disposizioni ambientali vigenti nel proprio paese o zona.
- Lasciare 0,1 metro liberi tutto intorno l'unità.
- Non mettere sull'apparecchiatura alcun contenitore di liquido, come ad esempio dei vasi.
- Quando l'interruttore è nella posizione OFF, l'apparecchiatura non è completamente scollegata da MAINS.
- L'apparecchio va installato in prossimità della fonte di alimentazione, in modo che quest'ultima sia facilmente accessibile.

## **Svenska**

### **VARNINGAR**

- Utsätt inte utrustningen för regn eller fukt.
- Ta inte bort utrustningens hölje.
- För inte in föremål i utrustningen genom ventilationshålen.
- Hantera inte nätsladden med våta händer.
- Täck inte för ventilationsöppningarna med några föremål som till exempel bordsdukar, dagstidningar, gardiner e.d.
- Inga föremål med öppen låga, som till exempel tända stearinljus, bör placeras på utrustningen.
- Följ de lagar och miljöskyddsråd som gäller i det land eller område där du bor när du gör dig av med batterier.
- Se till att det finns omkring 0,1 meter fri plats runt omkring enheten.
- Inga objekt som är fyllda med någon vätska, till exempel blomstervaser, bör placeras på apparaten.
- Även om strömbrytaren står i det avstängda läget OFF, så är utrustningen inte helt bortkopplad från det elektriska nätet (MAINS).
- Utrustningen ska vara installerad nära strömuttaget så att strömförsörjningen är lätt att tillgå.

# CONTENTS

<b>FOREWORD</b> .....	<b>1</b>
EQUIPMENT MAINS WORKING SETTING .....	1
COPYRIGHT .....	1
<b>INTRODUCTION</b> .....	<b>2</b>
PRODUCT FEATURES .....	2
APPLICABLE DISCS TO THE UNIT .....	2
PLAYING CD-R/CD-RW DISCS .....	2
PLAYING MP3 FILES .....	2
<b>BEFORE USING</b> .....	<b>3</b>
NOTES FOR REMOVING SHIPPING SCREWS .....	3
NOTES ABOUT THE DISCS .....	3
INAPPROPRIATE PLACES FOR INSTALLATION .....	3
PRECAUTIONS .....	4
USING REMOTE CONTROL UNIT .....	4
LOADING BATTERIES .....	4
<b>NAMES AND FUNCTIONS</b> .....	<b>5</b>
FRONT PANEL.....	5
DISPLAY WINDOW.....	6
REAR PANEL.....	7
REMOTE CONTROLLER.....	8
REMOTE CONTROL CODE SETTING .....	9
<b>CONNECTIONS</b> .....	<b>10</b>
<b>OPERATION</b> .....	<b>11</b>
CONNECTING THE POWER SUPPLY AND TURNING ON .....	11
NORMAL PLAYBACK .....	11
PAUSE PLAYBACK.....	12
STOP PLAYBACK.....	12
CHANGE DISCS WHILE PLAYING .....	12
PLAYING YOUR FAVORITE TRACKS OF A DISC .....	13
PLAYING YOUR FAVORITE PARTS OF A TRACK .....	13
SEARCH YOUR FAVORITE TRACKS (AMS (AUTOMATIC MUSIC SCAN)PLAY) .....	13
PLAYING TRACKS IN A RANDOM SEQUENCE (RANDOM PLAY) .....	14
REPEAT PLAY .....	15
PLAYING TRACKS IN A SPECIFIC SEQUENCE (PROGRAM PLAY) .....	15
BACK TO NORMAL PLAY WITHOUT CLEARING PROGRAM .....	16
CHECK THE PROGRAM .....	16
CHANGE PROGRAMMED TRACKS .....	16
CLEAR PROGRAMMED TRACKS .....	17
DISPLAY WINDOW BRIGHTNESS ADJUSTMENT .....	18
SWITCHING PLAYING TIME DISPLAY .....	18
<b>TROUBLE SHOOTING</b> .....	<b>19</b>
<b>SPECIFICATIONS</b> .....	<b>20</b>

# FOREWORD

This section must be read before any connection is made to the mains supply.

## EQUIPMENT MAINS WORKING SETTING

Your Marantz product has been prepared to comply with the household power and safety requirements that exist in your area. CC4001 can be powered by 230V AC only.

## COPYRIGHT

Recording and playback of any material may require consent. For further information refer to the following:

- Copyright Act 1956
- Dramatic and Musical Performers Act 1958
- Performers Protection Acts 1963 and 1972
- Any subsequent statutory enactments and orders

## A NOTE ABOUT RECYCLING



This product's packaging materials are recyclable and can be reused. This product and the accessories packed together are the applicable product to the WEEE directive except batteries.

Please dispose of any materials in accordance with your local recycling regulations. When discarding the unit, comply with your local rules or regulations.

Batteries should never be thrown away or incinerated but disposed of in accordance with your local regulations concerning chemical wastes.

# INTRODUCTION

## PRODUCT FEATURES

### • MP3 File and CD-R/RW Play Compatible

This unit can play back music CD format and CD-R/RW discs containing MP3 music data. For restrictions about MP3 files, please refer to "PLAYING MP3 FILES".

### • While Playing a disc, four other discs can be changed

### • Direct Disc Access Button

Direct Disc Access button is equipped both on the front panel of the unit and on the remote control unit for one-touch disc change to any of the 5 discs in the unit.

### • Various Play Modes such as Random, Program, Repeat, and AMS (Automatic Music Scan)

### • Headphone Jack with Volume

### • RS-232C Control Port and IR Flasher Input

RS-232C port which supports both unit control and operating status transmission is equipped to enable central control with custom installation. Also, Flasher input is equipped to realize wired control when you cannot use remote control due to the installation on the rack, etc.

### • 5 Sets of Built-In Remote Control Codes

Because there are 5 sets of built-in remote control code signals for between the unit and remote control unit, up to 5 units installed in the same place can be remotely controlled independently.

### • Aluminum Front Panel

Hairline finish aluminum front panel is used for quality look.

## APPLICABLE DISCS TO THE UNIT

### Audio CD (CDDA)



Audio CDs contains music tracks only.

### CD-R



### CD-RW



## PLAYING CD-R/CD-RW DISCS

This unit can play back the CD-RW (ReWritable) discs as well as ordinary Audio CD and CD-R (Recordable) discs.

- This unit can play back music CD format and CD-R/CD-RW discs which contain MP3 music data. However, some discs may have problems such as unable to play, noise or sound distortion.

\*For details, please read the instruction manual provided with a CD recorder.

- The CD-R and CD-RW discs should contain properly-recorded TOC information so that they can be played back. In CD recorders, the task of writing TOC information is referred to as finalizing the disc. Discs that are not finalized cannot be properly recognized as an Audio CD and played back by regular CD players and Super Audio CD players. For details, please read the instruction manual provided with a CD recorder.

\*TOC stands for Table Of Contents and contains information such as the total number of tracks and total playing time of the disc.

- This unit can play only the discs recorded in the CD-DA format designed for music reproduction. Do not attempt to play a disc containing other data, such as a CD-ROM for PCs, on this unit.
- As the playback of a CD-RW disc necessitates partial change of the player setup, it may take longer time for reading the TOC information than when an Audio CD or CD-R disc is played.

## PLAYING MP3 FILES

There are many sites on the Internet from which you can download music files in MP3 format. These files can be downloaded following the instructions on the site and stored on CD-R/RW discs which can then be played on the this unit.

The music on commercially available music CDs can be converted into MP3 files on a computer using MP3 encoding programs. When this is done, the data is reduced to approximately 1/10 the original size. This MP3 data can then be stored on a CD-R/RW disc, allowing you to create a single 12 cm CD-R/RW disc containing about 10 times more music than a normal music CD, that is some 100 tracks or more (\*).

\* This is an approximately value for MP3 files of tracks about 5 minutes long converted at a standard bit rate (128 kbps) and stored on a CD-R/RW disc with a capacity of 650 MB.

\* According to copyright law, use of recorded material other than for personal listening etc. without permission from the copyright owner is prohibited.

### NOTES:

This unit is compatible with the MP3 file specifications shown in the table below.

Playback of MP3 files based on specifications other than those shown in the table below cannot be guaranteed.

File type	Extension ".MP3 (.mp3)"
Writing program's format	ISO9660 Level 1
	ISO9660 Level 2
Number of folders that can be recognized (per disc)	maximum99
Number of tracks that (per folder)	maximum255
can be recognized (per disc)	maximum999
Bit rate	Constant bitrate (32kbps-320kbps)
	Variable bitrate
Sampling frequency	8 kHz (MPEG2.5 audio layer 3)
	11.025 kHz (MPEG2.5 audio layer 3)
	12 kHz (MPEG2.5 audio layer 3)
	16 kHz (MPEG2 audio layer 3)
	22.05 kHz (MPEG2 audio layer 3)
	24 kHz (MPEG2 audio layer 3)
	32 kHz (MPEG1 audio layer 3)
	44.1 kHz (MPEG1 audio layer 3)
48 kHz (MPEG1 audio layer 3)	

- Generally speaking, the higher the MP3 file's bit rate, the better the sound quality. With this unit it is recommended to use MP3 files written with a bit rate of 128 kbps or greater.
- This unit is compatible with variable bit rate. (In variable bit rate, time display may not be appeared properly.)
- The writing program may change the positions of the folders and files when writing the MP3 files on the CD-R/RW disc, so the files may not be played in the expected order.
- Make sure to give MP3 files the extension ".MP3 (.mp3)". Files with extensions other than ".MP3 (.mp3)" or without extensions cannot be played. (On Macintosh computers, MP3 files can be played by adding the extension ".MP3 (.mp3)" after the file name consisting of a maximum of 8 Roman capital letters and/or numerals when recording them on CD-R/RW discs.)
- Files other than those with the extension ".MP3 (.mp3)" are not counted.
- It may not be possible to play some CD-R/RW discs due to dirt, scratches or the disc's properties.
- Do not apply seals or tape to the label or signal side of CDs or CD-R/RW discs. The glue could get on the disc surface, making the disc get stuck inside the set.
- This unit is multi-session compatible. Only first music CDs can be played if the first session is a music CD, and all the MP3 files can be played if the first session consists of MP3 files.
- This unit is mixed-audio compatible. If the first session consists of MP3 files and mixed up with music and MP3 files, only the MP3 files can be played.
- This unit is not compatible with packet write programs.
- This unit is not compatible with play lists.
- This unit is not compatible with ID3-Tag.
- This unit cannot display the total time for discs recorded in MP3 format.

# BEFORE USING


## NOTES FOR REMOVING SHIPPING SCREWS

At the bottom of the player there are two red shipping screws for use when the player is transported. Before using the player, turn these screws counterclockwise and remove them.

If the shipping screws are still in place and the power is turned on, unplug the power cord from the power outlet and remove the shipping screws.

Retain these screws as they will be needed when the player is transported.

Before transporting the player, take out the discs, close the disc tray, set to standby mode and unplug the power cord from the power outlet. Then install the shipping screws by turning them clockwise. Be sure to fasten them securely.

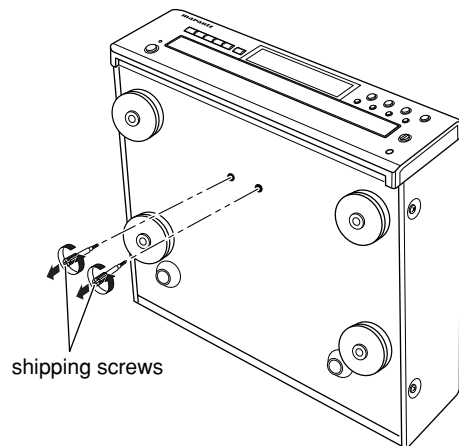


## NOTES ABOUT THE DISCS

\* **Handle the discs carefully so as not to scratch their surfaces.**

\* **Keep the surfaces of the discs clean at all times.**


When cleaning the surfaces of discs, always be sure to use the special cleaner and wipe the surfaces in the directions shown in the figure below.

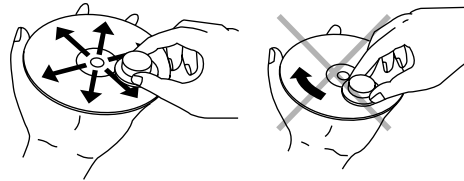

- Wipe the surface radially from the center.
- Do not wipe the surface in the circumferential direction.


\* **Do not attach pieces of paper or stickers to the label surfaces of the discs.**

When a disc has a piece of plastic tape or rental CD label with paste protruding from the edge or when a disc still bears traces of sticky tape or adhesive labels, do not attempt to play it. If such a disc is played on the CD player, you may find that you cannot remove it or that some other kind of malfunctioning may occur.

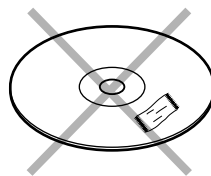

\* **Do not use discs which come in special shapes.**

Do not attempt to play heart-shaped or octagonal discs or discs with any other special shapes. You may find that you cannot remove them or that some other kind of malfunctioning may occur in the player.

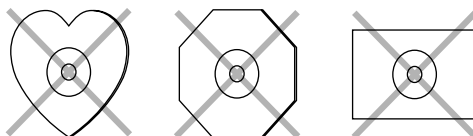

\* **Use discs which satisfy the CD standards such as those with the “CD logo” or “Compact Disc Digital Audio” mark on their disc label surfaces.**

No guarantees are made for playback if discs which do not satisfy the appropriate CD standards are used.

Similarly, no guarantees are made for their sound quality even if it is possible to play such discs.

\* **To protect your discs from damage, avoid placing them in the following locations.**

- Where they will be exposed to direct sunlight or where they will be close to a heater or other heat-radiating appliance
- Where the humidity level is high or it is very dusty
- Near a window or other such location where they may be exposed to rain


\* **Get into the habit of putting the discs back in their cases after use.**

## INAPPROPRIATE PLACES FOR INSTALLATION

To keep your player in perfect working order for the longest possible time, avoid installing the player in the following locations.

- Wherever it will be exposed to direct sunlight
- Wherever it will be close to a heater or other heat-radiating appliance
- Wherever the humidity is high or ventilation is poor
- Wherever it is very dusty
- Wherever it will be subject to vibration
- On top of a rickety stand or in an unstable location which is tilted at an angle
- In an audio rack with little space at the top and bottom or other location where the heat dissipation will be obstructed
- To ensure proper heat dissipation, install the player while leaving clearances between the player and wall or other components, as shown in the figure below.
- On top of an amplifier or other component which dissipates a great deal of heat

\* **The quality of the laser and other components can be harmed if the player is placed directly on top of an amplifier or other device which generates heat.**

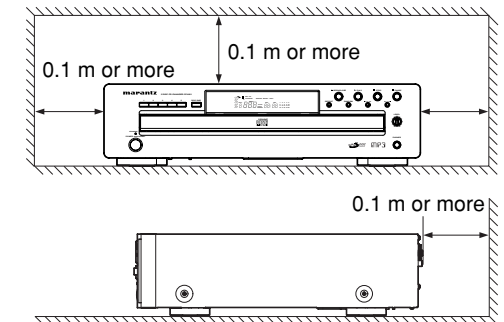

■ **Do not place objects on top**

- Refrain from placing any objects on top of the player.

## ■ Cautions on handling power cord

- Do not touch the power cord with wet hands.
- When disconnecting the power cord, always make sure that you take hold of the plug. Yanking out or bending the cord can damage it and/or cause electric shocks or a fire.
- Get into the habit of disconnecting the power plug before leaving home.

## ■ Do not attempt repairs yourself

- Refrain from lubricating the player: doing so can cause malfunctioning.
- Only qualified engineers with specialized expertise are authorized to repair the pick-up and parts inside the player.

## PRECAUTIONS

- In winter, droplets of water form on the insides of the windows of a heated room: this is called condensation. This player uses an optical lens, so the condensation may form in the following cases.
  - In a room immediately after the heating has been turned on
  - In a room where the humidity level is high
  - When the player has been suddenly brought from a cold location into a warm room

Since, in cases like this, the track numbers may not be read and the player is prevented from operating properly, wait about 30 minutes, and then operate the player.
- This player may cause interference on a tuner or TV set. If this is the case, place it further away from the tuner or TV set.
- Compact discs have much less noise than analog records and hardly any noise is heard before play starts. Bear in mind, therefore, that if the volume control on the amplifier is set too high, you will risk damaging other audio components.
- Do not use commercially available lens cleaners, as they may damage the lens.

## USING REMOTE CONTROL UNIT

### ■ Cautions on handling batteries


Misuse of the batteries can result in electrolyte leakage, rupturing, corrosion, etc. Bear in mind the following points when using batteries.

- Remove the batteries from the remote control unit if the unit is not going to be used for a prolonged period (a month or more).
- Do not use an old battery together with a new one.
- Insert the batteries while ensuring that their  $\oplus$  and  $\ominus$  poles are properly aligned with the corresponding markings on the remote control unit.
- Batteries with the same shape may have different voltages. Do not use different types of batteries together.
- If electrolyte has leaked, thoroughly wipe the inside of the battery compartment, and then insert new batteries.
- When batteries which are no longer required are to be discarded, follow the directions (regulations) laid down by the local authorities in the area concerned for their disposal.


## LOADING BATTERIES

Batteries in this remote control unit have a life of approximately 1 year under normal operating conditions. If the remote control unit is not going to be used for an extended period of time, remove the batteries. Also, if you notice that the batteries are starting to run down, replace them as soon as possible.


- ① Remove the battery cover.

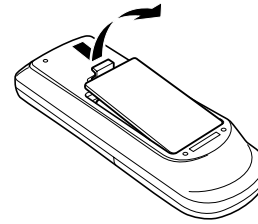

- ② Insert the batteries with correct  $\oplus/\ominus$  orientation.

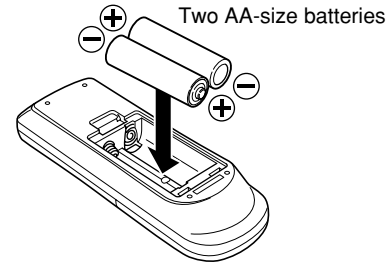

- ③ Close the battery cover until it clicks shut.

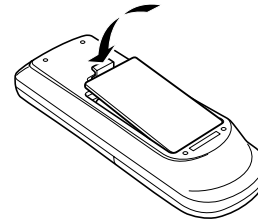


## ■ Remote control

Operate the remote control unit (RC4001CC) within a distance of approx. 5 m from the infrared signal reception window (remote sensor) on the front of the CD Changer.

Remote control operation may not be possible if the remote control unit's transmitter is not pointing in the direction of the remote sensor or if there is an obstruction between the transmitter and the remote sensor.

Remote control operating range

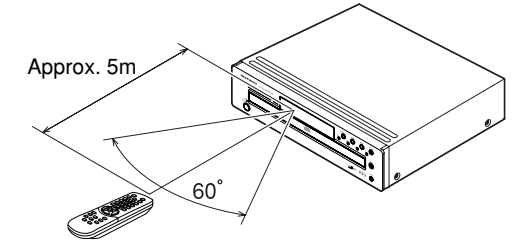


Remote control unit (RC4001CC)



# NAMES AND FUNCTIONS

## FRONT PANEL

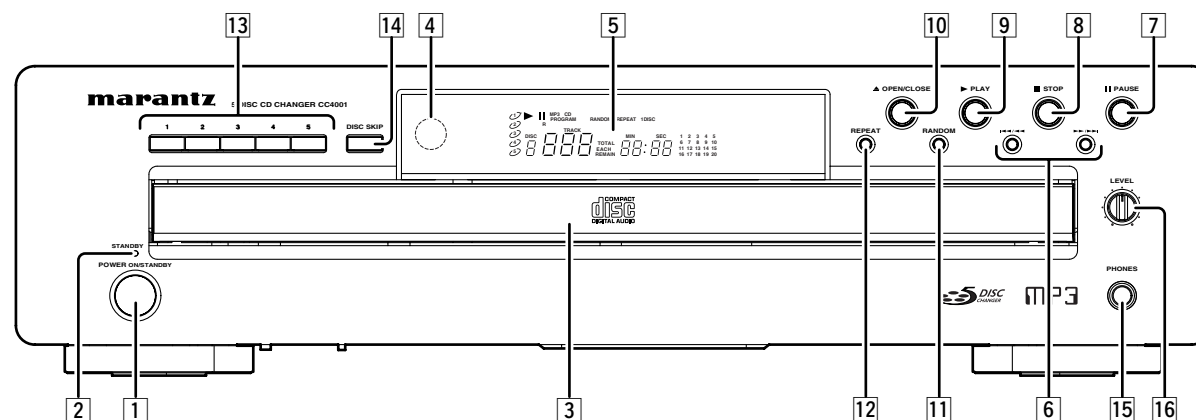

### 1 POWER ON/STANDBY button

When it is pressed, the display window lights up, and the power comes on. When it is pressed again, the display window is extinguished, and goes into the standby status.

### 2 STANDBY indicator

Lights up in red color while standby status.

### 3 Disc tray

The disc to be played is placed on the tray.

#### Caution

Close the tray by pressing the operation button, not by pressing it in with your hand.

### 4 Remote sensor

The infrared control signal emitted from the remote control unit is sensed here.

### 5 Display window

This screen shows the operating status.

### 6 <<<< >>>> (Track Skip/Search buttons)

#### (Track Skip/Search buttons)

These buttons can be used as both track skip and track search buttons. (on the main unit only.)

**>>>>** : Each time this button is pressed, the track being played is skipped forward. When this button is continuously held down, tracks are searched forward (Fast Forward).

**<<<<** : When this button is pressed, the unit goes back to the beginning of the current track. If the button is pressed more times, the track being played is skipped back. When this button is continuously held down, tracks are searched backward (Fast Rewind).

In program play, Fast Forward and Fast Rewind can be done in the playing track only.

### 7 II PAUSE button

Press this button to pause playback. If pressed again, the unit returns to playback.

### 8 ■ STOP button

Press this button to stop playback. Also this button is used to clear programs.

### 9 ► PLAY button

Press this button to start playback.

### 10 ▲ OPEN/CLOSE button

Press this button to open the tray. Put on a disc with label side up. Press the button again to close the tray.

#### Caution

Do not press the disc tray in by hand. This may cause malfunction.

### 11 RANDOM button

Playback tracks randomly. (See page 14)

### 12 REPEAT button

Playback a track or disc repeatedly. Use this button also to switch to the Repeat mode (One Track Repeat, One Disc Repeat, and All Disc Repeat). (See page 15)

### 13 1-5 (Disc Select button)

Choose a disc to play.

### 14 DISC SKIP button

When this button is pressed while multiple discs are placed on the tray, a disc to play can be chosen with rotating the tray clockwise. When this button is pressed while the tray is open, the turn table in the tray rotates so that the disc can be replaced.

### 15 PHONES (headphones) jack

The headphones are connected to this jack.

#### Caution


Use headphones with a standard plug.

### 16 LEVEL (headphone volume) control

This control is used to adjust the headphone volume. Turn it clockwise to increase the headphone volume.

## NAMES AND FUNCTIONS

### DISPLAY WINDOW

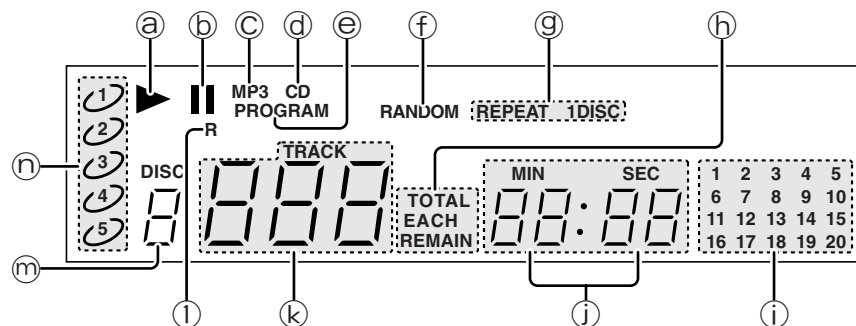

**a ▶ (Play) indicator**

This lights during disc play.

**b || (Pause) indicator**

This lights when play is paused.

**c MP3 indicator**

This lights during MP3 play.

**d CD indicator**

This lights during Audio CD play.

**e PROGRAM indicator**

This lights during program play.

**f RANDOM indicator**

This lights during random play.

**g REPEAT indicator**

This lights during repeat play.

**h REMAIN indicator**

This lights while displaying track and disc remaining times.

**i 1-20 (track number display)**

Displays the number of tracks recorded in a disc, the number of remaining tracks, and the number of tracks programmed with program play.

- Cannot display more than 20 tracks.

**j Time indicator**

Displays the time.

**k Track Number indicator**

Displays the track number chosen.

**l Remote Control indicator**

This lights during a remote control unit is operated.

**m Disc Number indicator**


Displays the disc number chosen.

**n Disc indicator**

Displays the disc numbers on the tray.

## NAMES AND FUNCTIONS

### REAR PANEL

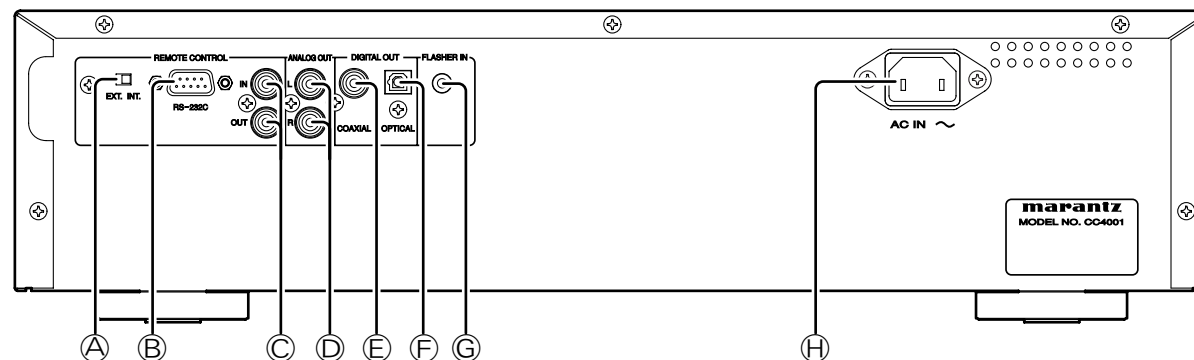

#### Ⓐ EXT./INT. (External/Internal switch)

When this unit is used as a standalone component, set this switch to the INT. side. When it is used connected to external component by a remote connecting cable and to audio component with a remote sensor that supports remote controls by Marantz, set this switch to the EXT. side.

#### Caution

If the unit is used as standalone and the switch is set to EXT. position, remote control unit cannot be used.

#### Ⓑ RS-232C External Control Port

A control port for professionals (custom installers).

#### Ⓒ REMOTE CONTROL IN/OUT (input and output) connectors

When the remote control connectors on the unit and on a Marantz AV component are connected using the accessory remote connecting cables, the components can be operated as a system by remote control.

- When connecting to a component which is equipped with remote control connectors, the unit's REMOTE CONTROL IN connector must always be connected to the REMOTE CONTROL OUT connector on the other component to be connected.
- When connecting a component which is not equipped with an infrared remote sensor, this component must always be connected to the unit's REMOTE CONTROL OUT connector.

#### Ⓓ ANALOG OUTPUT connectors

These are the output jacks of the analog audio signals. The supplied analog connection cord can be connected to the CD, AUX, or other connectors on an amplifier. Be sure to connect the L and R channels correctly to the corresponding jacks.

#### Caution

Never connect to the PHONO connector on the amplifier.

#### Ⓔ DIGITAL AUDIO OUT COAXIAL

This jack is to be connected with a recording device, amplifier, D/A converter, etc that has coaxial digital input using an optional coaxial digital cable.

#### Ⓕ DIGITAL AUDIO OUT OPTICAL

This jack is to be connected with a recording device, amplifier, D/A converter, etc that has optical digital input using an optional square type optical digital cable.


#### Ⓖ Flasher Input jack

A control port for professionals (custom installers). This is used to control the unit from other rooms using keypad, etc.

#### Ⓗ AC Inlet

Connect the supplied power cord to this jack and a household AC power outlet.

## REMOTE CONTROLLER

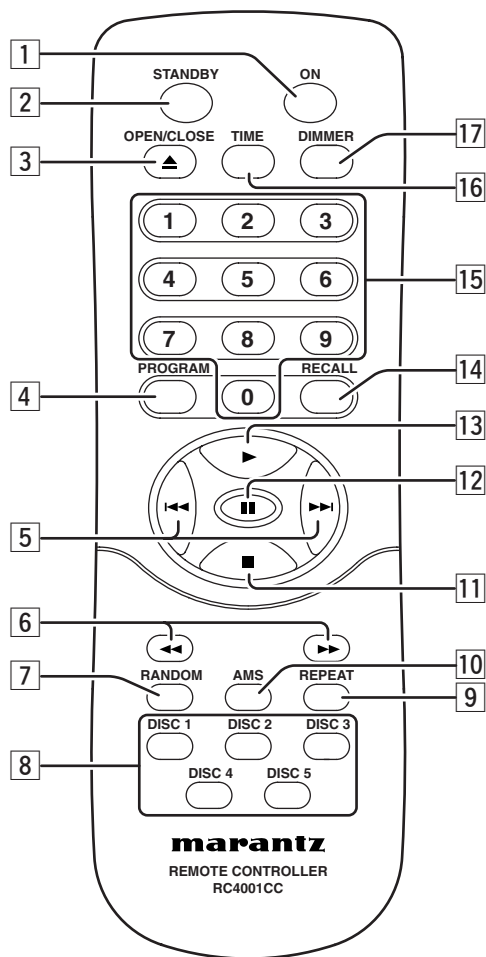

### 1 ON button

When this button is pressed while the unit is in standby status, the power of the unit is turned on.

### 2 STANDBY button

When this button is pressed while the power is on, the unit goes into the standby status.

### 3 ▲ OPEN/CLOSE button

Press this button to open the tray. Put on a disc with label side up. Press the button again to close the tray.

### Caution

Do not press the disc tray in by hand. This may cause malfunction.

### 4 PROGRAM button

This button is for program play. (See page 15)

### 5 ◀▶ (Track Skip buttons)

◀▶: When this button is pressed, the unit goes back to the beginning of the current track. If the button is pressed more times, the track being played is skipped back.

▶▶: Each time this button is pressed, the track being played is skipped forward.

- Search buttons are provided separately for the remote control unit. Use 6 Search buttons for search function.

### 6 ◀▶, ▶▶ (Search buttons)

◀▶: While this button is pressed during playback, the track is searched backward.

▶▶: While this button is pressed during playback, the track is searched forward.

### 7 RANDOM button

Playback tracks randomly. (See page 14)

### 8 DISC1-DISC5 (Disc Select button)

Choose a disc to play.

### 9 REPEAT button

Playback a track or disc repeatedly. Use this button also to switch to the Repeat mode (One Track Repeat, One Disc Repeat, and All Disc Repeat). (See page 15)

### 10 AMS (Automatic Music Scan button)

Use this button for AMS play. (See page 13)

### 11 ■ STOP button

Press this button to stop playback. Also this button is used to clear programs.

### 12 || PAUSE button

Press this button to pause playback. If pressed again, the unit returns to playback.

### 13 ▶▶ PLAY button

Press this button to start playback.

### 14 RECALL button

Use this button to check the programmed tracks while programming or stopped programming. (See page 16)

### 15 0-9 (Numerical buttons)

Use these buttons to choose tracks and to input track number in each mode.

### 16 TIME button

This button is used to switch the time display. Each time it is pressed, the displayed time cycles from "track elapsed time" → "track remaining time" → "total remaining time" → "track elapsed time". (See page 18)

### 17 DIMMER button


This button is used to adjust the brightness of the display window.

# NAMES AND FUNCTIONS

## REMOTE CONTROL CODE SETTING

- The unit and remote control unit have five sets of built-in remote control codes for each. These codes enable up to five CC4001s installed in the same place to be controlled independently.
- To use multiple units at the same time, set the second, third, fourth, and fifth CC4001s and their remote control units' remote control codes.
- To set the codes, follow the procedure below to control only selected unit is remotely controlled.
- At the factory, the unit and remote control unit were set to CODE1.

### ■ Remote Control Unit Setting

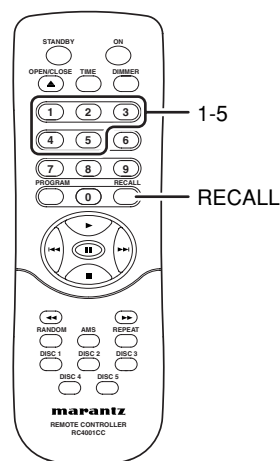


- To set CODE2  
Press **RECALL** button and Numerical button **2** on the remote control unit at a time for five seconds or more.
- To set CODE3  
Press **RECALL** button and Numerical button **3** on the remote control unit at a time for five seconds or more.
- To set CODE4  
Press **RECALL** button and Numerical button **4** on the remote control unit at a time for five seconds or more.
- To set CODE5  
Press **RECALL** button and Numerical button **5** on the remote control unit at a time for five seconds or more.

### Caution

To reset the remote control to CODE1, press **RECALL** button and Numerical button **1** on the remote control unit at the same time for five seconds or more.


### ■ CC4001 Setting

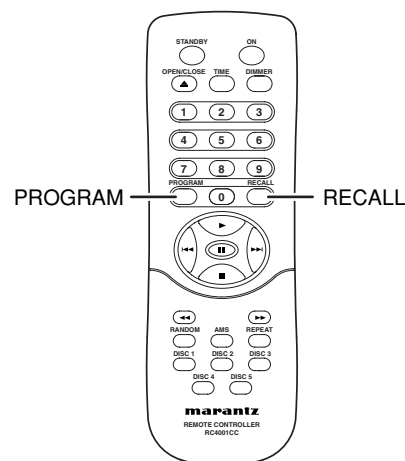


- To synchronize the remote control code of the CC4001 with the remote control unit, press the **PROGRAM** and **RECALL** buttons on the remote control unit together.
- The remote control code set is displayed on the display window for two seconds, and the setting is completed.

### Display Examples

 
- When the remote control unit is set to CODE1



 
- When the remote control unit is set to CODE2



 
- When the remote control unit is set to CODE3



 - When the remote control unit is set to CODE4



 - When the remote control unit is set to CODE5




# CONNECTIONS

Depending on your amplifier/receiver/Stereo System, there are various ways to connect to this player. For correct connection please refer to instruction manuals of stereo system to be connected.

## Caution

Do not connect audio output from this unit to PHONO input of your audio system.


1. Connect the audio cable ① to this unit's Analog Audio outputs and the stereo inputs on your amplifier, receiver or stereo system.
2. Connect the optical cable ②, coaxial cable ③ to the digital input on your AV amplifier, D/A converter, CD Recorder, etc.

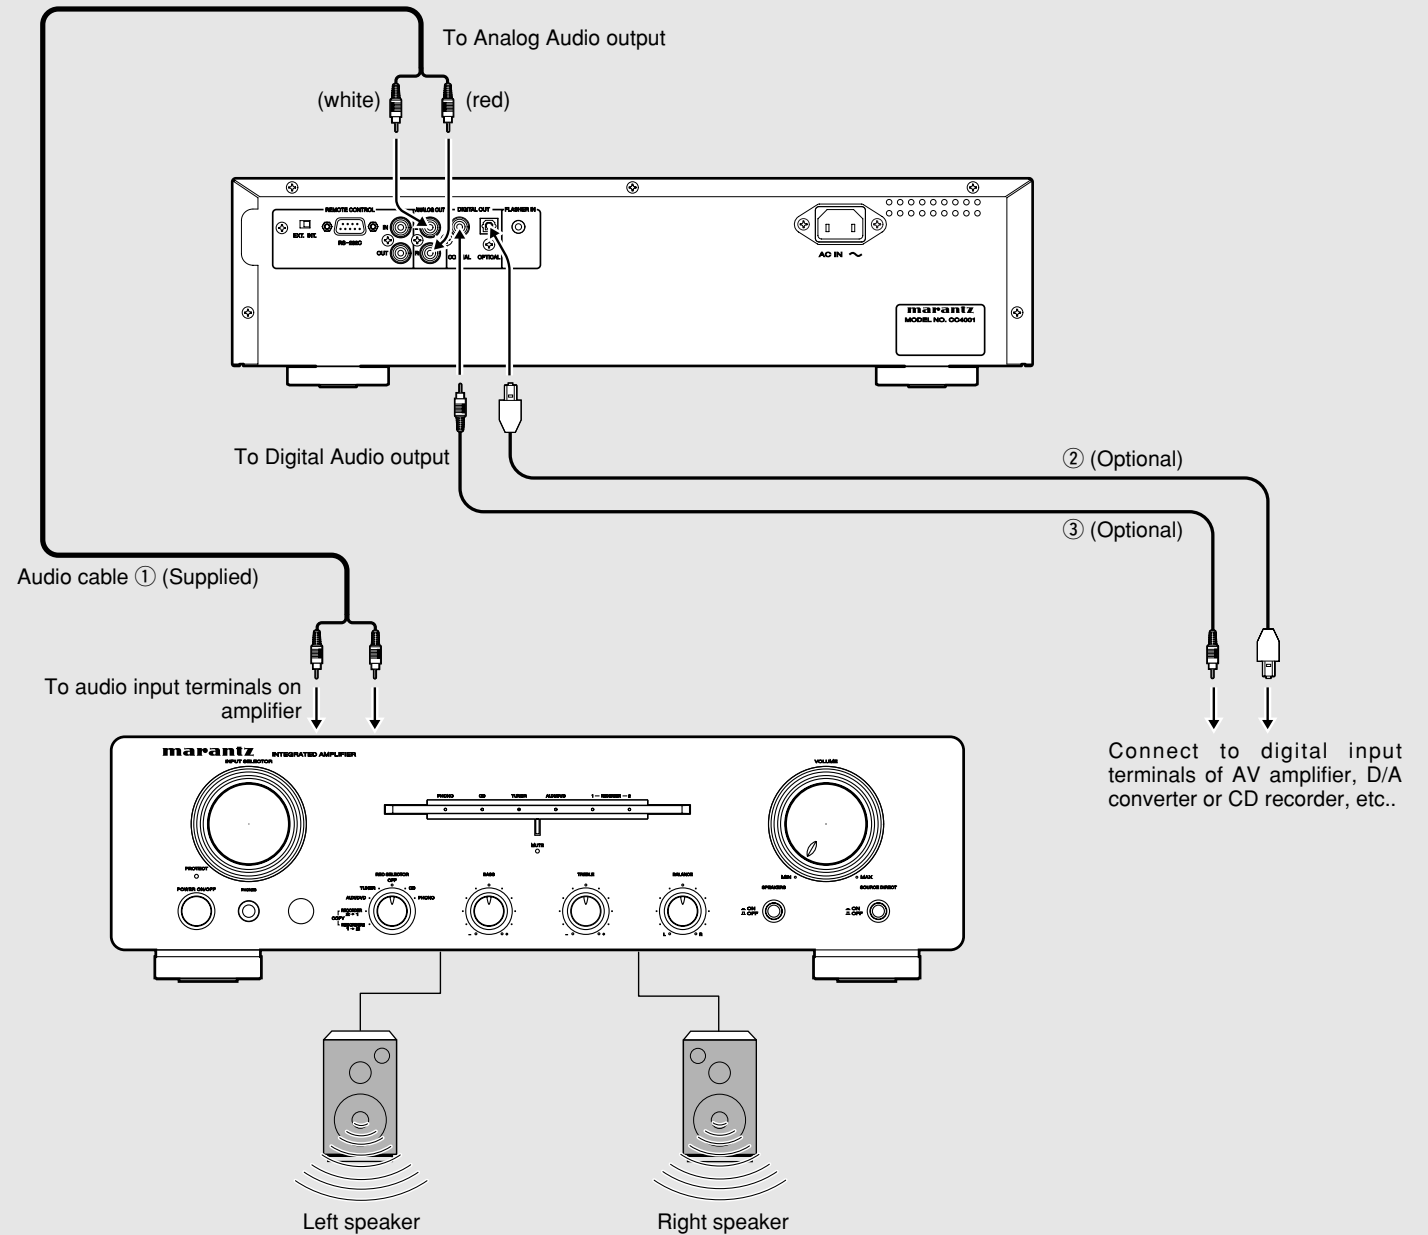

# OPERATION

## CONNECTING THE POWER SUPPLY AND TURNING ON

1. Plug the power cable into AC Power Input jack on the rear panel.

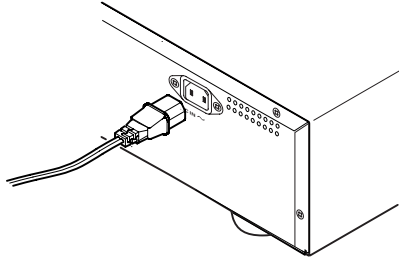



2. Turn on the power switch of the audio unit (amplifier, etc.) that is connected with this unit. Set the selector on the connected unit to this unit.

3. Plug the power cable into an AC outlet.


4. Turn the power on by pressing **POWER ON/STANDBY** button on the unit or **ON** button on the remote control unit.

- The unit repeats switching from ON and Standby every time the **POWER ON/STANDBY** button is pressed.

## NORMAL PLAYBACK

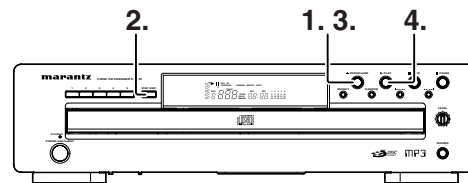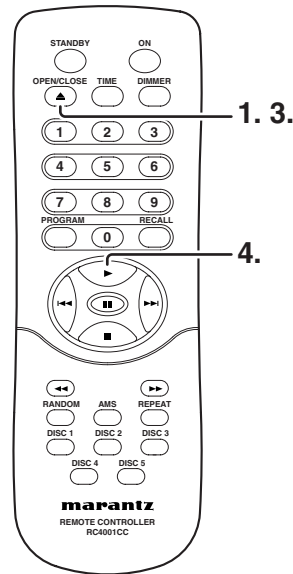

1. Press **▲ OPEN/CLOSE** button on the unit or remote control unit to open the disc tray. Hold the edge of the disc and place on the tray.

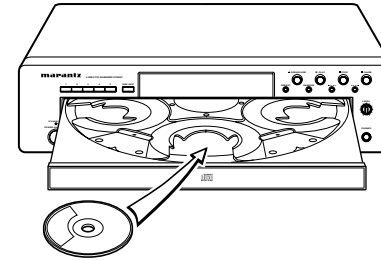

- Do not touch the back side (shiny side) of a CD.
- To play a single CD (8 cm), place the disc with the indentation at the center of the tray.

2. To set multiple discs, press **DISC SKIP** button on the main unit. With the turn table on the tray rotating, set the disc one by one.

3. Press **▲ OPEN/CLOSE** button on the main unit or remote control unit to close the disc tray.

4. When **▶ PLAY** button on the main unit or remote control unit is pressed, playback starts from the first track.


- At this time, "▶" lights up on the display window.
- All discs are played (example)

To start playback from the disc 2

Disc 2/first track →.....→ last track  
 →Disc 3/first track →.....→ last track  
 →Disc 4/first track →.....→ last track  
 →Disc 5/first track →.....→ last track  
 →Disc 1/first track →.....→ last track  
 → Stop



## Caution

- Place a disc on each tray correctly. If not, the unit cannot be operated and discs may be damaged.
- Be careful not to have your finger caught when you close the tray.  
If the finger is caught, press **▲ OPEN/CLOSE** button to open the tray.
- Do not insert a disc in the way shown as the arrow.

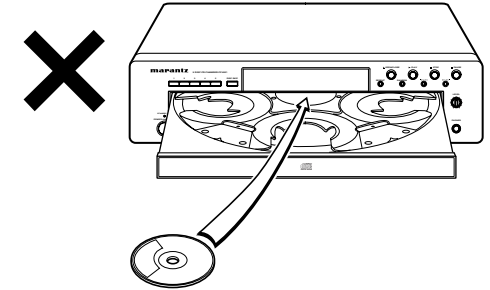

- Do not place any other media other than a disc on the tray.
- Do not pile up discs on a tray. Do not place more than two disc on a tray.
- Do not force to open/close the tray. Always use **▲ OPEN/CLOSE** button to open/close the tray.
- While the tray is open and rotating, do not touch or stop the tray with fingers.



## PAUSE PLAYBACK

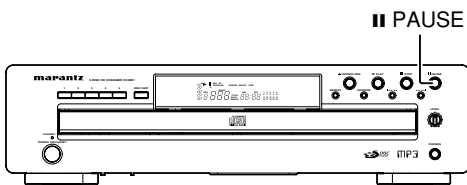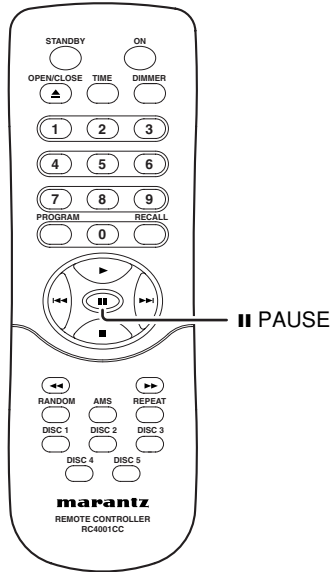


Pressing **|| PAUSE** button on the main unit or remote control unit pauses the play.

- At this time, "||" lights up on the display window.
- To restart the playback, press **▶ PLAY** button on the main unit or remote control unit.
- Pressing **|| PAUSE** button on the main unit or remote control unit again while pausing restarts the playback.

## STOP PLAYBACK

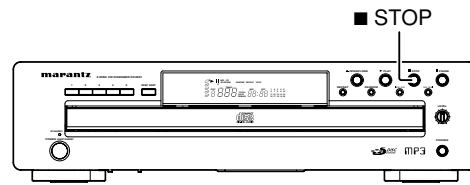
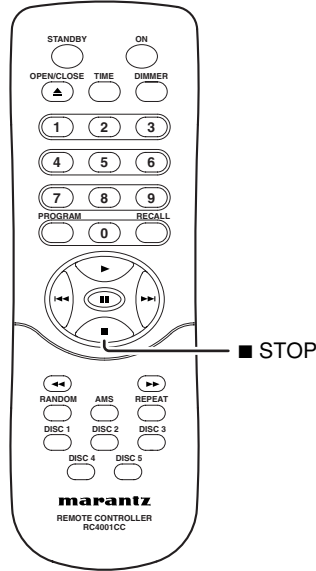


Pressing **■ STOP** button on the main unit or remote control unit stops the playback.

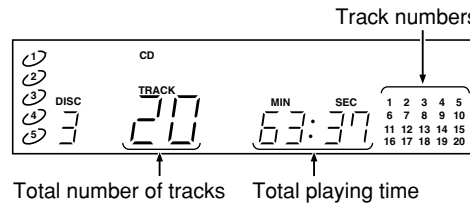


## CHANGE DISCS WHILE PLAYING

You can change other discs not being played while playing a disc.

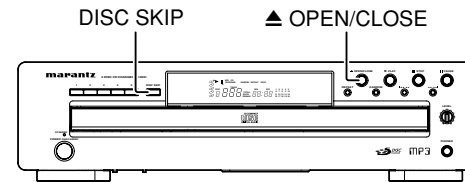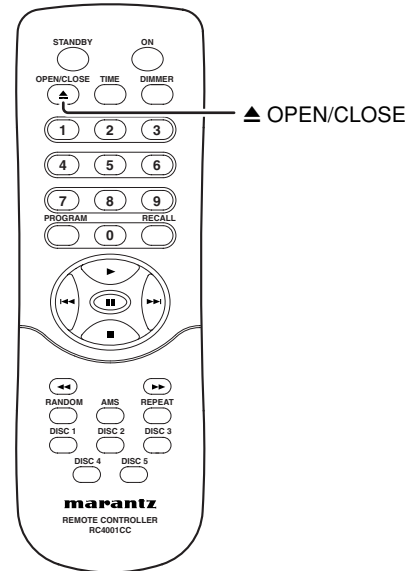



- While disc 1 is playing, press **▲ OPEN/CLOSE** button to open the tray and change disc 3, 4, and 5.
- To change disc 2, press **DISC SKIP** button to rotate the turn table on the tray, then change the disc.
- After changing the disc, make sure to press **▲ OPEN/CLOSE** button to close the disc tray.

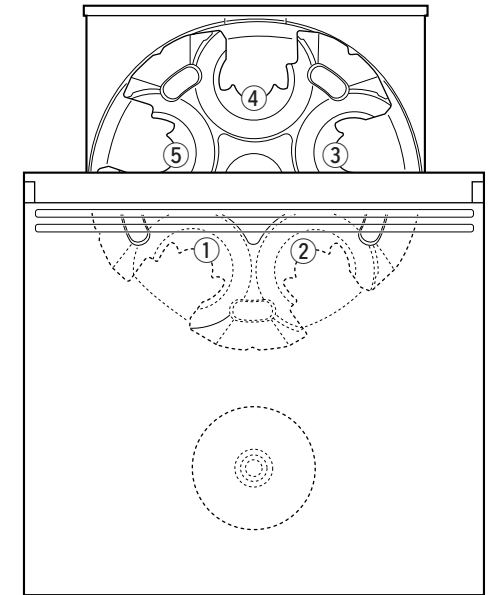

- ①...Disc 1 tray
- ②...Disc 2 tray
- ③...Disc 3 tray
- ④...Disc 4 tray
- ⑤...Disc 5 tray



## PLAYING YOUR FAVORITE TRACKS OF A DISC

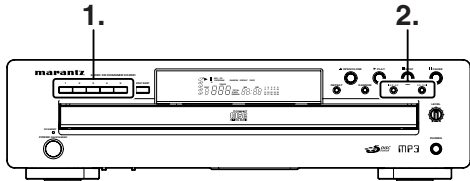
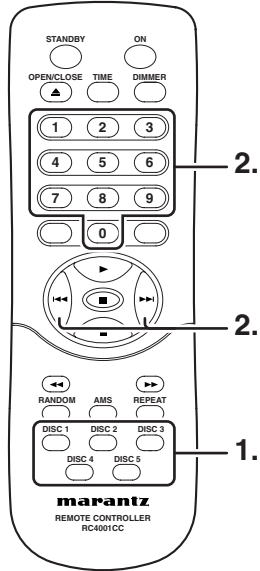


1. Press **DISC1-5** button on the main unit or remote control unit to choose the disc to play.
  - At this time the first track of the chosen disc is played.
2. Press **1-9** button on the main unit, or **1-9** button on the remote control unit to choose the track number to play.
 

(example)

  - To choose the 9th track:  
Press **9**.
  - To choose the 23rd track:  
Press **2**, and within 2 seconds press **3**.
  - To choose the 123rd track:  
Press **1**, within 2 seconds press **2**, and within 2 seconds press **3**.

## PLAYING YOUR FAVORITE PARTS OF A TRACK

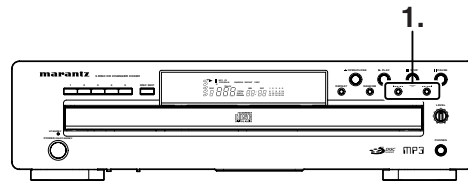
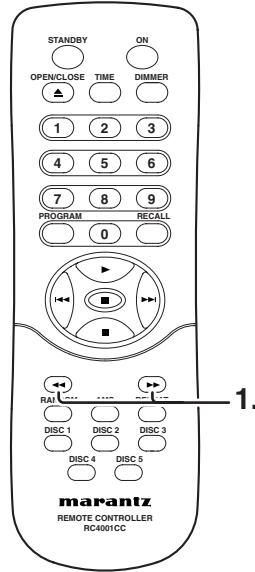


1. Hold **◀▶** button on the remote control unit or **◀▶** button on the main unit while playing to search the part to play.
2. Release the button when you have found the part.


## SEARCH YOUR FAVORITE TRACKS (AMS (AUTOMATIC MUSIC SCAN)PLAY)

AMS (Automatic Music Scan) play is a function to play 10 seconds of each track's beginning one by one. It is a useful function when you need to search a track to play. There are 2 modes for the AMS play:

- **All Track AMS**  
AMS plays all tracks of all discs on the disc tray.
- **All Disc AMS**  
Starts AMS play the first track of all discs on the disc tray one by one.

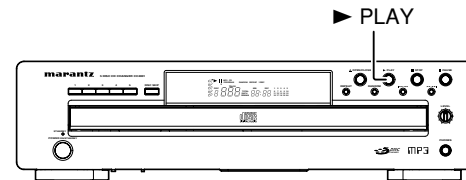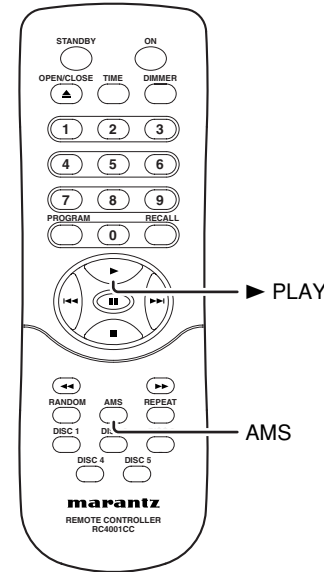

 
- Each time **AMS** button on the remote control is pressed, the AMS play mode is switched as follows:



## ■ All Track AMS Play

Press **AMS** button on the remote control unit once to start AMS play all tracks automatically.

- At this time, "▶" and "TRACK" blinks.

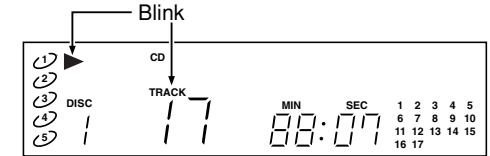

### • While stopped

When All Track AMS is set while the unit is stopped, every track of all discs is played as AMS play from the first track of the chosen disc one by one.

(example)

If All Track AMS is set while disc 2 is chosen:

- Disc 2/first track →.....→ last track
- Disc 3/first track →.....→ last track
- Disc 4/first track →.....→ last track
- Disc 5/first track →.....→ last track
- Disc 1/first track →.....→ last track
- Stop

### • While playing

When All Track AMS is set while the unit is playing, every track is played as AMS play from the playing track one by one.

(example)

If All Track AMS is set while track 3 of disc 3 is being played:

- Disc 3/third track →.....→ last track
- Disc 4/first track →.....→ last track
- Disc 5/first track →.....→ last track
- Disc 1/first track →.....→ last track
- Disc 2/first track →.....→ last track
- Stop


AMS play will not be applied for the tracks finished playing. (AMS play will not be applied for the first and second tracks of disc 3 in this example).

Press **▶ PLAY** button on the main unit or remote control unit when the track to play is found. Normal play will start from that track.

### ■ All Disc AMS Play

Press **AMS** button on the remote control twice to start AMS play all discs automatically.

- At this time, "▶" and "DISC" blinks.

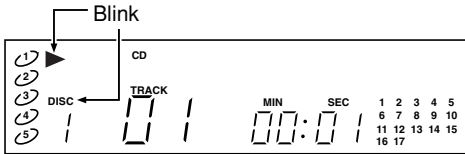

#### • While stopped

When All Disc AMS is set while the unit is stopped, every first track of all discs is played as AMS play from the first track of the chosen disc one by one.

(example)

If All Disc AMS is set while disc 1 is chosen:

- Disc 1/first track
- Disc 2/first track
- Disc 3/first track
- Disc 4/first track
- Disc 5/first track
- Stop

#### • While playing

When All Disc AMS is set while the unit is playing, every first track of all discs is played as AMS play from the next track of the playing track one by one.

(example)

If All Disc AMS is set while track 3 of disc 4 is being played:

- Disc 4/third track
- Disc 5/first track
- Disc 1/first track
- Disc 2/first track
- Disc 3/first track → Stop

### ■ Stop AMS Play

To stop the AMS play, press the **AMS** button on the remote control unit once or twice until the blinking "▶" lights up.



#### Caution

- Pressing **AMS** button while setting a program starts AMS play for the only tracks programmed.
- When **AMS** button is pressed while random play, starts AMS play according to the Random mode.
- Pressing **◀◀/▶▶**, **▶▶/▶▶** while AMS play moves the playing track back and forth. When **▶▶/▶▶** is pressed at the last track of the disc, it moves to the next disc. (except the last disc)
- When **AMS** button is pressed after playing a track for 10 seconds or more, AMS play is started from the next track.
- AMS setup cannot be started while the tray is open during playback.
- AMS playback is canceled if the tray is opened during AMS playback.


## PLAYING TRACKS IN A RANDOM SEQUENCE (RANDOM PLAY)

Random play is a function to play tracks in random sequence. There are 2 modes for the Random play:

- **One Disc Random**  
Random play the chosen disc only
- **All Disc Random**  
Random play all discs on the disc tray

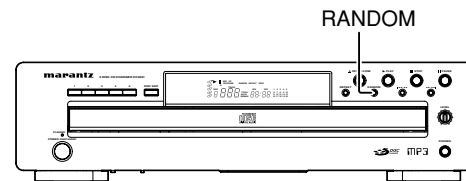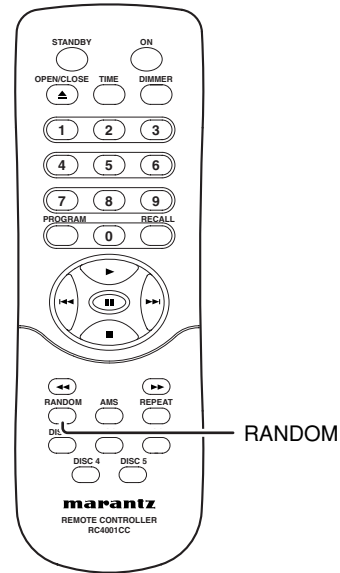

 
- Every time **RANDOM** button is pressed the Random mode changes as follows:



### ■ One Disc Random Play

When **RANDOM** button is pressed on the main unit or remote control unit once, starts the random play for one disc automatically.


- At this time, **RANDOM 1 DISC** lights up.
- Track is chosen from the chosen disc randomly and played.

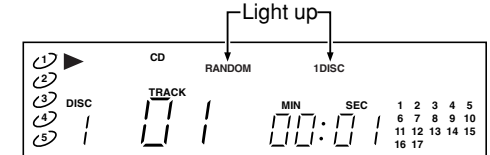

### ■ All Disc Random Play

When **RANDOM** button on the main unit or remote control unit is pressed twice, starts the random play for all discs automatically.

- At this time, "RANDOM DISC" lights up.
- A track is chosen from all discs and played.
- After playing the track, another track is chosen from all discs randomly and played.

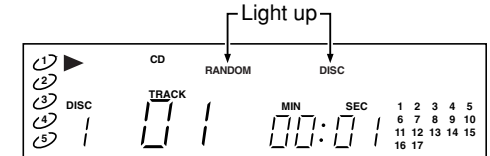

### ■ Stop Random Play

To stop random play, press **STOP** button on the main unit or the remote control unit. Or press **RANDOM** button on the main unit or on the remote control unit once or twice until "RANDOM" disappears.



#### Caution

- When **RANDOM** button is pressed while a program is being played, programmed tracks are played in random sequence.
- If **▲ OPEN/CLOSE** button is pressed during random playback and the tray is opened, random playback is canceled.
- Random playback cannot be started while the tray is open during playback.


## REPEAT PLAY

Repeat play is a function to automatically play repeatedly. There are 3 modes for the Repeat play:

- **One Track Repeat**  
Play the chosen track repeatedly.
- **One Disc Repeat**  
Play the chosen disc repeatedly.
- **All Disc Repeat**  
Repeat play all discs on the disc tray.

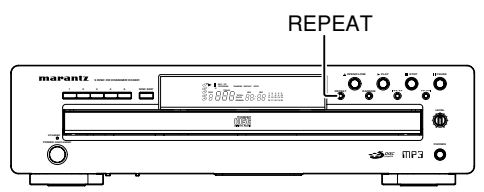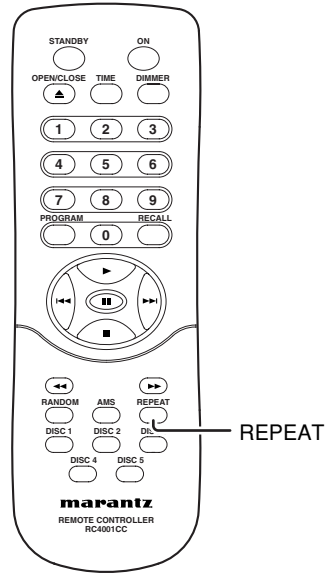

 
Every time **REPEAT** button is pressed the Repeat mode changes as follows:



### ■ One Track Repeat Play

After choosing a track to repeat, press **REPEAT** button on the main unit or remote control unit once to play the chosen track repeatedly.


- At this time, "REPEAT 1" lights up.

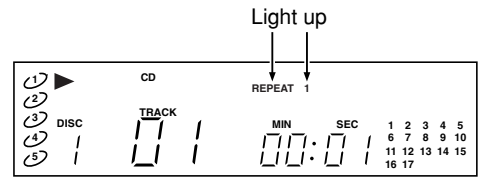

### ■ One Disc Repeat Play

After choosing a disc to repeat, press **REPEAT** button on the main unit or remote control unit twice to play the tracks of the chosen disc repeatedly.


- At this time, "REPEAT 1 DISC" lights up.

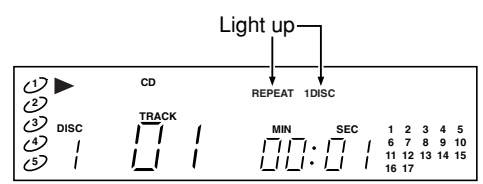

### ■ All Disc Repeat Play

When **REPEAT** button on the main unit or remote control unit is pressed three times, all discs are played repeatedly.

- At this time, "REPEAT 1 DISC" lights up.

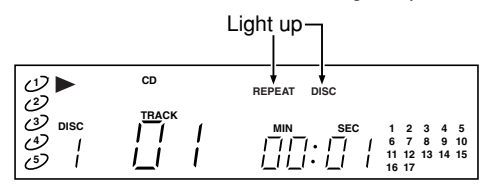

### ■ Stop Repeat Play



To stop repeat play, press ■ **STOP** button on the main unit or the remote control unit. Or press the **REPEAT** button on the main unit or on the remote control until "REPEAT" disappears.

### Caution

- If ▲ **OPEN/CLOSE** button is pressed during repeat playback and the disc tray is opened, repeat playback is canceled.
- Repeat playback cannot be set while the tray is open during playback.


## PLAYING TRACKS IN A SPECIFIC SEQUENCE (PROGRAM PLAY)

You can choose tracks or discs to play and program them in the order you want to listen. Up to 32 tracks can be registered for program play.

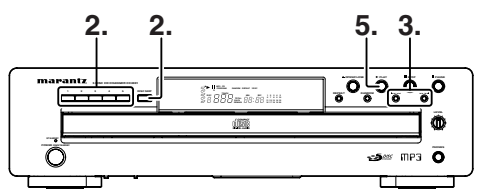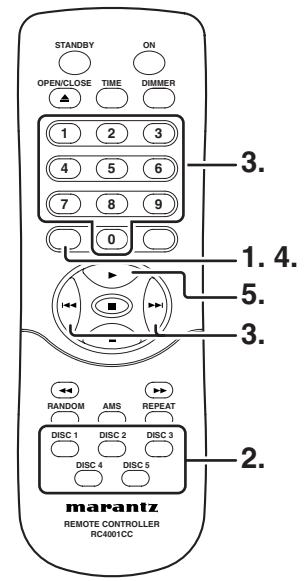


1. While the unit is stopped, press **PROGRAM** button on the remote control unit to switch to the Program mode.

- At this time, "PROGRAM" blinks up.

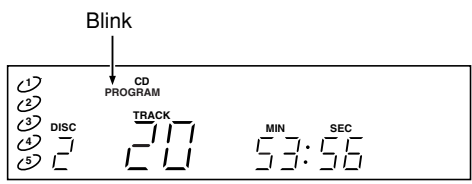


2. Press **DISC1-5** button on the main unit or remote control unit or **DISC SKIP** button on the main unit to choose a disc where the tracks to register are contained. In this example choose disc 2.

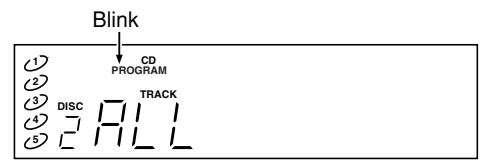

- At this state (**ALL** is displayed), if you press **PROGRAM** button without choosing track, all tracks in the disc are registered.


3. Press ◀◀◀◀, ▶▶▶▶ on the main unit, or ◀◀▶▶▶▶ or Numerical button on the remote control unit to choose the track number to register. In this example choose track 7.

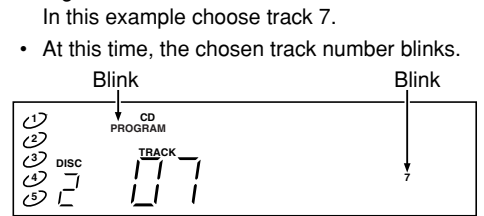


- Here, if ■ **STOP** button on the main unit or remote control unit is pressed, the program is cancelled.


4. Press **PROGRAM** button on the remote control unit to register the chosen track number.

- At this time, **PROGRAM** and track number displays change from blinking to light.

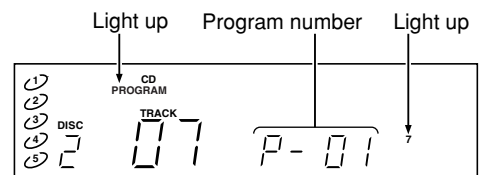

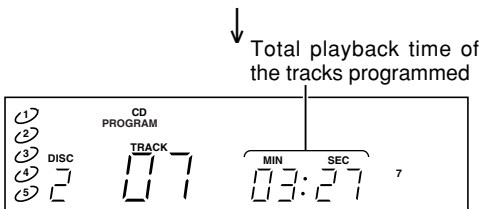

- The programmed track numbers and total playback time of the programmed tracks are repeatedly displayed for approx. 15 seconds.
- When the track number is chosen with pressing the Numerical button on the remote control unit directly, the chosen track is registered automatically; **PROGRAM** button does not need to be pressed.

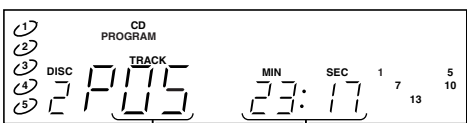



Total number of programs      Total playback time of the tracks programmed

- If the total playback time of the tracks programmed exceeds 99 minutes 59 seconds, "-- : --" is displayed.
- When a program is setup with an MP3 disc, "-- : --" is displayed for the total time.
- When the tracks of a disc that is not selected is programmed, the total playing time of such tracks is displayed as "-- : --".

- To program multiple tracks, repeat the step 2. to 4. to program all tracks to play.
- Press ► **PLAY** button on the main unit or remote control unit to start the program play.

## BACK TO NORMAL PLAY WITHOUT CLEARING PROGRAM


To go back to normal play without clearing the program while playing the program, do one of the followings:

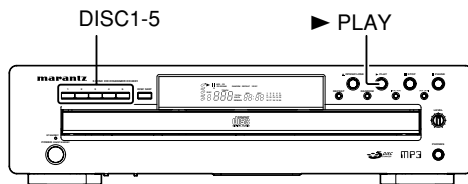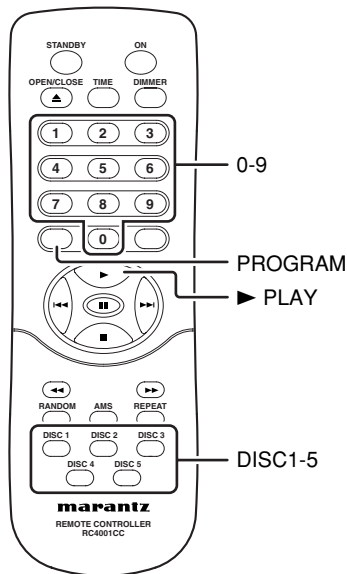

- Press **PROGRAM** button. Normal play will be started from the playing track.
- Press Disc Select button on the main unit or remote control unit. Normal play will start from the first track of the chosen disc.
- Press the Numerical button on the remote control unit. Normal play will start from the chosen track.

To go back to program play again, press **PROGRAM** button while the main unit is stopped, and press ► **PLAY** button.

## CHECK THE PROGRAM


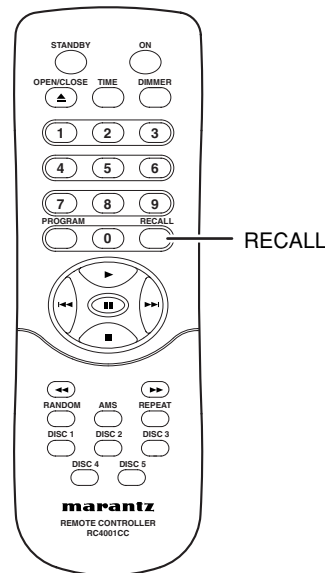


Press **RECALL** button on the remote control unit in the Program mode (when **PROGRAM** is blinking or lights).


- Each time **RECALL** button is pressed the programmed tracks are displayed one by one.

## CHANGE PROGRAMMED TRACKS

(example)  
When tracks 3, 5, and 7 of disc 1 are programmed, change track 5 of disc 1 to track 7 of disc 3.

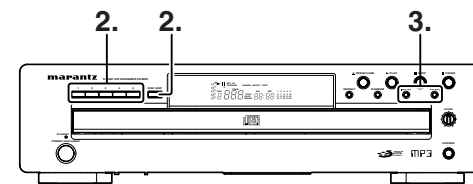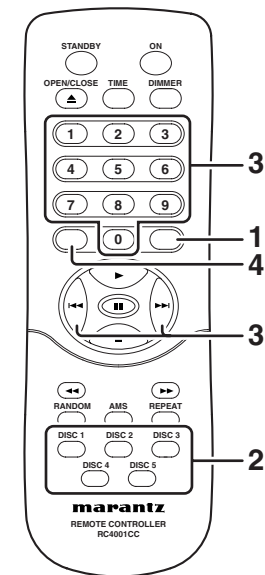

 
- To check the program, press **RECALL** button on the remote control unit twice while the unit is stopped to display track 5 of the disc 1.



2. Press **DISC1-5** button on the main unit or remote control unit or **DISC SKIP** button on the unit to choose disc 3.






 3. Press **◀◀/▶▶** button on the main unit, or **◀◀/▶▶** or **1-9** button on the remote control unit to choose track 7.



- When the track number is chosen with pressing **1-9** button on the remote control unit directly, it automatically changes to that number.

   4. Press **PROGRAM** button on the remote control to change track 5 of the disc 1 to track 7 of the disc 3.





Total number of programs    Total playback time of the tracks programmed

- In this example, as a track on a disc that is not selected is included in the program, "-- : --" is displayed for the total playback time for the programmed tracks.



## CLEAR PROGRAMMED TRACKS

### To Clear One Track at a Time

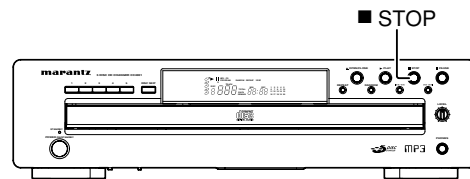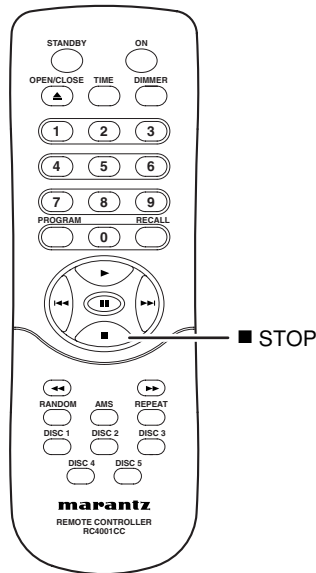



With Program mode, press **■ STOP** button on the main unit or remote control unit to clear the programmed tracks one by one from the last track.

### To Clear Chosen Track

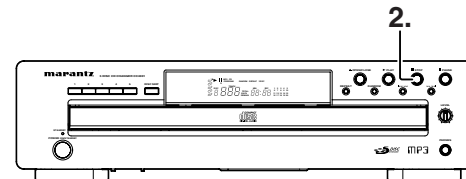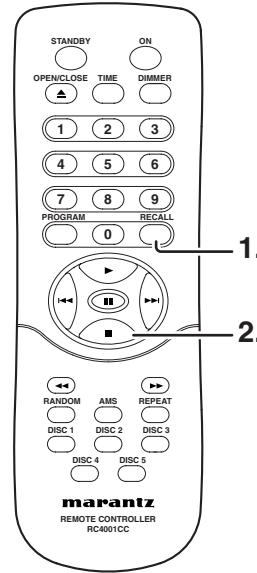


- With Program mode, press **RECALL** button on the main unit or remote control unit to switch to Check mode of the program. Display the track number (or disc number) to clear.
- With displaying the track number (or disc number) to clear, press **■ STOP** button on the main unit or remote control unit to clear the chosen track number.

### To Clear Whole Program

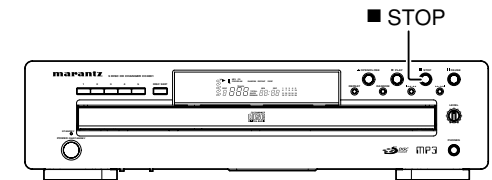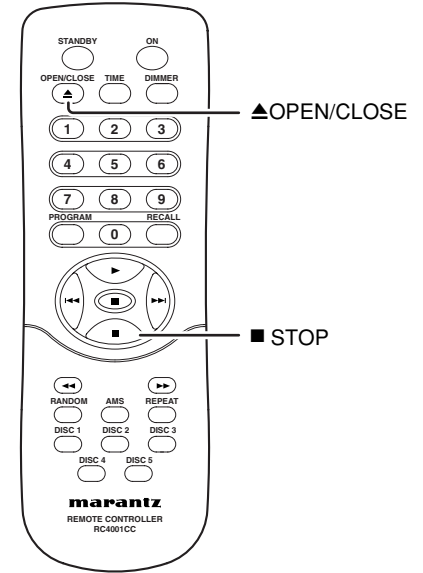


With Program mode, press **■ STOP** button on the main unit or remote control unit for 4 seconds or more to clear the whole program. Or press **▲ OPEN/CLOSE** button and open the disc tray to clear the whole program. When the unit switches to standby or power off, the programs are all erased.


### DISPLAY WINDOW BRIGHTNESS ADJUSTMENT

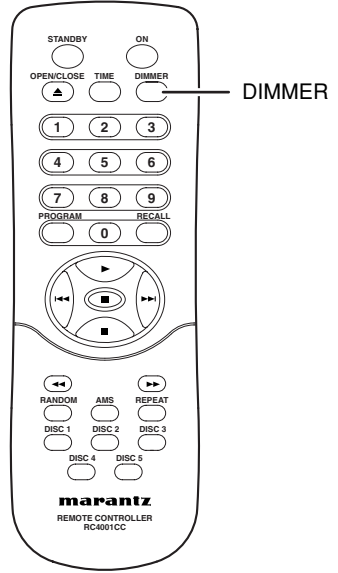

 
Each time **DIMMER** button on the remote control unit is pressed, the display window brightness changes as follows:



### SWITCHING PLAYING TIME DISPLAY

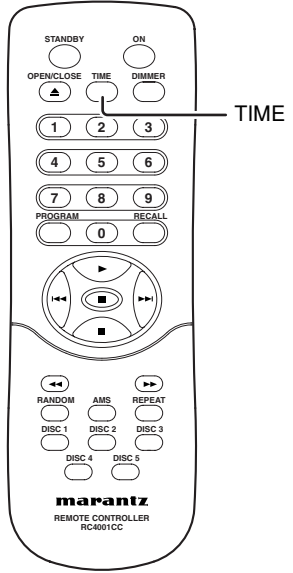

Each time **TIME** button on the remote control unit is pressed, the display of the playing time changes as follows:

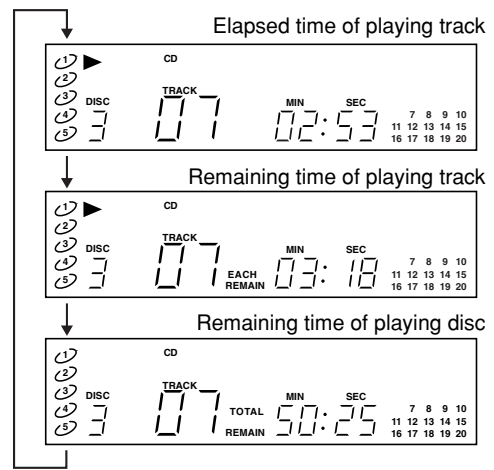

- While playing MP3, the disc remaining time is displayed as "-- : --".
- With all disc random play disc remaining time displayed as "-- : --".

- When a program is set up using tracks from only currently selected disc the amount of time remaining in the program is displayed. (Except for MP3 discs)

When a program is set up with discs that are not selected, "-- : --" is displayed for the total program time.

- If the total playback time of the tracks programmed exceeds 99 minutes 59 seconds, "-- : --" is displayed for the remaining program time.

# TROUBLE SHOOTING

If you think a malfunction has occurred, first check the points listed below. The problem is likely to have been caused by a simple operational error. If the problem cannot be corrected even after carrying out the following checks, consult your dealer or nearest Marantz sales office or service counter.

## ★ The disc fails to rotate.

1. Is the AC Power cord plugged in properly?
2. Is the **POWER ON/STANDBY** switch ON?
3. Is the disc placed in the correct position?
4. Is the disc placed properly with the label side facing up?
5. Is the disc dirty?
6. Is the disc scratched?
7. Is the disc warped?

## ★ The disc is rotating but no sound is heard.

1. Are the amplifier and speakers connected properly?
2. Is the amplifier switch ON?
3. Is the amplifier's function or selector switch set to "CD" or "AUX" or such (or whatever you have connected this unit to)?
4. Is the amplifier's volume control set at the minimum level?

## ★ The disc stops in mid-operation. The sound drops out or noise is heard.

1. Is the disc dirty?
2. Is the disc scratched?
3. Is the disc warped?
  - \* In the case of a CD-R or CD-RW disc, this problem may occur when the conditions under which its data was originally written were substandard or when the quality of the disc itself is poor.
  - \* This condition may occur in Mixed-Mode CDs, CD Extra, and other discs that have CDDA format mixed with other data. Noise may also be heard momentarily when skipping tracks.

## ★ Remote control operation is not possible.

1. Is the transmitter of the remote control unit (RC4001CC) pointed correctly at the remote sensor on the front of the player (this unit)? (See page 4)

Are there any obstacles between?
2. Are the batteries in the remote control unit exhausted?
3. Is there another strong light striking the player's remote sensor?
4. Is **EXT./INT.** switch on the unit back panel set in the correct place? (See page 7)

## ★ CD-R/CD-RW disc cannot be played. (See page 2)

1. Is the disc placed upside down?
2. Is the disc finalized correctly (TOC written)?
3. Is the recorded information music format (CD-DA) or MP3 music data?

## ★ A specific CD cannot be played.

Copy control CDs (CDs with copy guard) are special discs that do not comply with current CD standards. Marantz cannot guarantee the ability to play such discs on your CD player. When normal CDs can be played without a problem and problems occur only when playing these special discs, it is not a problem with this unit. Please ask the seller of the copy control CD for detailed information regarding copy control CDs.

## ★ MP3 music data cannot be played.

There are some restrictions on the MP3 music data which can be played on this unit. For details, please refer to "PLAYING MP3 FILES" on page 2.

## ★ The unit makes a clicking sound when the tray closes.

This is the adhesion click of the clamper for securing the disc. This does not cause any problem in using the unit.

## ★ While the disc is spinning, a spinning sound is heard or a slight vibration occurs.

Depending on the disc, a spinning sound may occur or the unit may vibrate slightly due to disc eccentricity or such. This is not a problem with this unit.

# SPECIFICATIONS

<b>Audio Characteristics</b>	
Analog output	
Channels	2channels
Frequency range	20Hz — 20kHz
Frequency characteristics	20Hz — 20kHz (±0.5 dB)
Dynamic range (1 kHz)	100 dB or more
THD (1kHz)	0.0020%
Separation	110 dB or more
wow & flutter	Precision of quartz
Output level	
Unbalanced	2.0V RMS STEREO
Digital output	
Output level (cinch JACK)	0.5Vp-p (75Ω)
Output level (optical)	-19dBm
<b>Optical Readout System</b>	
Laser	AlGaAs semiconductor
Wave length	780nm
<b>Signal format</b>	
Sampling frequency	44.1kHz

**Power Supply**

Power supply.....AC 230V 50Hz  
 Power consumption .....19W

**Cabinet, etc.**


Dimensions (Width xHeight x Depth).....440 x 114 x 404mm  
 Net weight .....6.9kg

**Accessories**

- Remote control unit (RC4001CC) .....1
- AA Batteries.....2
- AC Power cord .....1
- Audio cable.....1
- Remote connection cable.....1
- User's Guide.....1
- Registration Card.....1

Specifications subject to change without prior notice.

■ Dimensions (unit: mm)

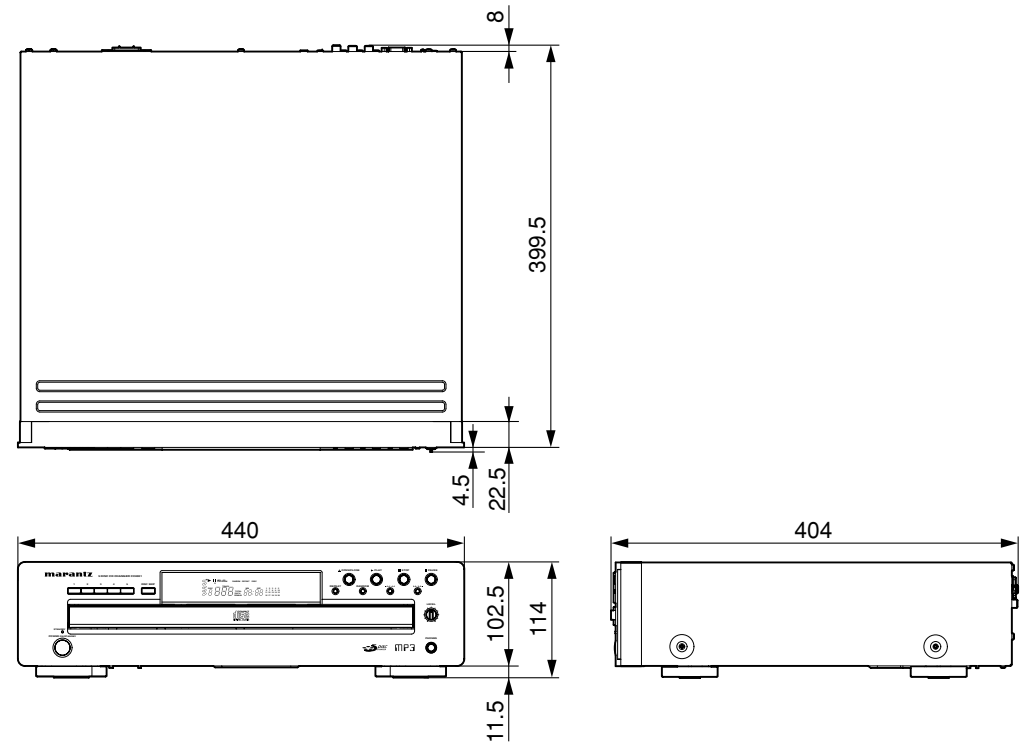



**[www.marantz.com](http://www.marantz.com)**

You can find your nearest authorized distributor or dealer on our website.

**marantz**<sup>®</sup> is a registered trademark.