


Front panel

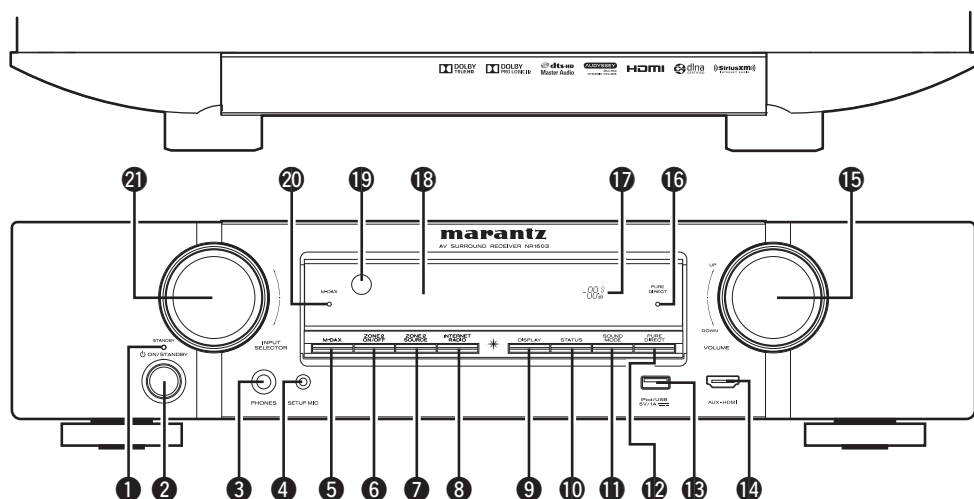

- | | |
|---|---------------------------|
| ① STANDBY indicator | ⑫ PURE DIRECT button |
| ② Power operation button (⏻ ON/STANDBY) | ⑬ iPod/USB port |
| ③ Headphones jack (PHONES) | ⑭ AUX-HDMI connector |
| ④ SETUP MIC jack | ⑮ VOLUME knob |
| ⑤ M-DAX button | ⑯ PURE DIRECT indicator |
| ⑥ ZONE2 ON/OFF button | ⑰ Master volume indicator |
| ⑦ ZONE2 SOURCE button | ⑱ Display |
| ⑧ INTERNET RADIO button | ⑲ Remote control sensor |
| ⑨ DISPLAY button | ⑳ M-DAX indicator |
| ⑩ STATUS button | ㉑ INPUT SELECTOR knob |
| ⑪ SOUND MODE button | |