



Front panel

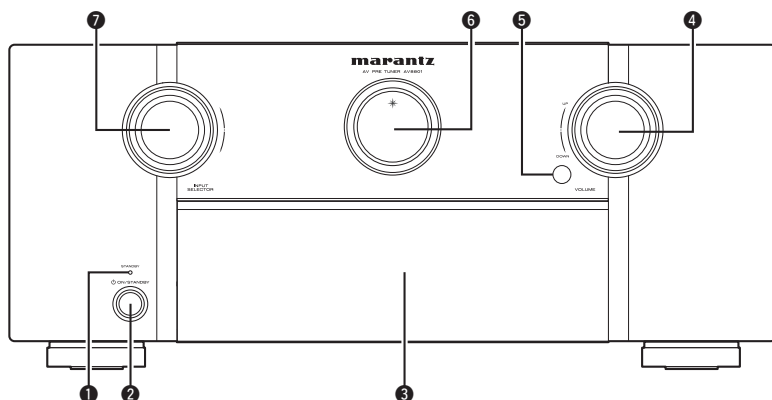

- 1** STANDBY indicator
- 2** Power operation button (ON/STANDBY)
- 3** Door
- 4** VOLUME knob
- 5** Remote control sensor
- 6** Main display
- 7** INPUT SELECTOR knob

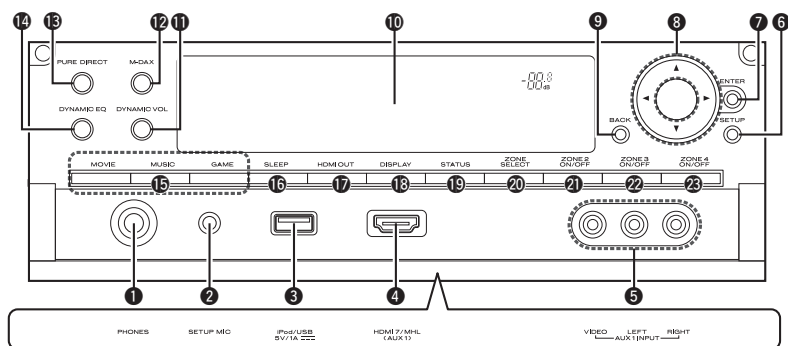

- 1** Headphones jack (PHONES)
- 2** SETUP MIC jack
- 3** iPod/USB port
- 4** HDMI 7/MHL (AUX1) connector
- 5** AUX1 INPUT connectors
- 6** SETUP button
- 7** ENTER button
- 8** Cursor buttons (Δ▽◀▶)
- 9** BACK button
- 10** Sub display
- 11** Dynamic Volume button (DYNAMIC VOL)
- 12** M-DAX button/indicator
- 13** PURE DIRECT button/indicator
- 14** DYNAMIC EQ button
- 15** SOUND MODE buttons
- 16** SLEEP button
- 17** HDMI OUT button
- 18** DISPLAY button
- 19** STATUS button
- 20** ZONE SELECT button
- 21** ZONE2 ON/OFF button
- 22** ZONE3 ON/OFF button
- 23** ZONE4 ON/OFF button