


marantz®


AV Pre Tuner
AV8801

Owner's Manual

SAFETY PRECAUTIONS



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN




CAUTION:
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



CAUTION:
HOT SURFACE. DO NOT TOUCH.

The top surface over the internal heat sink may become hot when operating this product continuously. Do not touch hot areas, especially around the "Hot surface mark" and the top panel.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.



CAUTION:

To completely disconnect this product from the mains, disconnect the plug from the wall socket outlet. The mains plug is used to completely interrupt the power supply to the unit and must be within easy access by the user.

DECLARATION OF CONFORMITY

We declare under our sole responsibility that this product, to which this declaration relates, is in conformity with the following standards: EN60065, EN55013, EN55020, EN61000-3-2 and EN61000-3-3. Following the provisions of Low Voltage Directive 2006/95/EC and EMC Directive 2004/108/EC, the EC regulation 1275/2008 and its frame work Directive 2009/125/EC for Energy-related Products (ErP).

Marantz Europe
A division of D&M Europe B.V.
Beemdstraat 11, 5653 MA Eindhoven,
The Netherlands

A NOTE ABOUT RECYCLING:

This product's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with the local recycling regulations.

When discarding the unit, comply with local rules or regulations.

Batteries should never be thrown away or incinerated but disposed of in accordance with the local regulations concerning battery disposal.

This product and the supplied accessories, excluding the batteries, constitute the applicable product according to the WEEE directive.





Pb

NOTES ON USE

WARNINGS

- Avoid high temperatures.
Allow for sufficient heat dispersion when installed in a rack.
- Handle the power cord carefully.
Hold the plug when unplugging the cord.
- Keep the unit free from moisture, water, and dust.
- Unplug the power cord when not using the unit for long periods of time.
- Do not obstruct the ventilation holes.
- Do not let foreign objects into the unit.
- Do not let insecticides, benzene, and thinner come in contact with the unit.
- Never disassemble or modify the unit in any way.
- Ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths or curtains.
- Naked flame sources such as lighted candles should not be placed on the unit.
- Observe and follow local regulations regarding battery disposal.
- Do not expose the unit to dripping or splashing fluids.
- Do not place objects filled with liquids, such as vases, on the unit.
- Do not handle the mains cord with wet hands.
- When the switch is in the OFF (STANDBY) position, the equipment is not completely switched off from MAINS.
- The equipment shall be installed near the power supply so that the power supply is easily accessible.
- Do not keep the battery in a place exposed to direct sunlight or in places with extremely high temperatures, such as near a heater.

CAUTIONS ON INSTALLATION

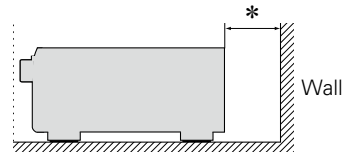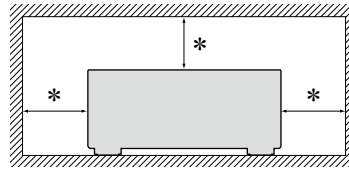

*** For proper heat dispersal, do not install this unit in a confined space, such as a bookcase or similar enclosure.**

- More than 0.3 m is recommended.

Getting started

Thank you for purchasing this marantz product. To ensure proper operation, please read this owner's manual carefully before using the product. After reading them, be sure to keep them for future reference.

Contents

| | |
|------------------------------|-------------------|
| Getting started | 1 |
| Accessories | 2 |
| Features | 2 |
| Cautions on handling | 4 |

Basic version

[5](#)

| | |
|---|--------------------|
| Connections | 6 |
| Important information | 6 |
| Connecting an HDMI-compatible device | 9 |
| Connecting an HDMI-incompatible device | 15 |
| Connecting a device with a multi-channel output connector | 30 |
| Connecting a power amp | 31 |
| Connecting to a home network (LAN) | 33 |
| Connecting the power cord | 34 |
| Setup | 35 |
| Set up speakers (Audyssey® Setup) | 35 |
| Making the network settings (Network) | 42 |
| Playback (Basic operation) | 43 |
| Important information | 43 |
| Playing a Blu-ray Disc player/DVD player | 44 |
| Playing Super Audio CD | 44 |
| Playing a CD player | 45 |
| Playing an iPod | 46 |
| Playing a USB memory device | 49 |
| Listening to FM broadcasts | 52 |
| Network contents | 63 |
| Listening to Internet Radio | 63 |
| Playing back files stored on a PC and NAS | 66 |
| Using online services | 70 |
| Convenient functions | 78 |
| AirPlay function | 84 |
| Selecting a listening mode (Sound Mode) | 86 |
| Selecting a listening mode | 86 |

Advanced version

[92](#)

| | |
|---|---------------------|
| Installation/connection/setup of speakers (Advanced) | 93 |
| Speaker installation | 93 |
| Speaker connection | 95 |
| Set up speakers | 98 |
| Connections (Advanced connection) | 100 |
| Connecting the REMOTE CONTROL connectors | 100 |
| Connecting an external control device | 101 |
| Playback (Advanced operation) | 102 |
| HDMI control function | 102 |
| InstaPrevue function | 104 |
| Sleep timer function | 105 |
| Web control function | 106 |
| Dual backup memory function | 108 |
| Panel lock function | 108 |
| Remote lock function | 109 |
| Switches light illumination on/off | 110 |
| Various memory functions | 110 |
| Playback in ZONE2/ZONE3/ZONE4 (Separate room) | 111 |
| Audio output | 111 |
| Video output | 112 |
| Playback | 113 |
| Sleep timer function | 113 |
| How to make detailed settings | 114 |
| Menu map | 114 |
| Examples of menu screen displays | 116 |
| Examples of menu and front display | 117 |
| Inputting characters | 118 |
| Audio | 119 |
| Video | 126 |
| Inputs | 132 |
| Speakers | 137 |
| Network | 141 |
| General | 145 |
| Operating external devices with the remote control | 151 |
| Registering preset codes | 151 |
| Operating external devices | 154 |
| Operating devices | 155 |
| Operating learning function | 157 |
| Setting the back light | 159 |
| Specifying the zone used with the remote control unit | 159 |

Informations


[160](#)

| | |
|---|---------------------|
| Part names and functions | 161 |
| Front panel | 161 |
| Display | 163 |
| Rear panel | 165 |
| Remote control unit | 166 |
| Other information | 168 |
| Trademark information | 168 |
| Surround | 169 |
| Relationship between video signals and monitor output | 175 |
| Explanation of terms | 178 |
| Troubleshooting | 181 |
| Resetting the microprocessor | 186 |
| Specifications | 187 |

Accessories

Check that the following parts are supplied with the product.

| | |
|---------------------------------------|---|
| ① Getting Started | 1 |
| ② CD-ROM (Owner's manual) | 2 |
| ③ Safety Instructions | 1 |
| ④ Power cord | 1 |
| ⑤ Remote control unit (RC019SR) | 1 |
| ⑥ R03/AAA batteries | 2 |
| ⑦ FM indoor antenna | 1 |
| ⑧ Setup microphone | 1 |
| (ACM1HB) | |

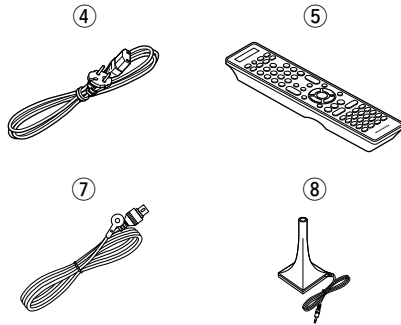

Features

Current feedback amplifier

This unit uses a high-speed current feedback amplifier circuit for its preamplifier so that signals from a Blu-ray Disc player and other equipment that support high-definition audio formats can be amplified with high fidelity. The high-speed current feedback amplifier also reproduces a natural sound space.

Digital video processor up-scales analog video signals (SD resolution) to 4K

This unit is equipped with the 4K video upscaling function, which allows for outputting analogue or SD (standard video quality) video to HDMI at 4K (3840 × 2160 pixels). This enables the unit and a TV connected with a single HDMI cable and any video source to be reproduced precisely with HD level of quality.

Equipped with “Hybrid PLL Jitter Reducer” capable of reducing jitter and phase noise that negatively affect sound quality

“Hybrid PLL Jitter Reducer” provided with this unit improves the sound localization, reproducing a natural sound field.

Equipped with a Multi-Zone Function 4 source, 4 zone output

This unit is equipped with a multi-zone function, so you can enjoy separate sound sources in four rooms including MAIN ZONE.

Equipped with an HDMI output for ZONE4

This unit is equipped with an HDMI output for ZONE4, which allows you to enjoy video and audio in a room in ZONE4 as well. You can enjoy video sources other than those in MAIN ZONE.

11.2 ch XLR Balanced Output

This unit is equipped with balanced output connectors that are unsusceptible to external noise.

It is possible to achieve audio transmission of higher quality by connecting this unit to a power amplifier equipped with a balanced input connector.

Supports Internet Radio, music, and photograph streaming

Supports AirPlay® (▶ page 84)

You can enjoy a wide variety of content, including listening to Internet Radio, playing the audio files stored on your PC, and displaying on a TV the photographs stored on your PC.

This unit also supports AirPlay that lets you stream your music library from an iPhone®, iPad®, iPod touch® or iTunes®.

Compatible with “marantz Remote App” for performing basic operations of the unit with an iPad, iPhone*1 or Android smartphone

“marantz Remote App” is application software that allows you to perform basic operations with an iPad, iPhone, Android smartphone or Android tablet such as turning the unit ON/OFF, controlling the volume, and switching the source.

*1 Download “marantz Remote App” from iTunes® App Store. The unit needs to be connected to a LAN and the iPhone/iPod touch needs to be connected to the same network by Wi-Fi (wireless LAN).

“Setup Assistant”, providing easy-to-follow setup instructions

First select the language when prompted. Then simply follow the instructions displayed on the TV screen to set up the speakers, network, etc.

Easy to use, Graphical User Interface

This unit is equipped with an easy to see "Graphical User Interface" that uses menu displays and levels. The use of level displays increases operability of the this unit.

HDMI connectors enable connection to various digital AV devices (input: 7, output: 3)

The unit is equipped with 7 HDMI input connectors for connecting devices with HDMI connectors, such as a Blu-ray Disc player, game machine, HD digital camcorder, etc.

Supports HDMI (3D, ARC, Deep Color, "x.v.Color", Auto Lip Sync, 4K) and HDMI control function (page 9)

In addition to HDMI 3D and ARC (Audio Return Channel) functions, this unit supports the video pass-through function, which outputs video to TV without changing the video quality when video signals of 4K (3840×2160 pixels) are input, and the GUI overlay function, which overlays the menu screen (GUI) on the 4K video screen.

Simultaneous playback on two HDMI channels (for MAIN ZONE)

This unit is equipped with two HDMI MONITOR outputs. You can connect one output to a projector and the other output to a TV for simultaneous signal outputs.

Direct play for iPod and iPhone via USB**(page 24)**

Music data from an iPod can be played back if you connect the USB cable supplied with the iPod via the iPod/USB port of this unit, and also an iPod can be controlled with the remote control unit for this unit.

Audyssey DSX®

This unit is equipped with Audyssey DSX® processor. By connecting front height speakers to power amplifier and playing back through Audyssey DSX®, you can experience a more powerful playback expression in the height audio range. By connecting front wide speakers, you can experience a more powerful playback expression in the wide audio range.

DTS Neo:X

This technology enables the playback of 2-channel source audio or 7.1/5.1 multi-channel source audio through a maximum 11.1 channel speakers, achieving an even broader sound field.

Audyssey LFC™ (Low Frequency Containment)

Audyssey LFC™ solves the problem of low frequency sounds disturbing people in neighboring rooms or apartments. Audyssey LFC™ dynamically monitors the audio content and removes the low frequencies that pass through walls, floors and ceilings. It then applies psychoacoustic processing to restore the perception of low bass for listeners in the room. The result is great sound that no longer disturbs the neighbors.

Discrete subwoofers and Audyssey Sub EQ HT™

The unit has two subwoofer output capability and can adjust the level and delay for each subwoofer individually.

Audyssey Sub EQ HT makes the integration seamless by first compensating for any level and delay differences between the two subwoofers and then applying Audyssey MultEQ® XT 32 to both subwoofers together.

InstaPrevue Technology

Live picture-in-picture preview of HDMI input connected to an AV pre tuner.

MHL (Mobile High-Definition Link) function

You can charge your mobile device that supports MHL by providing power from this unit while outputting video from that mobile device. You can also control mobile devices that support MHL through this unit.

M-XPport (marantz-eXtension Port) (page 29)

This unit is equipped with the M-XPport, a marantz original innovation that provides outstanding expandability. You can connect the Wireless Receiver RX101 (sold separately) to this port.

Remote Power Control

This unit is equipped with a remote power control function. When a marantz Power Amplifier MM8077 is connected to this unit, this unit's power can be switched ON/OFF together with the MM8077 power supply.

Connection to the MM8077 is a ground floating connection that prevents negative influences on sound quality as far as possible.

Cautions on handling

- **Before turning the power on**

Check once again that all connections are correct and that there are no problems with the connection cables.

- Power is supplied to some of the circuitry even when the unit is set to the standby mode. When going on vacation or leaving home for long periods of time, be sure to unplug the power cord from the power outlet.

- **About condensation**

If there is a major difference in temperature between the inside of the unit and the surroundings, condensation (dew) may form on the operating parts inside the unit, causing the unit not to operate properly.

If this happens, let the unit sit for an hour or two with the power turned off and wait until there is little difference in temperature before using the unit.

- **Cautions on using mobile phones**

Using a mobile phone near this unit may result in noise. If that occurs, move the mobile phone away from this unit when it is in use.

- **Moving the unit**






Turn off the power and unplug the power cord from the power outlet. Next, disconnect the connection cables to other system units before moving the unit.

- **About care**

- Wipe the cabinet and control panel clean with a soft cloth.
- Follow the instructions when using a chemical cleaner.
- Benzene, paint thinner or other organic solvents as well as insecticide may cause material changes and discoloration if brought into contact with the unit, and should therefore not be used.

Basic version

Here, we explain the connections and basic operation methods for this unit.

- **Connections**  [page 6](#)
- **Setup**  [page 35](#)
- **Playback (Basic operation)**  [page 43](#)
- **Network contents**  [page 63](#)
- **Selecting a listening mode (Sound Mode)**  [page 86](#)

Connections

Important information

Make connections before using this unit.

To create a home theater that can play back higher quality video and audio by fully utilizing the capabilities of this unit and your video devices, connect this unit to each of your video devices with HDMI cables.

❑ HDMI-compatible device

If your video device does not support HDMI connections, use the following connection.

❑ HDMI-incompatible device

This unit can change the source that is assigned to the DIGITAL AUDIO IN, ANALOG AUDIO IN, COMPONENT VIDEO IN and VIDEO IN connectors.

For details on assigning a source to connectors, see “Changing the source assigned to connectors” (page 16). For the setting method, see “Input Assign” (page 133).

NOTE

- While signals are being upscaled to 4K, the menu screen is only displayed on a TV that is connected to this unit via HDMI.
- Do not plug in the power cord until all connections have been completed. However, when the “Setup Assistant” is running, follow the instructions in the “Setup Assistant” (page 7) screen for making connections. (During “Setup Assistant” operation, the input/output connectors do not conduct current.)
- When running the “Setup Assistant” (page 7), turn off the power supply of connected devices.
- When making connections, also refer to the operating instructions of the other devices being connected.
- Be sure to connect the left and right channels properly (left with left, right with right).
- Do not bundle power cords together with connection cables. Doing so can result in noise.

❑ HDMI-compatible device



page 10



page 12



page 12



page 12



page 12



page 12



page 12

❑ HDMI-incompatible device



page 17



page 18



page 19



page 20



page 21



page 22



page 23



page 24



page 26



page 27



page 28



page 29



page 33

❑ Others



page 95




page 34

Converting input video signals for output (Video conversion function)

This unit is equipped with three types of video input connectors (HDMI, Component video and video) and three types of video output connectors (HDMI, Component video and video).

This function automatically converts various formats of video signals input to this unit into the formats used to output the video signals from this unit to a monitor.

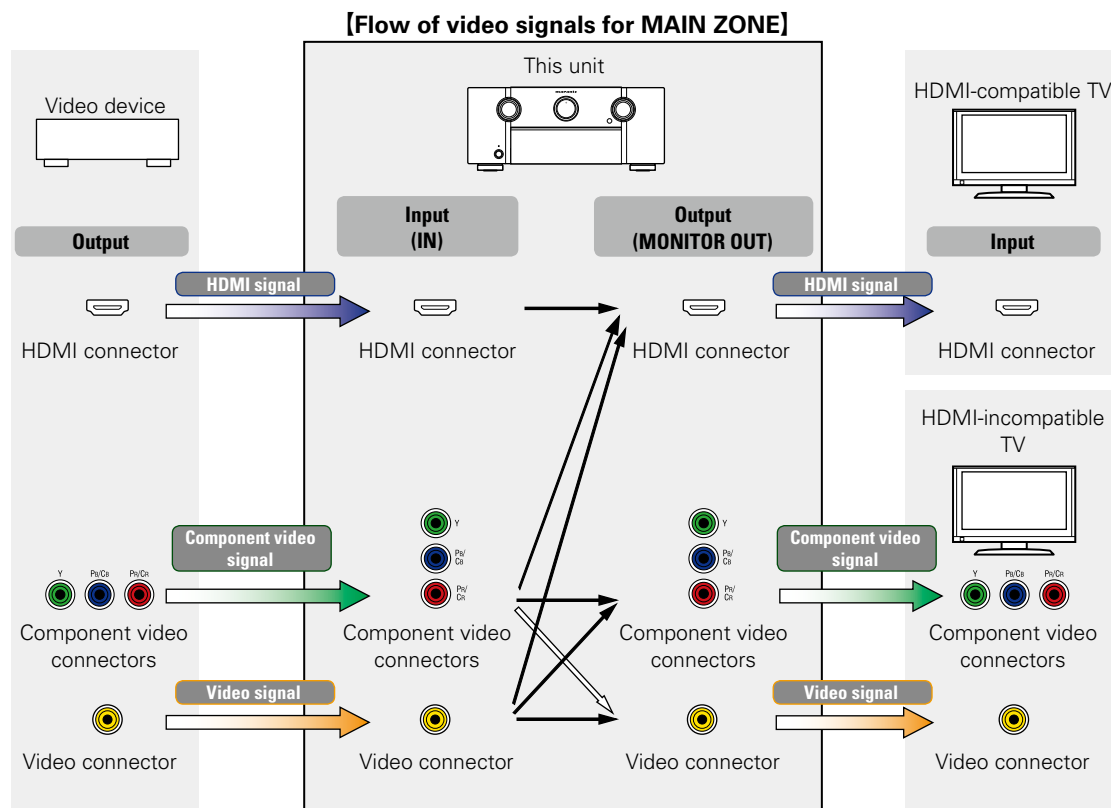

⇨ : when 480i/576i signals are input

For example, when an HDMI-compatible TV is connected to this unit with an HDMI cable, input signals other than HDMI video signals are automatically converted to HDMI signals that are then output from the HDMI connector to the TV. Only one type of video signals is output, so video signals output from this unit to the TV do not change even when the source for playback is switched to a device that outputs video signals in a different format, which allows you to continue with playback without the need to switch the video input source on the TV. Furthermore, the video quality improves because analog video signals such as video and component video signals that are input to this unit are converted to digital HDMI video signals with a higher resolution for output. When a TV does not support the HDMI connection, make an analog connection between this unit and the TV for video signals. This unit cannot convert HDMI input signals to analog video signals, so when signals are input from an HDMI device, use the component video input connector or video input connector. In this case, the component video signals that are input to this unit are converted to video signals.

Make Settings as Necessary

- If you do not want this unit to convert video signals automatically, use the following setting item to disable this function.
"Video Conversion" (☞ [page 129](#))
- If you want to change the resolution of video signals output to the TV, use the following setting item to do so.
"Resolution" (☞ [page 130](#))




- The video conversion function supports the NTSC, PAL, SECAM, NTSC 4.43, PAL-N, PAL-M and PAL-60 formats.
- Resolutions of HDMI-compatible TVs can be checked at "Video" – "HDMI Monitor 1" or "HDMI Monitor 2" (☞ [page 148](#)).


NOTE

- **While signals are being upscaled to 4K, the menu screen is only displayed on a TV that is connected to this unit via HDMI.**
- When a non-standard video signal from a game machine or some other source is input, the video conversion function might not operate.

[Flow of video signals for ZONE4]

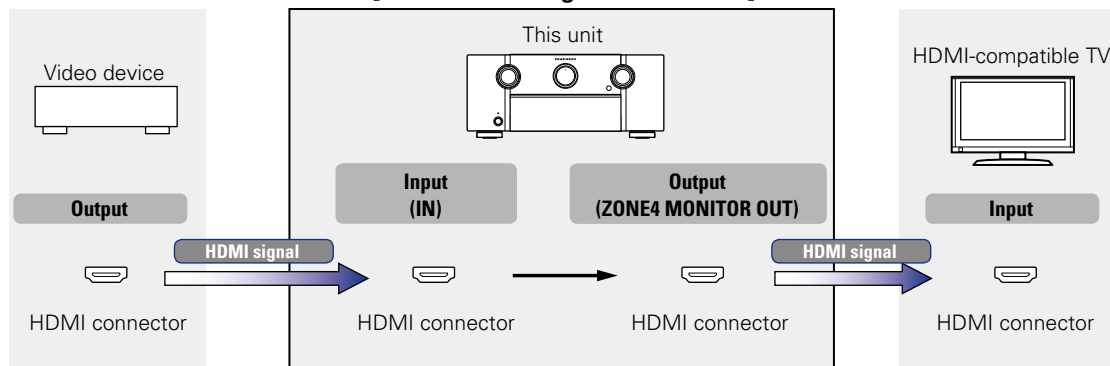

[Flow of video signals for ZONE2]

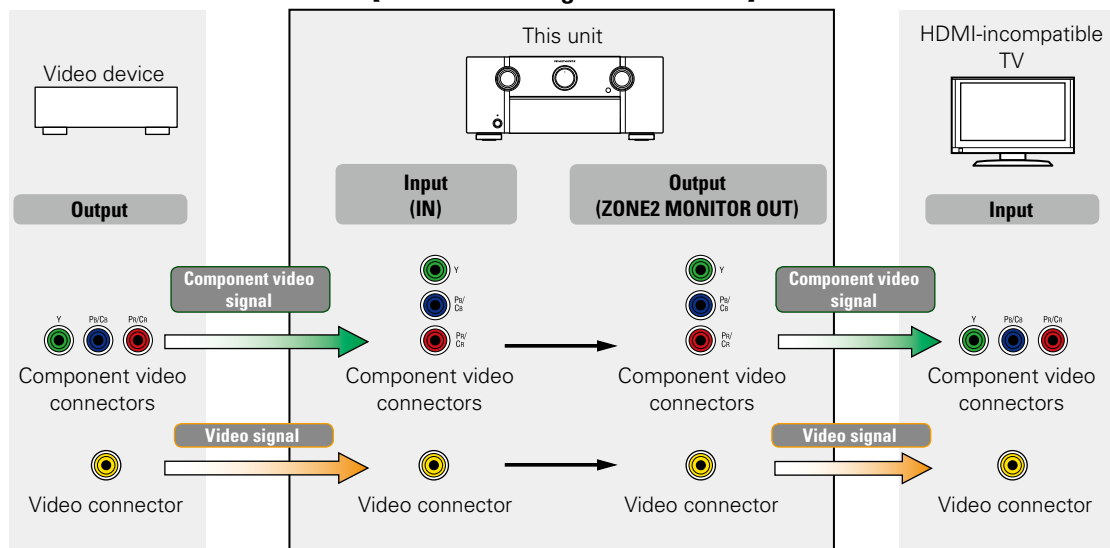

NOTE

- HDMI signals are digital. HDMI signals cannot be converted into analog signals.
- The HDMI ZONE4 function is only compatible with the HDMI 1 – 6 IN connectors. It is not compatible with the HDMI 7 IN connector.

Connecting an HDMI-compatible device

You can connect up to ten HDMI-compatible devices (7-inputs/3-outputs) to the unit.

When a TV is connected to the HDMI ZONE4 OUT connector, you can play back a video or audio from the device connected to the HDMI 1 – 6 IN connector in ZONE4 ([page 111](#)).

If the device connected to this unit is equipped with an HDMI connector, it is recommended to use HDMI connections. Connections with an HDMI cable offer the following benefits that can not be achieved with other connection methods.

- **High quality playback by transmitting audio and video via digital signals**

HDMI connections can transmit high definition video and high quality audio formats adopted by Blu-ray disc players (Dolby Digital Plus, Dolby TrueHD, dts-HD, dts-HD Master Audio).

HDMI connections also convey information required for playback between devices. The information is used for copyright protection and TV resolution recognition, the ARC function, the HDMI control function, etc.

- **Transmission of audio and video signals with a single HDMI cable**

Previous connections require multiple audio and video cables, but HDMI connections require only a single HDMI cable to transmit audio and video signals. This allows wires in a home theater system, which tend to be complicated, to be more organized.

- **Mutual control through the HDMI control function ([page 102](#))**

This unit and the HDMI device connected via HDMI can be linked to perform operations such as power control, volume control, and input source switching.

- **Other video and audio functions, such as 3D video playback, Content Type, the ARC function, are supported ([page 13](#)).**



- There is more than one version of HDMI standard. The supported functions and the performance vary according to the version. This unit complies with the HDMI standard, supporting the ARC and 3D playback functions. To enjoy these functions, the HDMI device connected to this unit also needs to use the same version of the standard. For the version of the HDMI standard on the device connected to this unit, see the device's manual.
- Some TVs do not support audio input via HDMI connections. For details, see your TV's manual.

❑ **Before connecting this unit to TV via HDMI connections** ([page 10](#))

❑ **Connecting this unit to a TV via HDMI connections** ([page 11](#))


❑ **Connecting this unit to video devices via HDMI connections** ([page 12](#))

❑ **HDMI function** ([page 13](#))

❑ **Settings related to HDMI connections** ([page 14](#))

Before connecting this unit to TV via HDMI connections

There are 2 methods to connect HDMI-compatible TV to this unit.
Use the connection method that suits your TV.

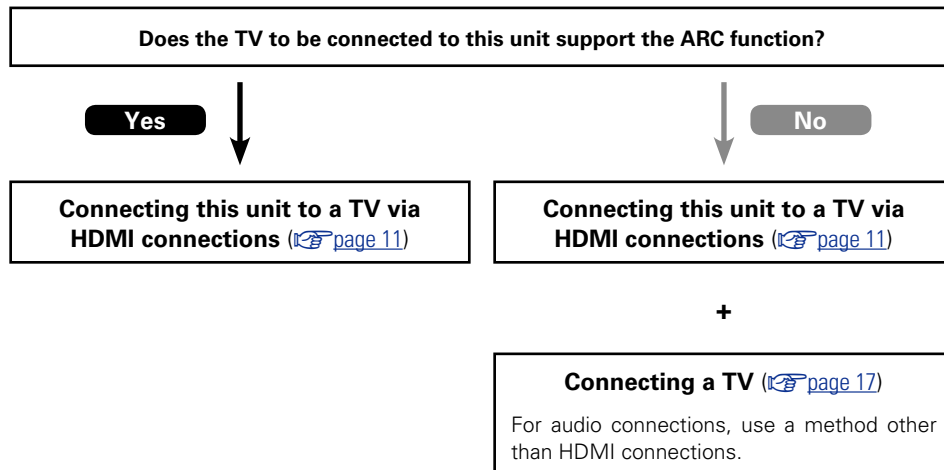

About ARC (Audio Return Channel) function

This function plays TV audio on this unit by sending the TV audio signal to this unit via HDMI cable. If a TV without the ARC function is connected via HDMI connections, video signals of the playback device connected to this unit are transmitted to the TV, but this unit can not play back the audio from the TV. If you want to enjoy surround audio for TV program, a separate audio cable connection is required.

In contrast, if a TV with the ARC function is connected via HDMI connections, no audio cable connection is required. Audio signals from the TV can be input to this unit through the HDMI cable between this unit and the TV. This function allows you to enjoy surround playback on this unit for the TV.




When the ARC function is used, connect a device with a “Standard HDMI cable with Ethernet” or “High Speed HDMI cable with Ethernet” for HDMI.

Refer to the owner’s manual for your TV for details about TV connection and settings.


NOTE

The HDMI ZONE4 OUT connector is not compatible with the ARC function.

[Connection to a TV with the ARC function]

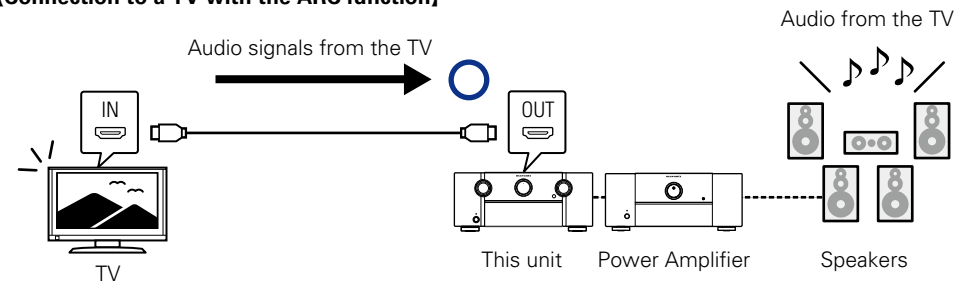


[Connection to a TV without the ARC function]

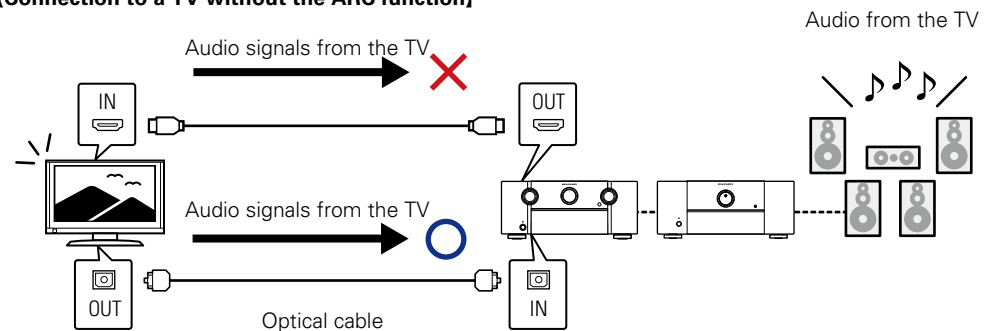


Connecting this unit to a TV via HDMI connections

When a TV is connected to the HDMI ZONE4 OUT connector, you can play back a video or audio from the device connected to the HDMI 1 – 6 IN connector in ZONE4 ([page 111](#)).

 Cables used for connections



- This interface allows transfer of digital video signals and digital audio signals over a single HDMI cable.

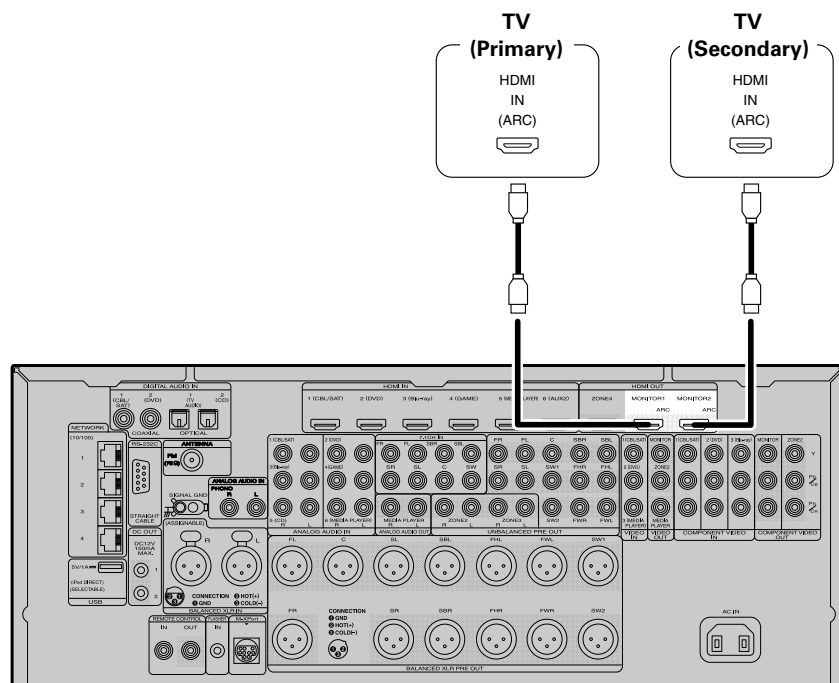

- Video signals are not output if the input video signals do not match the monitor's resolution. In this case, switch the Blu-ray Disc/DVD player's resolution to a resolution with which the monitor is compatible.
- When this unit and monitor are connected with an HDMI cable, if the monitor is not compatible with HDMI audio signal playback, only the video signals are output to the monitor. Make audio connections ([page 17](#) "Connecting a TV").

NOTE

- The HDMI 7 / MHL connector on the front panel does not support the HDMI ZONE4 function.
- The audio signal from the HDMI output connector (sampling frequency, number of channels, etc.) may be limited by the HDMI audio specifications of the connected device regarding permissible inputs.
- When connecting a TV that does not support the ARC function, an audio cable connection is required in addition to the HDMI cable. In this case, refer to "Connecting a TV" ([page 17](#)) for the connection method.**
- For the ARC function, see "About ARC (Audio Return Channel) function" ([page 10](#)).**

Connecting to a device equipped with a DVI-D connector

The DVI-D (Digital Visual Interface) method is also used for video transmission via digital signals. This is developed mainly for computers, and some AV devices such as projectors are equipped with this interface. To output HDMI video signals to a DVI-D video input compatible device, use an HDMI/DVI conversion cable, which converts HDMI video signals to DVI signals. The DVI-D connector can transmit high quality digital signals, but the copy guard and other issues may hinder normal operations for some device combinations.

NOTE

- No sound is output when connected to a device equipped with a DVI-D connector. Make audio connections as described in "Connecting a TV" ([page 17](#)).
- Signals cannot be output to DVI-D devices that do not support HDCP.
- Depending on the combination of devices, the video signals may not be output.

Settings required when using a TV that supports the ARC function

When using a TV that supports the ARC function, make the following settings.


 
- Set "HDMI Control" ([page 128](#)) to "On".
- Set "Control Monitor" ([page 129](#)) to match the number of the HDMI MONITOR connector connected to the TV that supports the ARC function.

NOTE


If the TV that supports the ARC function is connected to both HDMI MONITOR 1 and HDMI MONITOR 2 connectors, you cannot use ARC function at the same time.

Connecting this unit to video devices via HDMI connections

Cables used for connections

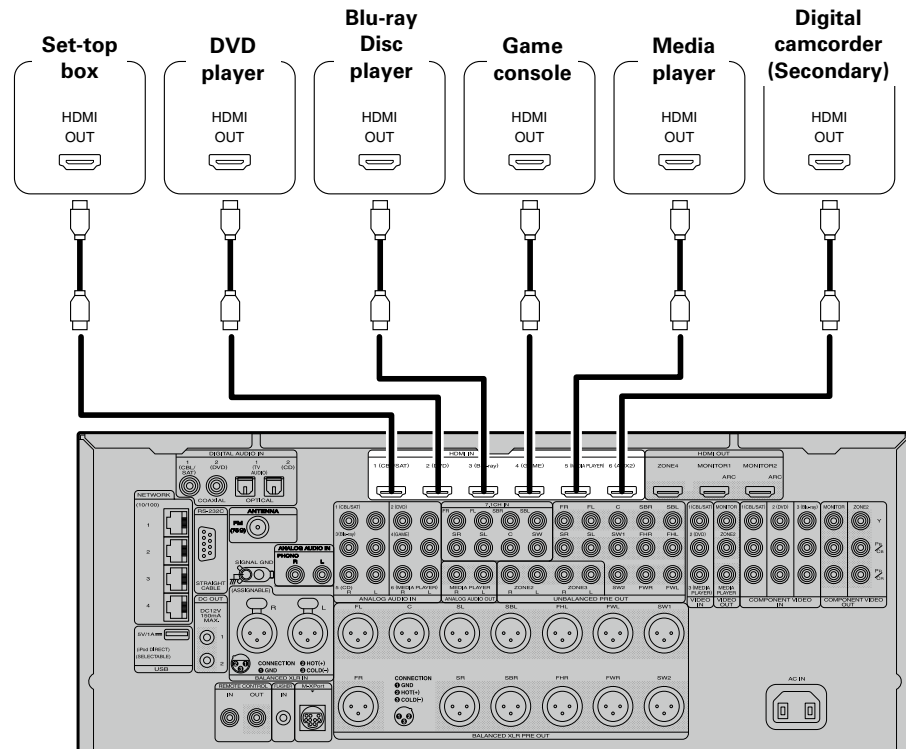

[Rear panel]

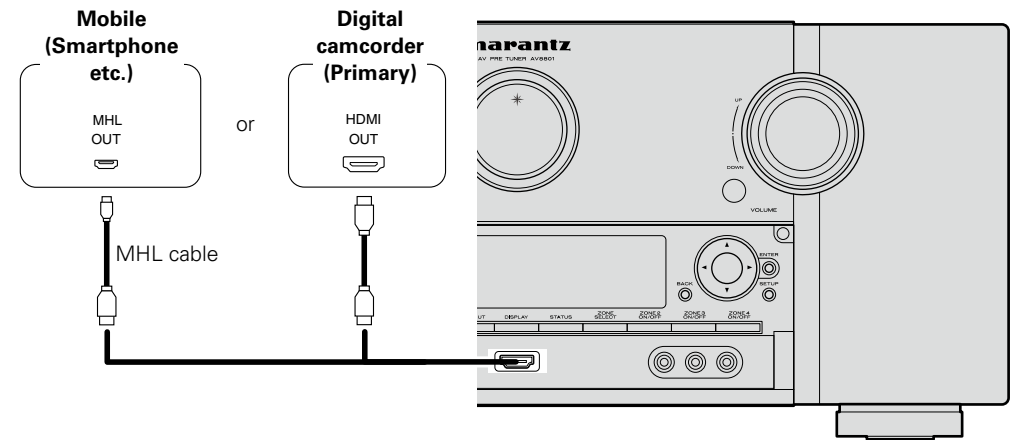

[Front panel]



- Connect Mobile (Smartphone etc.) to the HDMI 7 / MHL connector on the front panel.
- When this unit is connected to other devices with HDMI cables, connect this unit and TV also with an HDMI cable.
- When connecting a device that supports Deep Color or 4K, please use a “High Speed HDMI cable” or “High Speed HDMI cable with Ethernet”.
- Video signals are not output if the input video signals do not match the monitor’s resolution. In this case, switch the Blu-ray Disc/DVD player’s resolution to a resolution with which the monitor is compatible.

NOTE

- The HDMI 7 / MHL connector on the front panel does not support the HDMI ZONE4 function.
- The HDMI 7 / MHL connector on the front panel does not support the InstaPrevue function.
- The HDMI 7 / MHL connector on the front panel does not support the 4K.

HDMI function

This unit supports the following HDMI functions:

□ About 3D function

This unit supports input and output of 3D (3 dimensional) video signals of HDMI.

To play back 3D video, you need a TV and player that provide support for the HDMI 3D function and a pair of 3D glasses.

NOTE

- When playing back 3D video, refer to the instructions provided in the manual of your playback device together with this manual.
- When playing back 3D video content, the menu screen or status display screen can be superimposed over the image. However, the menu screen or status display screen cannot be superimposed over certain 3D video content.
- If 3D video with no 3D information is input, the menu screen and status display on this unit are displayed over the playback video.
- If 2D video is converted to 3D video on the television, the menu screen and status display on this unit are not displayed correctly. To view the menu screen and status display on this unit correctly, turn the television setting that converts 2D video to 3D video off.

□ About 4K function

This unit supports input and output of 4K (3840 x 2160 pixels) video signals of HDMI.



When a device supporting 4K is connected, use a cable compatible with “High Speed HDMI cable” or “High Speed HDMI cable with Ethernet”.

□ HDMI pass through function (👉 [page 128](#))

Signals input to the HDMI input connector are output to the television or other device connected to the HDMI output connector, even if the power of this unit is in standby.

□ HDMI control function (👉 [page 102](#))

This function allows you to operate external devices from the unit and operate the unit from external devices.

NOTE

- The HDMI control function may not work depending on the device it is connected to and its settings.
- You cannot operate a TV or Blu-ray Disc player/DVD player that is not compatible with the HDMI control function.
- The HDMI ZONE4 function is compatible with the HDMI control function. To enable the HDMI control for the ZONE4 HDMI monitor, set “Control Monitor” (👉 [page 129](#)) to “ZONE4”.

□ About Content Type

This function was added with the HDMI standard. It automatically makes settings suitable for the video-output type (content information).

NOTE

To enable the Content Type, set “Video Mode” to “Auto” (👉 [page 129](#)).

❑ **Deep Color** (👉 [page 178](#))

When a device supporting Deep Color is connected, use a cable compatible with “High Speed HDMI cable” or “High Speed HDMI cable with Ethernet”.

❑ **Auto Lip Sync** (👉 [page 127, 178](#))

❑ **“x.v.Color”, sYCC601 color, Adobe RGB color, Adobe YCC601 color**
(👉 [page 178, 180](#))

❑ **High definition digital audio format**

❑ **ARC (Audio Return Channel)** (👉 [page 10](#))

Copyright protection system

In order to play back digital video and audio such as BD-Video or DVD-Video via HDMI connection, both this unit and TV or the player need to support the copyright protection system known as HDCP (High-bandwidth Digital Content Protection System). HDCP is copyright protection technology comprised of data encryption and authentication of the connected AV devices. This unit supports HDCP.

- If a device that does not support HDCP is connected, video and audio are not output correctly. Read the owner’s manual of your television or player for more information.

Settings related to HDMI connections

Set as necessary. For details, see the respective reference pages.

❑ **HDMI Setup** (👉 [page 127](#))

Make settings for HDMI video/audio output.

- | | | |
|------------------|---------------------|-----------------------|
| • Auto Lip Sync | • Vertical Stretch | • Pass Through Source |
| • HDMI Audio Out | • HDMI Pass Through | • Control Monitor* |
| • Video Output | • HDMI Control* | • Power Off Control |

* Only these items are supported for HDMI ZONE4.

NOTE

To output audio signals that are input from the HDMI input connector to a TV connected via HDMI, set “HDMI Audio Out” (👉 [page 127](#)) to “TV”.



























Audio signals input via the Analog/Coaxial/Optical input connectors cannot be output from the HDMI MONITOR output connector.

Connecting an HDMI-incompatible device





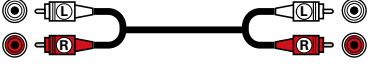


For high quality video and surround playback, it is recommended to use an HDMI cable to connect this unit to TV and other video devices (refer page 9 "Connecting an HDMI-compatible device").

This section describes connections when your device does not support HDMI connections.

Connection methods for various devices

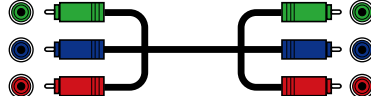
| | | | | | | | |
|--|---|--|---|---|---|---|---|
|  TV |  page 17 |  CBL/SAT |  page 18 |  DVD |  page 19 |  Blu-ray |  page 20 |
|  GAME |  page 21 |  AUX |  page 22 |  MEDIA PLAYER |  page 23 |  iPod/USB |  page 24 |
|  CD |  page 26 |  PHONO |  page 27 |  TUNER |  page 28 |  M-XPport |  page 29 |
|  NETWORK |  page 33 | | | | | | |

Cables used for connections

| Video cable (sold separately) | |
|-------------------------------|---|
| Component video cable |  |
| Video cable |  |
| Audio cable (sold separately) | |
| Coaxial digital cable |  |
| Optical cable |  |
| Audio cable |  |
| XLR cable |  |
| Cable (sold separately) | |
| Ethernet cable |  |

Changing the source assigned to connectors

This unit can change the source that is assigned to the HDMI IN, DIGITAL AUDIO IN, COMPONENT VIDEO IN, VIDEO IN, AUDIO IN and BALANCED XLR IN connectors.

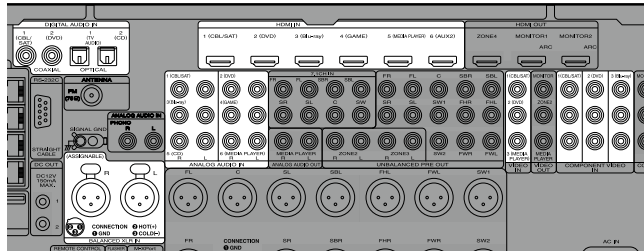

Let us take a digital audio connection for Blu-ray Disc players for an example. The rear panel digital audio input connectors do not have the input connector indication for Blu-ray disc players (Blu-ray). However, DIGITAL AUDIO IN connectors have the “ASSIGNABLE” indication, which means that you can change the source assigned to these connectors. You can assign Blu-ray disc players to these connectors to use them for Blu-ray disc players. Select “Blu-ray” when switching functions on this unit to play back the source connected to these connectors.

☐ **How to change the source assigned to connectors** ([page 133](#))

Connecting the balanced XLR IN terminal

This unit is equipped with BALANCED XLR IN terminals. Use these terminals if your device has an XLR terminal as an audio output terminal.

When using BALANCED XLR IN terminals, assign “XLR” for “Input Assign” – “ANALOG” ([page 134](#)). By default, these terminals are disabled.

[AV8801 BALANCED XLR IN terminal PIN arrangement]




- ① GND (Ground)
- ② HOT (+)
- ③ COLD (-)

Connecting a TV

- This section describes how to connect when your TV does not support HDMI connections. For instructions on HDMI connections, see “Connecting an HDMI-compatible device” ([page 9](#)).
- To listen to TV audio through this device, use the optical digital connection.



For video connections, see “Converting input video signals for output (Video conversion function)” ([page 7](#)).

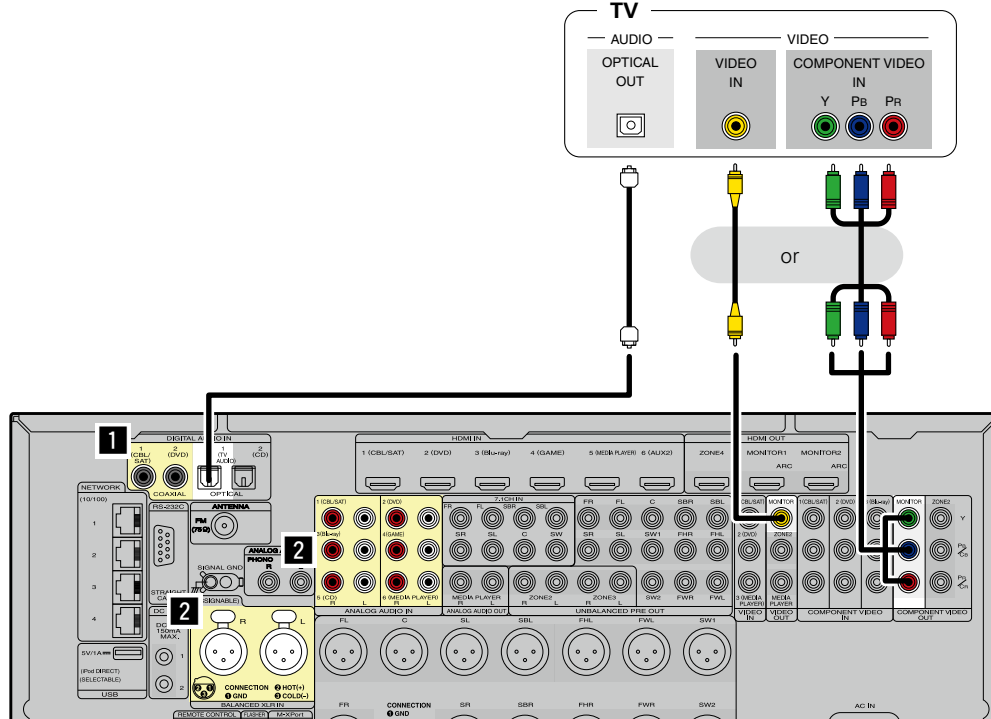

You can also make connections for the part on the connection diagram. To make connections for these connectors, you need to make the input connector settings.

To make connections for connectors indicated by **1**

Assign a connector to which an audio cable is inserted to “TV AUDIO” in “Input Assign” – “DIGITAL” ([page 134](#)).


To make connections for connectors indicated by **2**

Assign a connector to which an audio cable is inserted to “TV AUDIO” in “Input Assign” – “ANALOG” ([page 134](#)).

Connecting a set-top box (Satellite tuner/cable TV)

This section describes how to connect when your satellite tuner or cable TV does not support HDMI connections.

For instructions on HDMI connections, see “Connecting an HDMI-compatible device” ([page 9](#)).

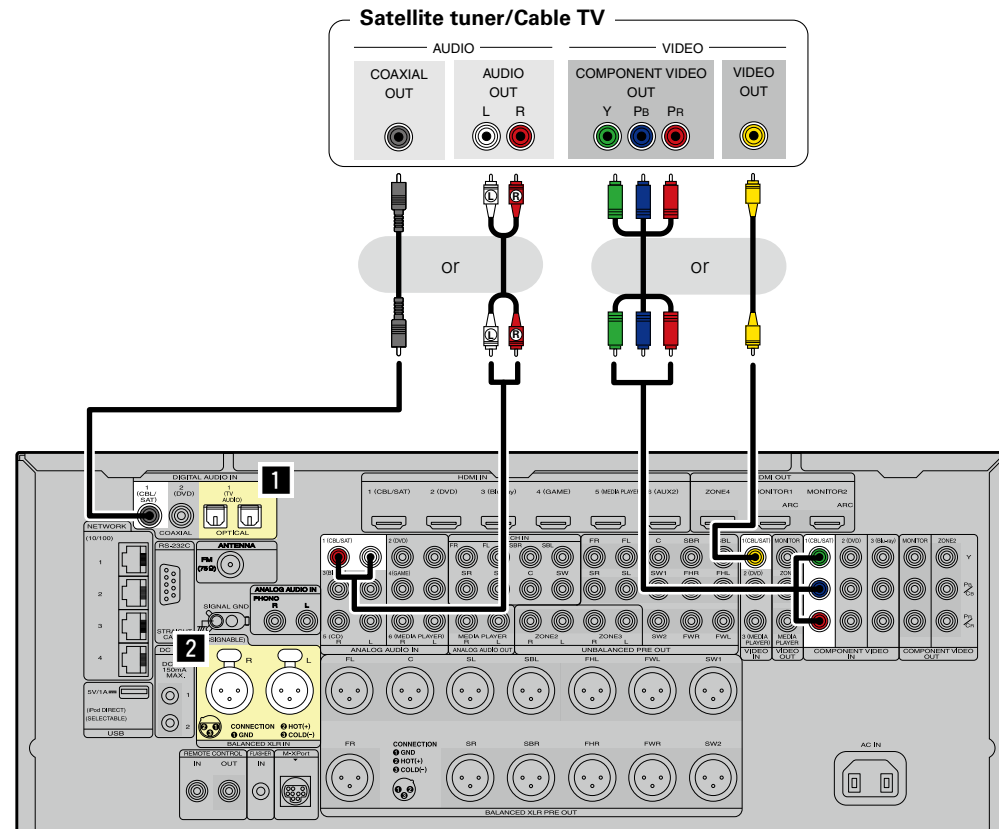

You can also make connections for the part on the connection diagram. To make connections for these connectors, you need to make the input connector settings.

To make connections for connectors indicated by **1**


Assign a connector to which an audio cable is inserted to “CBL/SAT” in “Input Assign” – “DIGITAL” ([page 134](#)).

To make connections for connectors indicated by **2**

Assign a connector to which an audio cable is inserted to “CBL/SAT” in “Input Assign” – “ANALOG” ([page 134](#)).

Connecting a DVD player

This section describes how to connect when your DVD player does not support HDMI connections. For instructions on HDMI connections, see "Connecting an HDMI-compatible device" ([page 9](#)).

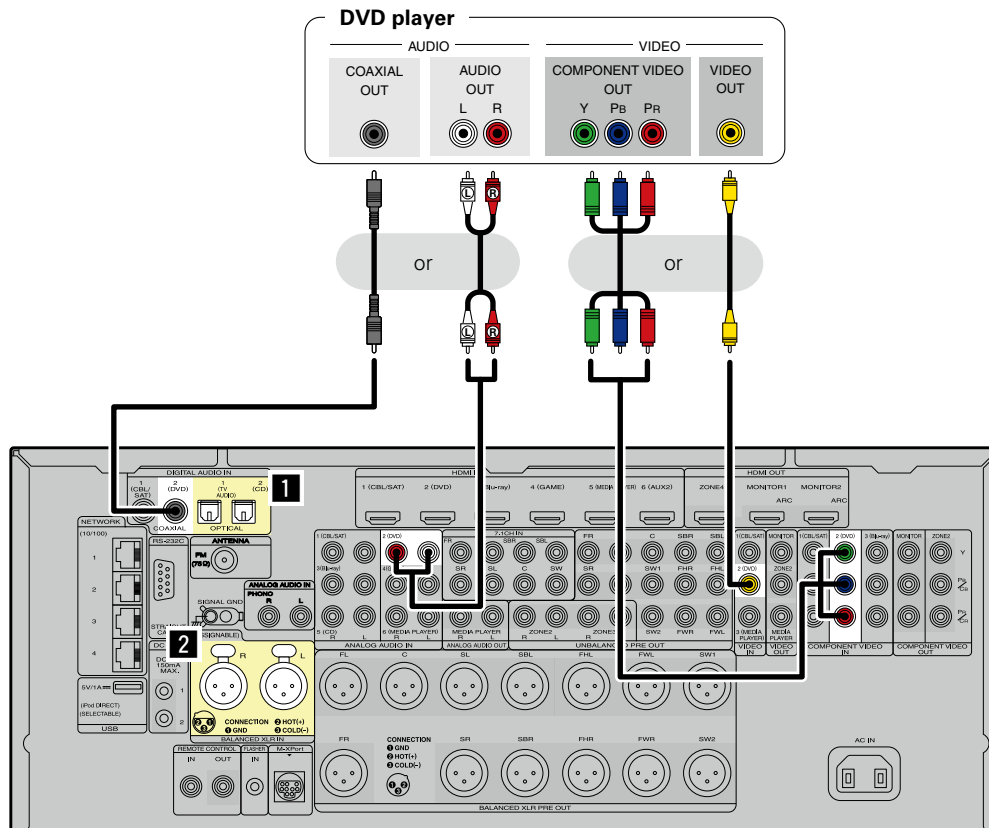

You can also make connections for the part on the connection diagram. To make connections for these connectors, you need to make the input connector settings.

To make connections for connectors indicated by **1**


Assign a connector to which an audio cable is inserted to "DVD" in "Input Assign" – "DIGITAL" ([page 134](#)).

To make connections for connectors indicated by **2**

Assign a connector to which an audio cable is inserted to "DVD" in "Input Assign" – "ANALOG" ([page 134](#)).

Connecting a Blu-ray Disc player

This section describes how to connect when your Blu-ray disc player does not support HDMI connections. For instructions on HDMI connections, see “Connecting an HDMI-compatible device” ([page 9](#)).

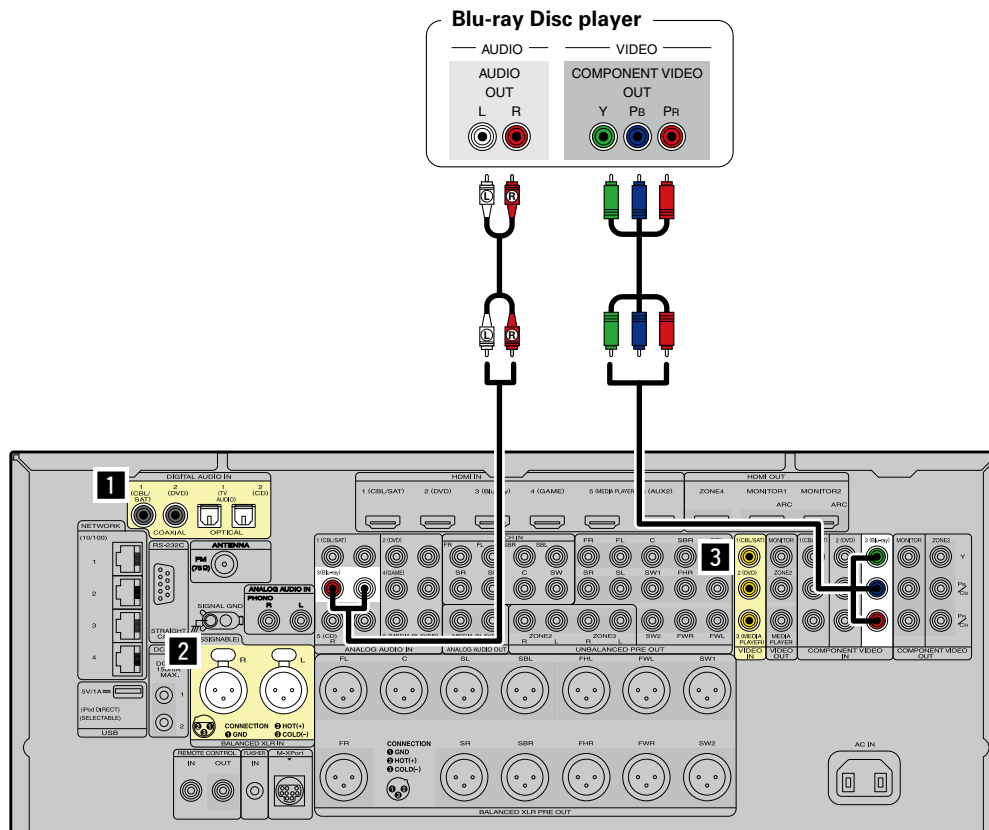

When you want to play back HD Audio (Dolby TrueHD, DTS-HD, Dolby Digital Plus, DTS Express) and Multi-channel PCM with this unit, use an HDMI connection ([page 9](#) “Connecting an HDMI-compatible device”).

You can also make connections for the part on the connection diagram. To make connections for these connectors, you need to make the input connector settings.

To make connections for connectors indicated by **1**

Assign a connector to which an audio cable is inserted to “Blu-ray” in “Input Assign” – “DIGITAL” ([page 134](#)).

To make connections for connectors indicated by **2**


Assign a connector to which an audio cable is inserted to “Blu-ray” in “Input Assign” – “ANALOG” ([page 134](#)).

To make connections for connectors indicated by **3**

Assign a connector to which a video cable is inserted to “Blu-ray” in “Input Assign” – “VIDEO” ([page 134](#)).

Connecting a game console

This section describes how to connect when your game console does not support HDMI connections. For instructions on HDMI connections, see “Connecting an HDMI-compatible device” ([page 9](#)).

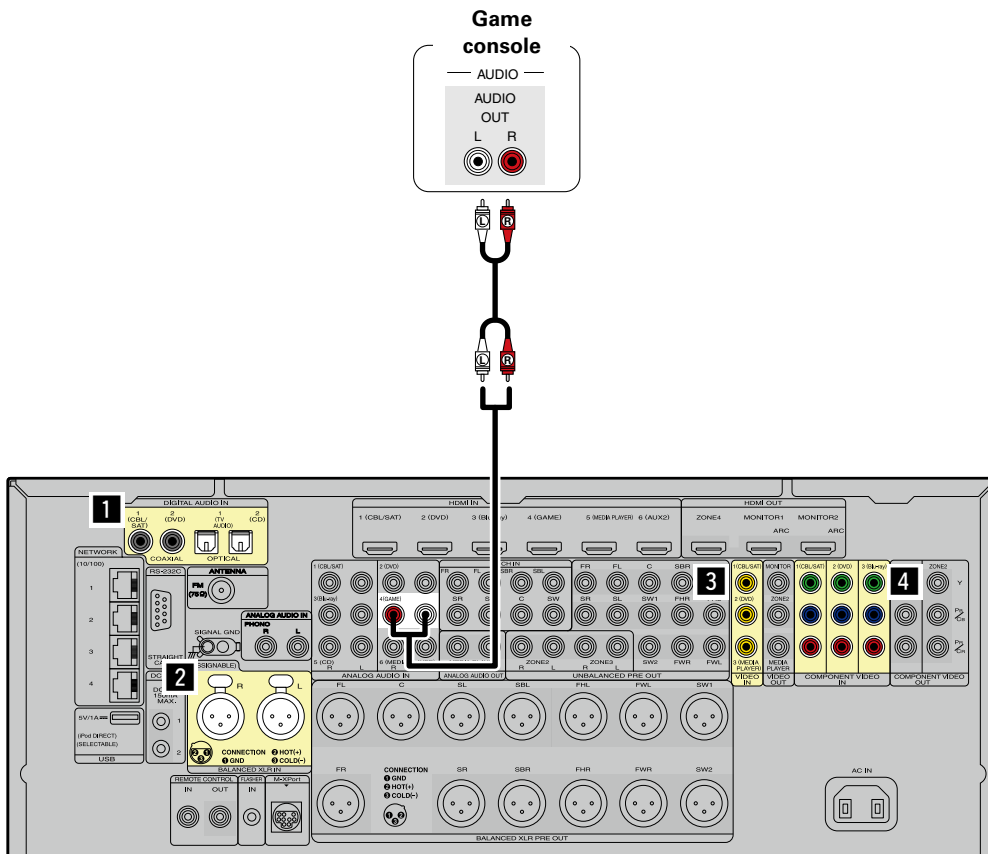

You can also make connections for the part on the connection diagram. To make connections for these connectors, you need to make the input connector settings.

To make connections for connectors indicated by **1**

Assign a connector to which an audio cable is inserted to “GAME” in “Input Assign” – “DIGITAL” ([page 134](#)).

To make connections for connectors indicated by **2**

Assign a connector to which an audio cable is inserted to “GAME” in “Input Assign” – “ANALOG” ([page 134](#)).

To make connections for connectors indicated by **3**

Assign a connector to which a video cable is inserted to “GAME” in “Input Assign” – “VIDEO” ([page 134](#)).

To make connections for connectors indicated by **4**

Assign a connector to which a video cable is inserted to “GAME” in “Input Assign” – “COMP” ([page 134](#)).

Connecting a digital camcorder

This section describes how to connect when your digital camcorder does not support HDMI connections. For instructions on HDMI connections, see “Connecting an HDMI-compatible device” ([page 9](#)).

You can also make connections for the  part on the connection diagram. To make connections for these connectors, you need to make the input connector settings.

To make connections for connectors indicated by **1**


Assign a connector to which an audio cable is inserted to “AUX1” in “Input Assign” – “DIGITAL” ([page 134](#)).

To make connections for connectors indicated by **2**

Assign a connector to which an audio cable is inserted to “AUX1” in “Input Assign” – “ANALOG” ([page 134](#)).

To make connections for connectors indicated by **3**

Assign a connector to which a video cable is inserted to “AUX1” in “Input Assign” – “COMP” ([page 134](#)).

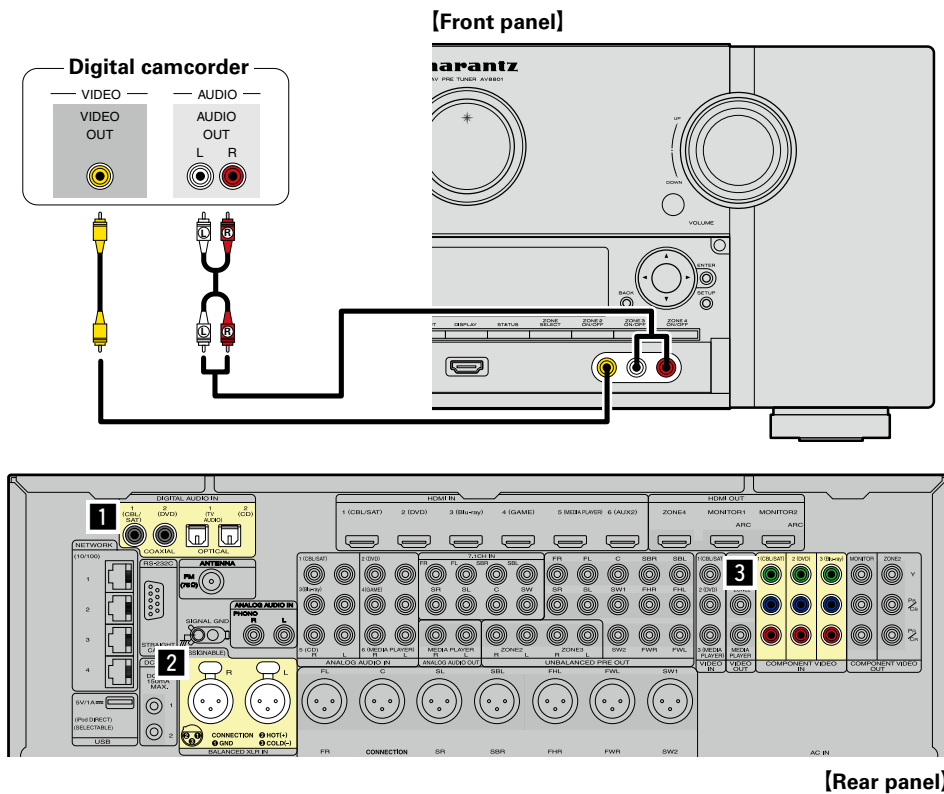


You can enjoy games by connecting a game machine via the AUX1 input connector. In this case, select the input source to “AUX1”.

NOTE

When a non-standard video signal from a game machine or some other source is input, the video conversion function ([page 7](#)) might not operate. In this case, use the monitor output of the same connector as the input.

Connecting a media player

- This section describes how to connect when your media player does not support HDMI connections. For instructions on HDMI connections, see “Connecting an HDMI-compatible device” ([page 9](#)).
- When recording analog audio, use the analog connection.

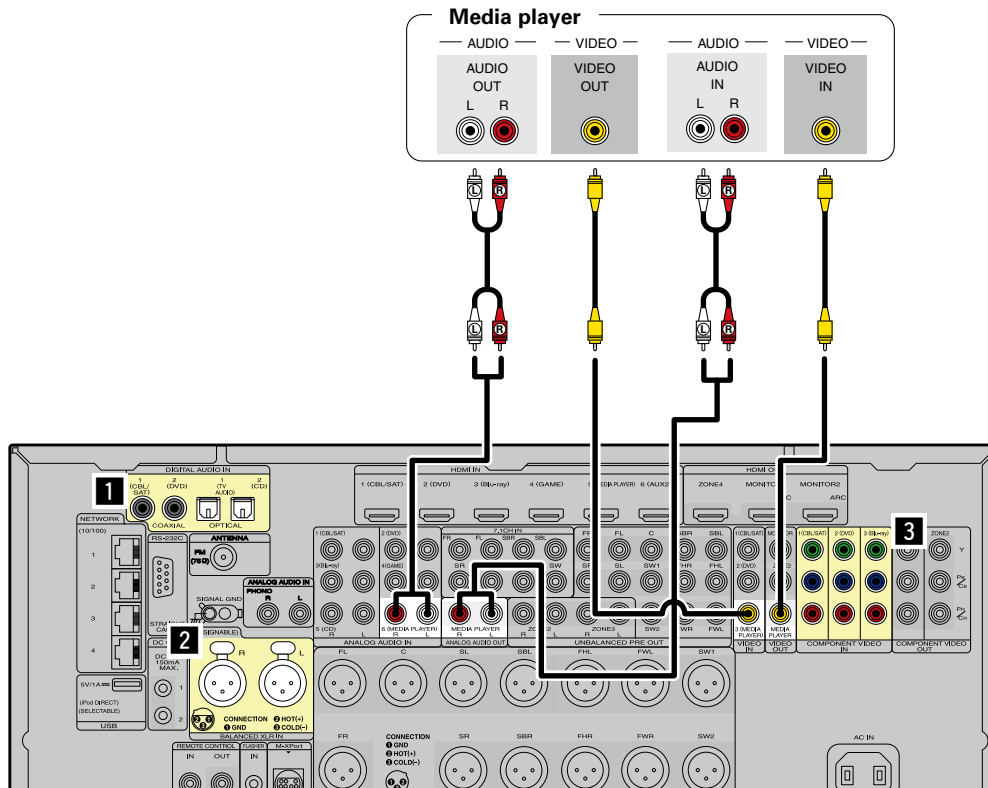

NOTE

- To record video and audio signals through this unit, use the video and audio cables for connection between this unit and the player.
- Audio is only output from the MEDIA PLAYER OUT connectors when the selected input source is analog signal.

You can also make connections for the part on the connection diagram. To make connections for these connectors, you need to make the input connector settings.

To make connections for connectors indicated by **1**

Assign a connector to which an audio cable is inserted to “MEDIA PLAYER” in “Input Assign” – “DIGITAL” ([page 134](#)).

To make connections for connectors indicated by **2**

Assign a connector to which an audio cable is inserted to “MEDIA PLAYER” in “Input Assign” – “ANALOG” ([page 134](#)).

To make connections for connectors indicated by **3**

Assign a connector to which a video cable is inserted to “MEDIA PLAYER” in “Input Assign” – “COMP” ([page 134](#)).

Connecting an iPod or USB memory device to the iPod/USB port

- You can enjoy music stored on an iPod or USB memory device.
- For operating instructions see “Playing an iPod” (page 46) or “Playing a USB memory device” (page 49).




marantz does not guarantee that all USB memory devices will operate or receive power. When using a portable USB connection type HDD of the kind to which an AC adapter can be connected to supply power, use the AC adapter.

NOTE

- **You cannot use the USB ports on the front panel and rear panel simultaneously.** Select and connect the USB port to use (page 78).
- USB memory devices will not work via a USB hub.
- It is not possible to use this unit by connecting the unit's iPod/USB port to a PC via a USB cable.
- Do not use an extension cable when connecting a USB memory device. This may cause radio interference with other devices.
- When connecting an iPhone to this unit, keep the iPhone at least 20 cm away from this unit. If the iPhone is kept closer to this unit and a telephone call is received by the iPhone, noise may be output from this device.
- If the iPod is connected using an iPod cable (commercially available) that is longer than 2 m, sound may not be played correctly. In this case, use a genuine iPod cable, or a cable that is shorter than 1 m.

Cables used for connections

To connect an iPod to this unit, use the USB cable supplied with the iPod.

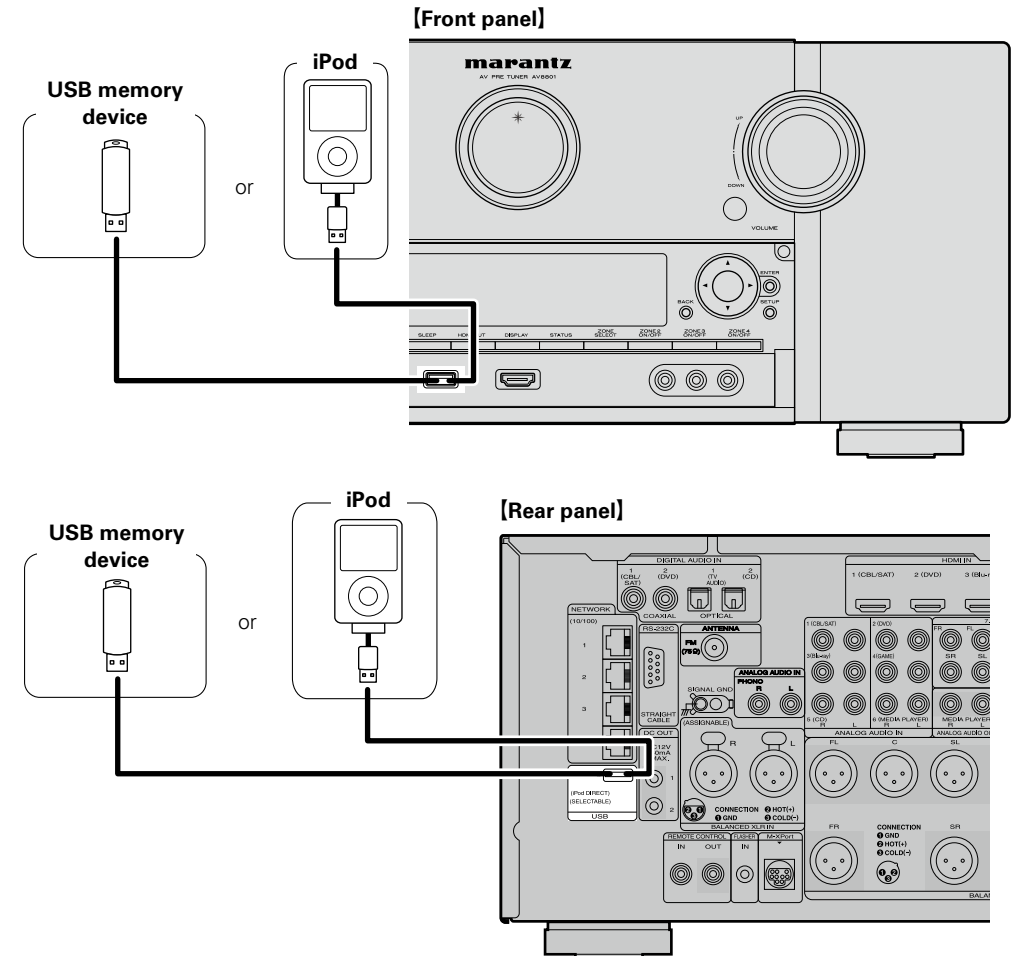

Supported iPod models

• iPod classic



iPod classic
80GB



iPod classic
160GB (2007)



iPod classic
160GB (2009)

• iPod nano



iPod nano
3rd generation
(video)
4GB 8GB



iPod nano
4th generation (video)
8GB 16GB



iPod nano
5th generation (video camera)
8GB 16GB



iPod nano
6th generation
8GB 16GB

• iPod touch



iPod touch
1st generation
8GB 16GB 32GB



iPod touch
2nd generation
8GB 16GB 32GB



iPod touch
3rd generation
32GB 64GB



iPod touch
4th generation
8GB 32GB 64GB

• iPhone



iPhone
4GB 8GB 16GB



iPhone 3G
8GB 16GB



iPhone 3GS
8GB 16GB 32GB



iPhone 4
8GB 16GB 32GB




iPhone 4S
16GB 32GB 64GB

(as of November 2012)

Connecting a CD player

You can enjoy CD sound.

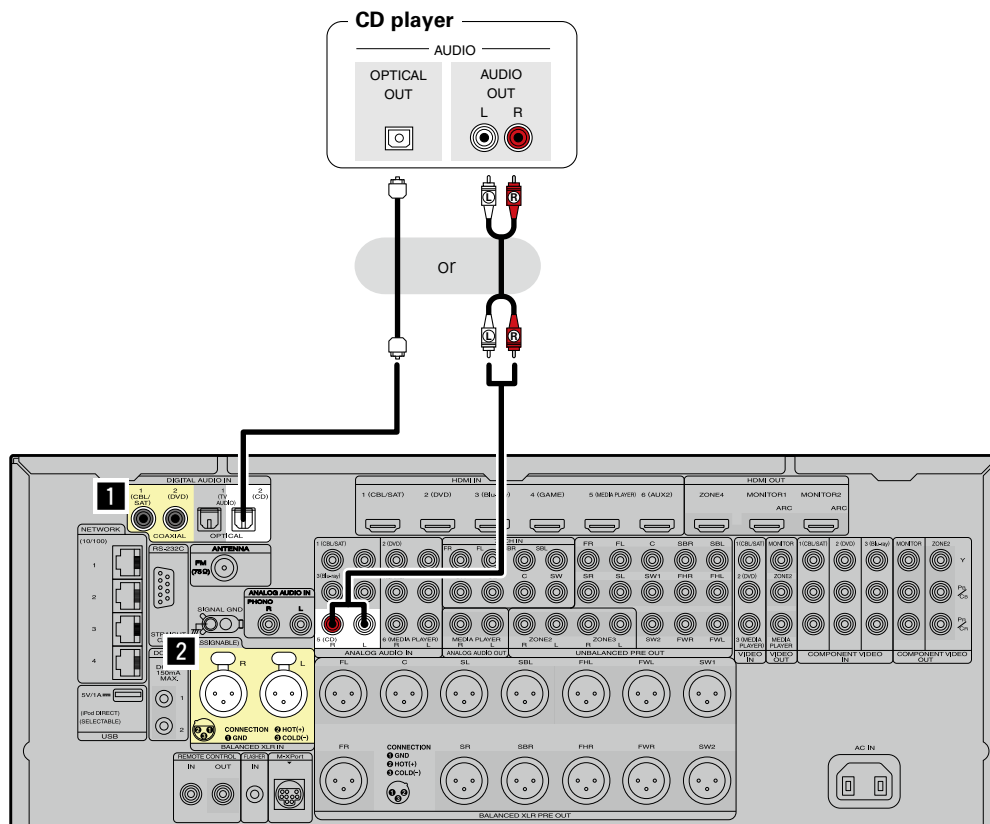

When you want to play back HD Audio (Dolby TrueHD, DTS-HD, Dolby Digital Plus, DTS Express), DSD and Multi-channel PCM with this unit, use an HDMI connection ([page 9](#) "Connecting an HDMI-compatible device").

You can also make connections for the part on the connection diagram. To make connections for these connectors, you need to make the input connector settings.

To make connections for connectors indicated by **1**

Assign a connector to which an audio cable is inserted to "CD" in "Input Assign" – "DIGITAL" ([page 134](#)).

To make connections for connectors indicated by **2**

Assign a connector to which an audio cable is inserted to "CD" in "Input Assign" – "ANALOG" ([page 134](#)).

Connecting a record player


You can enjoy playing records.



- This unit is compatible with record players with an MM cartridge. When you connect to a record player with an MC cartridge, use a commercially available MC head amp or a step-up transformer.
- If you set this unit's input source to "PHONO" and increase the volume without connecting the record player, there may be a "booming" noise from the speakers.

NOTE

The SIGNAL GND terminal of this unit is not a safety ground connection. Connect it to reduce noise when noise is excessive. Note that depending on the record player, connecting the ground line may have the reverse effect of increasing noise. In this case, it is not necessary to connect the ground line.

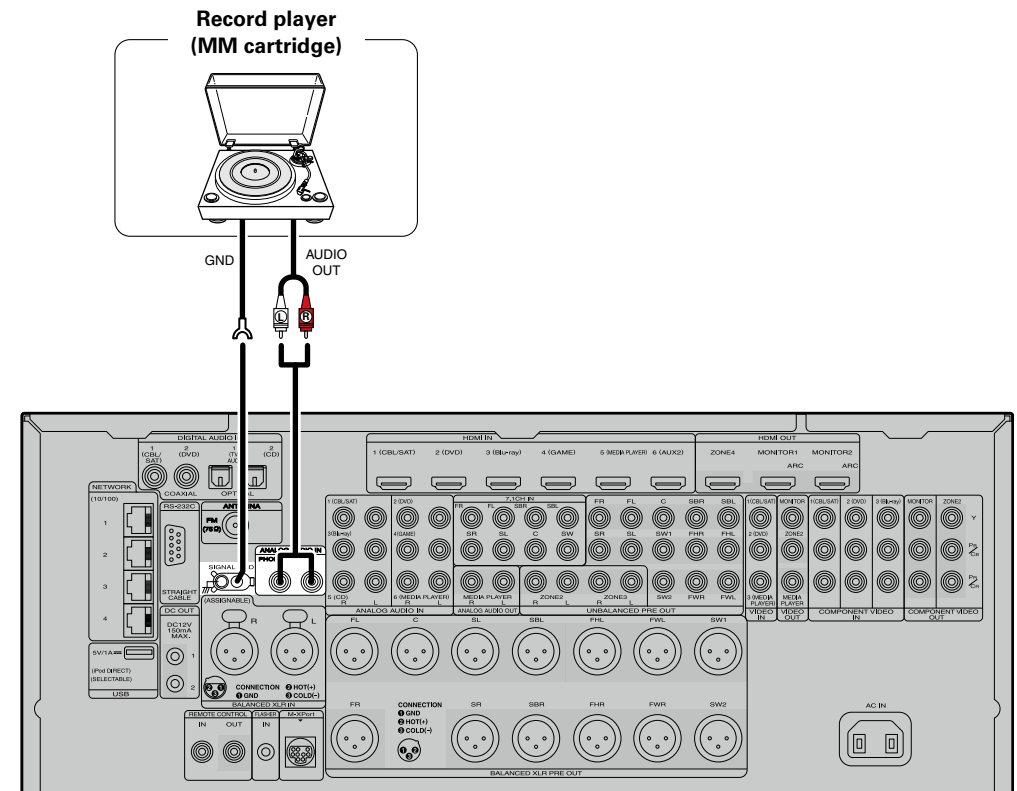


Connecting an FM antenna

- Connect the FM antenna supplied with the unit to enjoy listening to radio broadcasts.
- After connecting the antenna and receiving a broadcast signal ([see page 52](#) “Listening to FM broadcasts”), fix the antenna with tape in a position where the noise level becomes minimal.

NOTE

- Do not connect two FM antennas simultaneously.
- If you are unable to receive a good broadcast signal, we recommend installing an outdoor antenna. For details, inquire at the retail store where you purchased the unit.

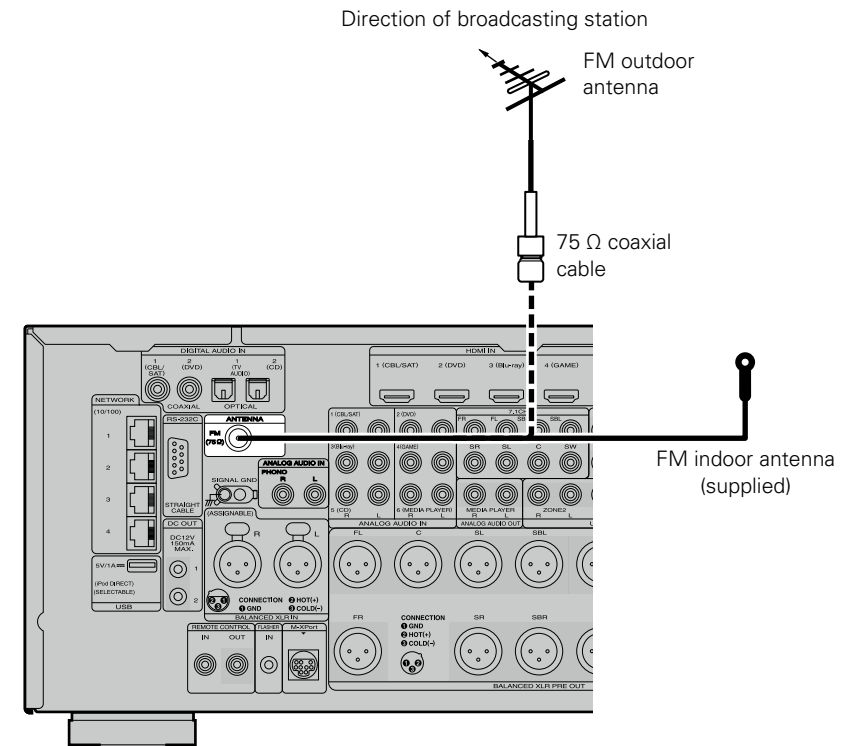


Connecting a wireless receiver (RX101)

- You can connect a wireless receiver (RX101, sold separately) to play back music on your Bluetooth device with this unit.
- To do this, switch the input source to "M-XPort" ([page 43](#) "Selecting the input source").
- This unit supports the A2DP standard of the Bluetooth profile.
- See also the manuals for your wireless receiver and Bluetooth device.




- When connecting your Bluetooth device to the wireless receiver for the first time, pairing is necessary. Once pairing is completed, the communication between your Bluetooth device and the wireless receiver can be established just by connecting them. Pairing is necessary for each Bluetooth device.
- You can also use the wireless receiver as an IR receiver. In this case, disable the remote control signal receiving function ([page 109](#) "Remote lock function").

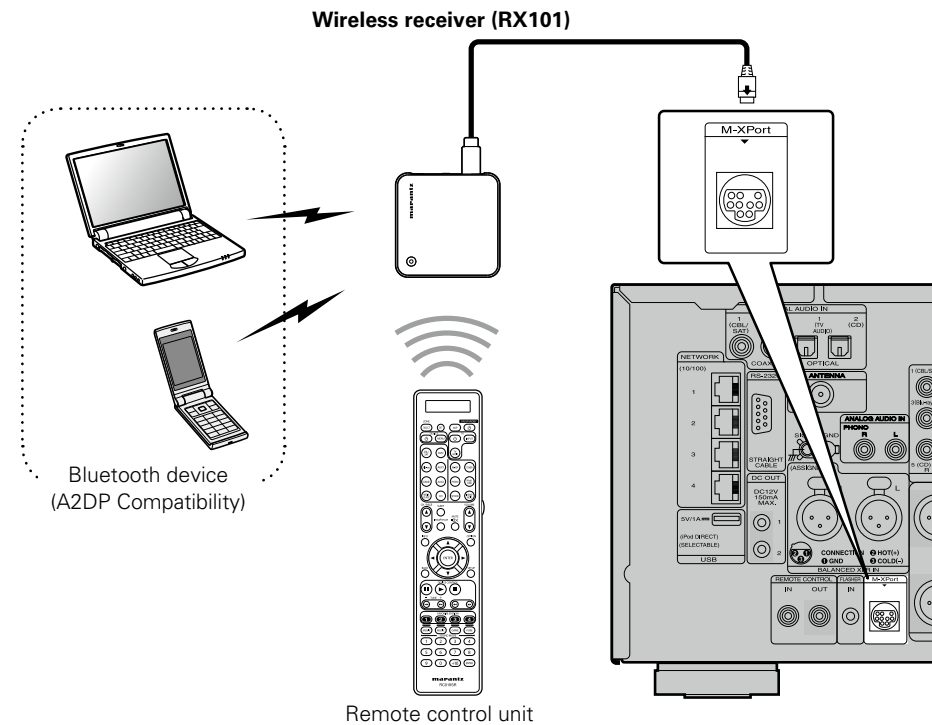

Connecting a device with a multi-channel output connector

- You can connect this unit to an external device fitted with multi-channel sound audio output connectors to enjoy music and video.
- To play analog signals input from 7.1CH IN connectors, set "Input Mode" ([page 136](#)) to "7.1CH IN".
- The video signal can be connected in the same way as a Blu-ray Disc player / DVD player ([page 19](#) "Connecting a DVD player", [page 20](#) "Connecting a Blu-ray Disc player").

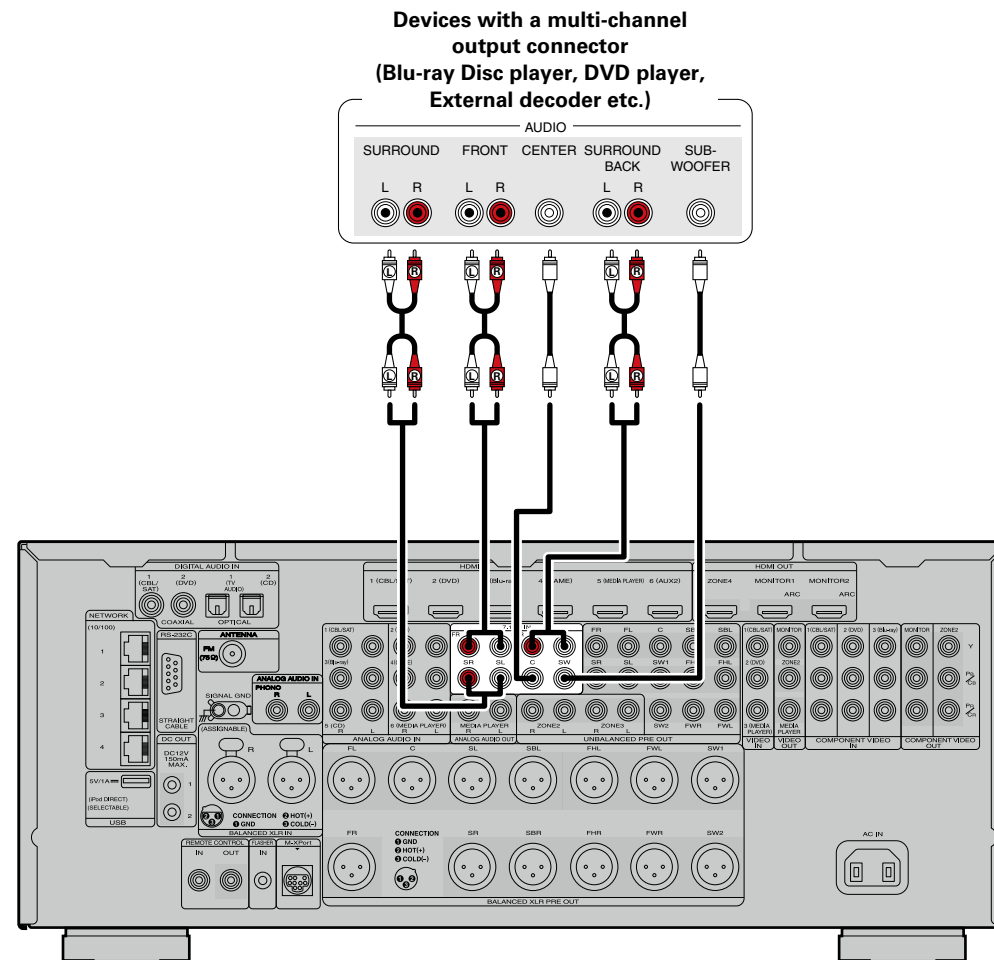

Connecting a power amp

- Connect a power amp (sold separately) to the PRE OUT terminal of this unit.
- This unit has UNBALANCED RCA PRE OUT terminal and BALANCED XLR PRE OUT terminal. Connect to the correct terminal for your power amp. If your power amp has both terminals, connect to either of them.
- Connect the speakers to the power amp.
- For details on speaker connections, see the User Guide for the power amp.
- This section shows how to make a 11.1 ch connection by using a surround speaker. For how to make other speaker connections, see [page 95](#).

[AV8801 BALANCED XLR PRE OUT terminal PIN arrangement]



- ① GND (Ground)
- ② HOT (+)
- ③ COLD (-)


The PIN arrangement in this device uses the European method. In the USA method, ② is COLD, and ③ is HOT. When connecting a device that utilizes the USA type of PIN arrangement, replace the ② and ③ plugs on one side of the balanced cable.

NOTE


Do not short the HOT and GND or COLD and GND for use.

Example of connections to marantz MM8077 power amp

□ Connecting the unbalanced RCA PRE OUT terminal

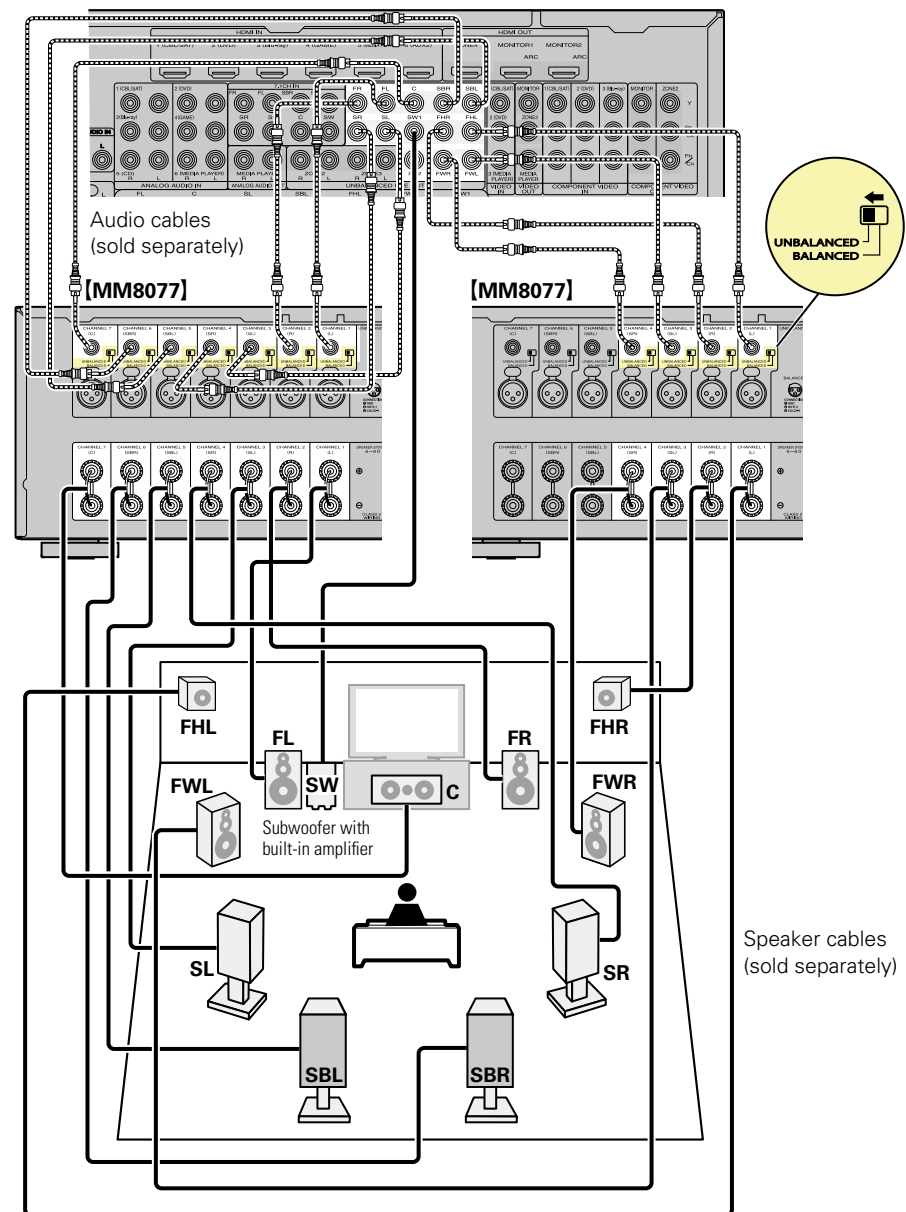

Connecting the balanced XLR PRE OUT terminal

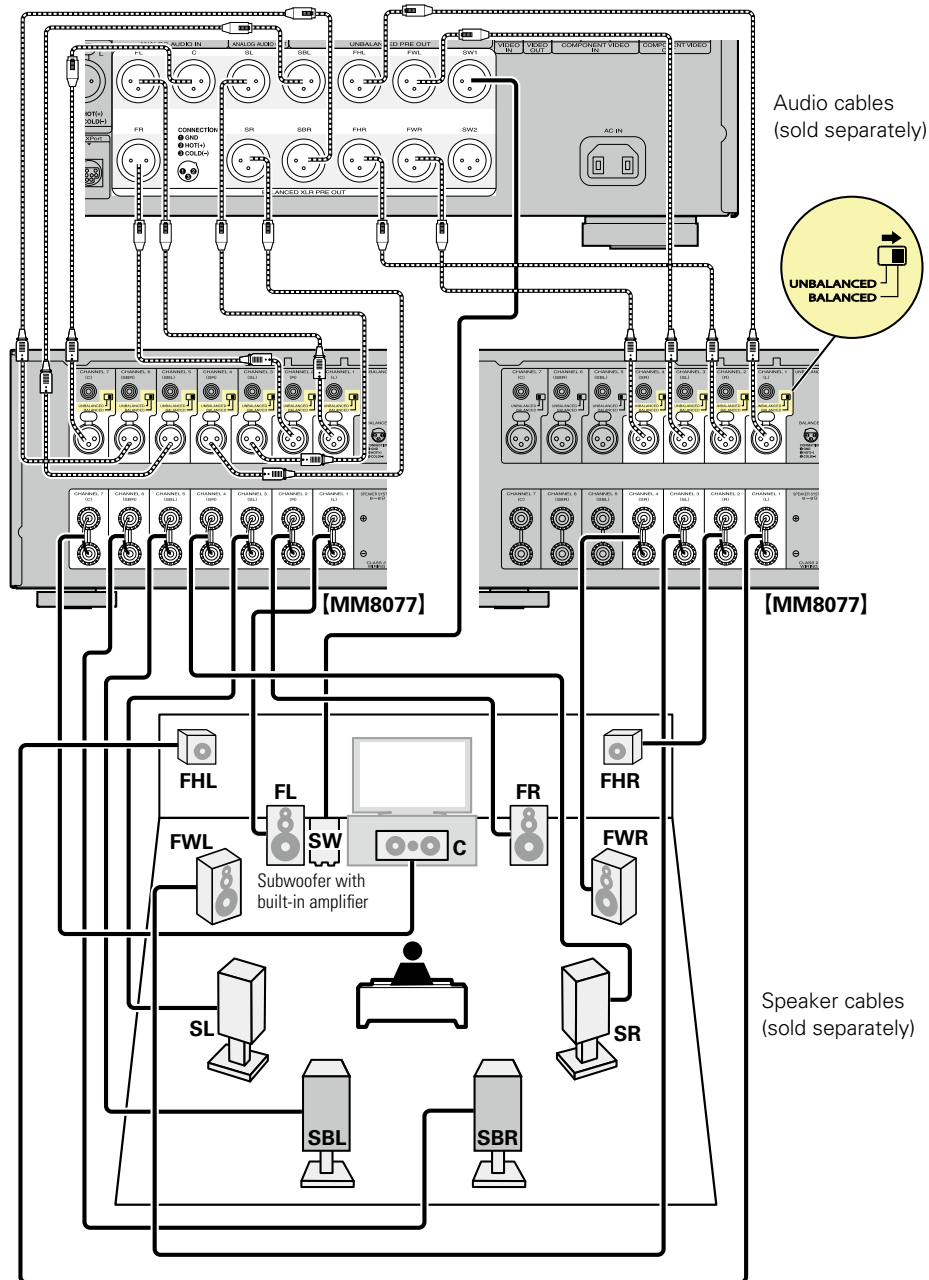


Connecting to a home network (LAN)

You can connect this unit to your home network (LAN) to perform various types of playbacks and operations as follows. This unit is also equipped with a switching hub function. Make network connections for this unit by carefully reading information on this page.

- Playback of network audio such as the Internet Radio and Media Servers
- Playback of music from online services
- AirPlay
- Operations on this unit via the network

In addition, when an updated firmware becomes available for improving this unit, the update information is delivered from us to this unit over the network. You can then download the latest firmware. For more information, on the menu, select "Update" ([page 149](#)).

Network settings are necessary. See "Network" on the menu ([page 141](#)) for more information on network setting.

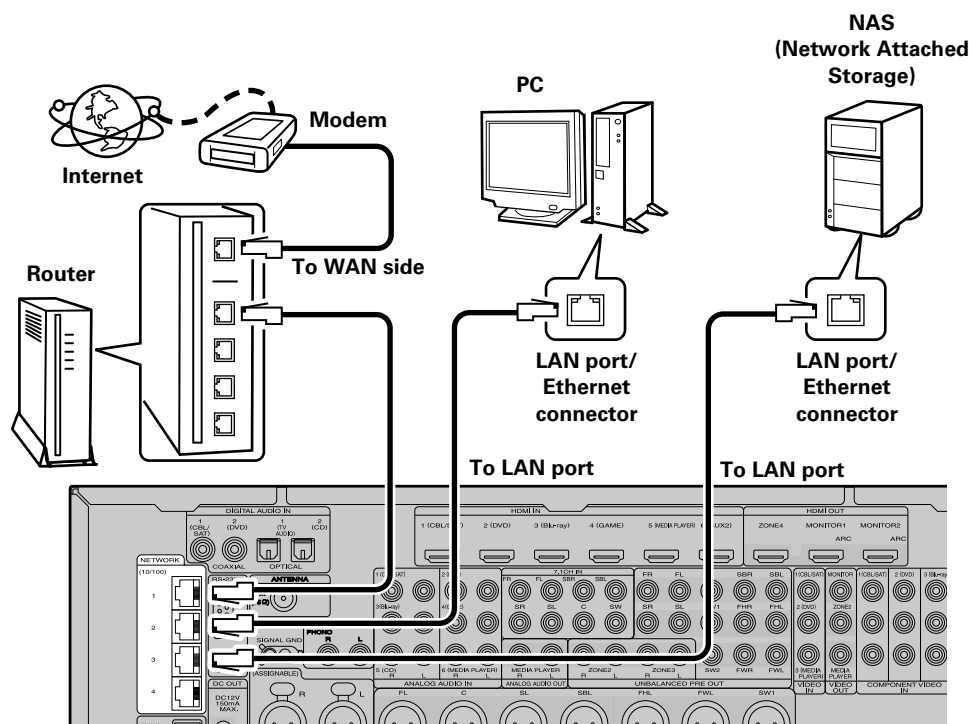

The figure above is an example. Connect the Ethernet cable to any of the NETWORK connectors from 1 – 4.

For connections to the Internet, contact an ISP (Internet Service Provider) or a computer shop.

Required system

❑ Broadband internet connection

❑ Modem

Device that connects to the broadband circuit and conducts communications on the Internet. A type that is integrated with a router is also available.


❑ Router

When using this unit, we recommend you use a router equipped with the following functions:

- Built-in DHCP server
This function automatically assigns IP addresses on the LAN.
- Built-in 100BASE-TX switch
When connecting multiple devices, we recommend a switching hub with a speed of 100 Mbps or greater.

NOTE

- Connect the router to one of the NETWORK connectors on this unit. Furthermore, do not use more than 2 Ethernet cables when connecting this unit with a router.
- When connecting a hub to this unit, connect using just 1 Ethernet cable per hub. Connecting with two or more Ethernet cables may cause a malfunction.
- To use a NETWORK connector as a hub, set "Network" ([page 142](#)) in the menu to "Always On" (default).
- The loop detection function is not provided.
- Do not connect in the following ways.

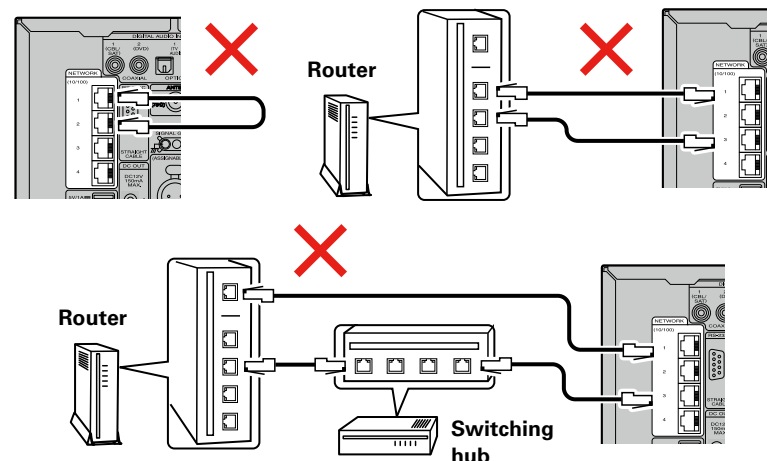

Ethernet cable

(CAT-5 or greater recommended)

- Use only a shielded STP or ScTP Ethernet cable which is available at retailer.
- The normal shielded-type Ethernet cable is recommended. If a flat-type cable or unshielded-type cable is used, other devices could be affected by noise.
- This product is equivalent to the crossover cable.




- If you have an Internet provider contract for a line on which network settings are made manually, make the settings at “Network” (page 141).
- With this unit, it is possible to use the DHCP and Auto IP functions to make the network settings automatically.
- When using this unit with the broadband router’s DHCP function enabled, this unit automatically performs the IP address setting and other settings.
When using this unit connected to a network with no DHCP function, make the settings for the IP address, etc., at “Network” (page 141).
- When setting manually, check the setting contents with the network administrator.

NOTE

- A contract with an ISP is required to connect to the Internet.
No additional contract is needed if you already have a broadband connection to the Internet.
- The types of routers that can be used depend on the ISP. Contact an ISP or a computer shop for details.
- marantz assumes no responsibility whatsoever for any communication errors or troubles resulting from customer’s network environment or connected devices.
- This unit is not compatible with PPPoE. A PPPoE-compatible router is required if you have a contract for a type of line set by PPPoE.
- To listen to audio streaming, use a router that supports audio streaming.

Connecting the power cord

After completing all the connections, insert the power plug into the power outlet.

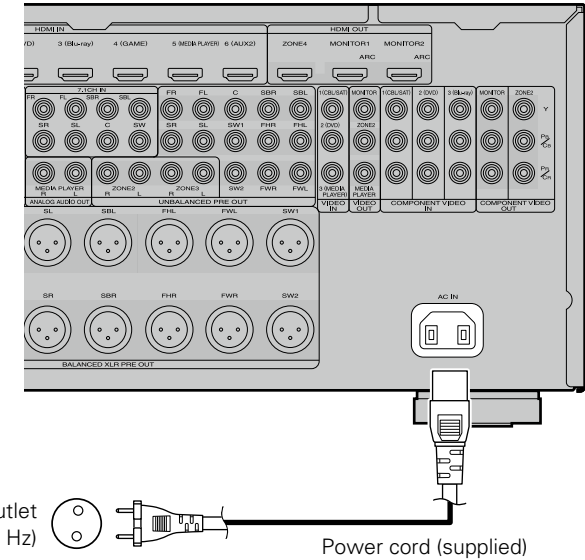

To household power outlet
(AC 230 V, 50/60 Hz)

Power cord (supplied)

NOTE

- **Do not plug in the power cord until all connections have been completed.**
- **Do not plug in the power cord until all connections have been completed. However, when the “Setup Assistant” is running, follow the instructions in the “Setup Assistant” (page 7) screen for making connections. (During “Setup Assistant” operation, the input/output connectors do not conduct current.)**
- Do not bundle power cords together with connection cables. Doing so can result in humming or noise.

Setup

Here, we explain “Audyssey® Setup”, which allows you to automatically make the optimal settings for your speakers, and “Network”, which allows you to connect this unit to a home network (LAN).

This unit lets you play via your home network (LAN) music files stored on a computer and music content such as that from Internet Radio.

❑ **Speaker connection** (👉 [page 95](#))

❑ **Set up speakers (Audyssey® Setup)** (👉 [page 35](#))

❑ **Making the network settings (Network)**
(👉 [page 42](#))

Playback (Basic operation) (👉 [page 43](#))

Selecting a listening mode (Sound Mode)
(👉 [page 86](#))

Playback (Advanced operation) (👉 [page 102](#))



Set up speakers (Audyssey® Setup)



 
The acoustic characteristics of the connected speakers and listening room are measured and the optimum settings are made automatically. This is called “Audyssey® Setup”.

To perform measurement, place the setup microphone in multiple locations all around the listening area. For best results, we recommend you measure in six or more positions, as shown in the illustration (up to eight positions).

- When performing Audyssey® Setup, Audyssey MultEQ® XT 32/Audyssey Dynamic EQ®/Audyssey Dynamic Volume® functions become active (👉 [page 123, 124](#)).
- To set up the speakers manually, use “Speakers” (👉 [page 137](#)) on the menu.

NOTE


- Make the room as quiet as possible. Background noise can disrupt the room measurements. Close windows and turn off the power on electronic devices (TVs, radios, air conditioners, fluorescent lights, etc.). The measurements could be affected by the sounds emitted by such devices.
- During the measurement process, place cell phones outside the listening room. Cell phone signals could disrupt the measurements.
- Do not unplug the setup microphone from the main unit until Audyssey® Setup is completed.
- Do not stand between the speakers and setup microphone or allow obstacles in the path while the measurements are being made. This will cause inaccurate readings.
- During the measurement process, loud test sounds may be played, but this is part of normal operation. If there is background noise in room, these test signals will increase in volume.
- Operating **VOLUME ▲▼** on the remote control unit or **VOLUME** on the main unit during the measurements will cancel the measurements.
- Measurement cannot be performed when headphones are connected. Unplug the headphones before performing Audyssey® Setup.




About setup microphone placement

- Measurements are performed by placing the setup microphone successively at multiple positions throughout the entire listening area, as shown in **[Example ①]**. For best results, we recommend you measure in six or more positions, as shown in the illustration (up to eight positions).
- Even if the listening environment is small as shown in **[Example ②]**, measuring at multiple points throughout the listening environment results in more effective correction.

[Example ①]

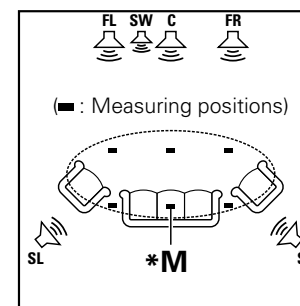

[Example ②]

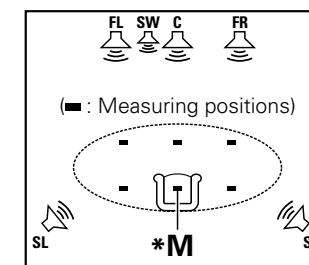

FL Front speaker (L)
FR Front speaker (R)
C Center speaker

SW Subwoofer
SL Surround speaker (L)
SR Surround speaker (R)


About the main listening position (*M)

The main listening position is the position where listeners would normally sit or where one would normally sit alone within the listening environment. Before starting Audyssey® Setup, place the setup microphone in the main listening position. Audyssey MultEQ® XT 32 uses the measurements from this position to calculate speaker distance, level, polarity, and the optimum crossover value for the subwoofer.

1 Prepare the included setup microphone

Mount the setup microphone on a tripod or stand and place it in the main listening position.

When placing the setup microphone, adjust the height of the sound receptor to the level of the listener's ear.

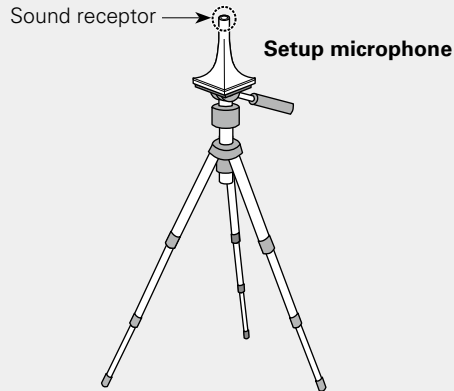

If you do not have a tripod or stand, set up the microphone on, for example, a seat without a back.

NOTE

- Do not hold the setup microphone in your hand during measurements.
- Avoid placing the setup microphone close to a seat back or wall as sound reflections may give inaccurate results.

About Audyssey Sub EQ HT™

Audyssey Sub EQ HT™ makes the integration seamless by first compensating for any level and delay differences between the two subwoofers and then applying Audyssey MultEQ® XT 32 to both subwoofers together.

- * To run Audyssey Sub EQ HT™ you must select "Measure (2 spkrs)" in "Set up "Channel Select"" ([page 98](#)).

2 Set up the subwoofer

If using a subwoofer capable of the following adjustments, set up the subwoofer as shown below.

For details, see your subwoofer's manual.

□ When using a subwoofer with a direct mode

Set the direct mode to "On" and disable the volume adjustment and crossover frequency setting.

□ When using a subwoofer without a direct mode

Make the following settings:


- **Volume** : "12 o'clock position"
- **Crossover frequency** : "Maximum/Highest Frequency"
- **Low pass filter** : "Off"
- **Standby mode** : "Off"

NOTE

When using 2 subwoofers at the same time, before starting Audyssey® Setup, adjust the volume of the subwoofers by using "Subwoofer Level" ([page 120](#)) from the menu. You cannot set the volume for individual subwoofers.

3 Set up the zone mode

Press **ZONE SELECT** to switch "MAIN".

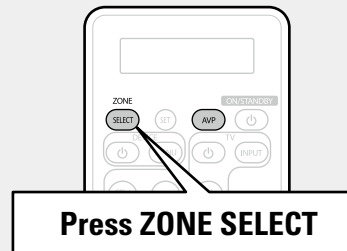


NOTE


When using a remote control with preset codes registered ([page 154](#)), press **AVP** to set the remote control to the AVP-operation mode before operation.

Preparation

4 Connect the setup microphone to the SETUP MIC jack of this unit.


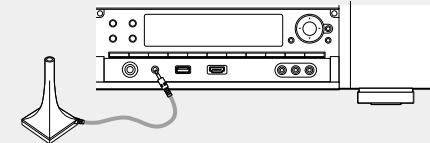


When the setup microphone is connected, the following screen is displayed.

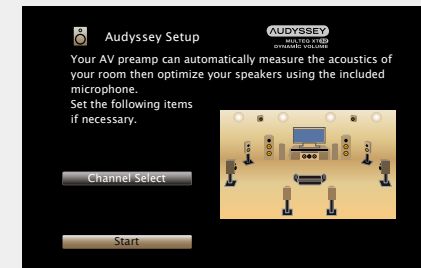

- If unused channels are set with "Channel Select", measuring time can be shortened. For setting, perform steps 3 to 9 of "Set up "Channel Select"" ([page 98](#)).

Preparation (Continued)

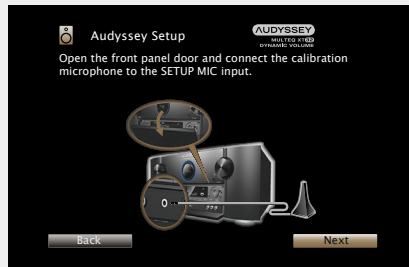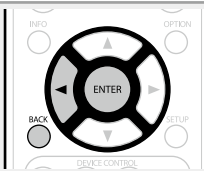5 Select “Start” and then press **ENTER**.**6** Select “Next” and then press **ENTER**.
The subwoofer volume setting screen is displayed.

Detection & Measurement (Main)


This step automatically checks the speaker configuration and speaker size, and calculates the channel level, distance, and crossover frequency. It also corrects distortion in the listening area.

7 Select “Begin Test” and then press **ENTER**.
The volume level for the subwoofer is measured.

- If the volume level for the subwoofer is not appropriate, an error message is displayed. See “Subwoofer level error message and how to adjust” ([page 41](#)) and adjust the volume level for the subwoofer.
- Measurement requires several minutes.
- To stop measuring, select “Cancel” and then press **ENTER**.

8 The detected speakers are displayed.

- The illustration below shows an example of when the front speakers, center speaker, subwoofer, surround and surround back speakers have been detected.

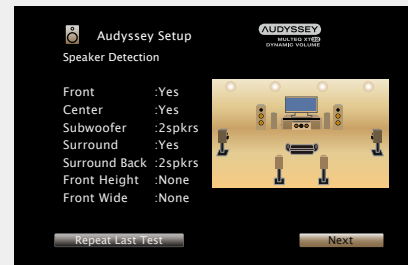**NOTE**

If a connected speaker is not displayed, the speaker may not be connected correctly. Check the speaker connection.

9 Select “Next” and then press **ENTER**.**NOTE**

If “Caution!” is displayed on TV screen:

Go to “Error messages” ([page 40](#)). Check any related items, and perform the necessary procedures.

If the problem is resolved, return and restart “Audyssey® Setup”.

Going back to the previous screen

Select “Back” and then press **ENTER**.

When measuring has stopped

- ① Press **BACK** to display the popup screen.
- ② Press < to select “Yes”, and then press **ENTER**.

Setting up the speakers again



Repeat the operation from step 4.

Measurement (2nd – 8th)

- In this step, you will perform measurements at multiple positions (two to eight positions) other than the main listening position.
- Just one position can be measured but measuring multiple positions increases the accuracy of the correction of acoustic distortion within the listening area.

10 Move the setup microphone to position 2, select “Continue”, and then press ENTER.

The measurement of the second position starts. Measurements can be made in up to eight positions.

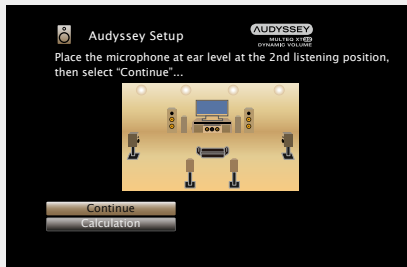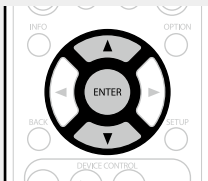


- To skip measuring the third and subsequent listening position, use $\Delta \nabla$ to select “Calculation” and press **ENTER** to proceed to step 13.
- To measure the second position again, use $\Delta \nabla$ to select “Repeat Last Test” and press **ENTER**.

Calculation


11 Repeat step 10, measuring positions 3 to 8.

When measurement of position 8 is completed, a “Measurements finished.” message is displayed.

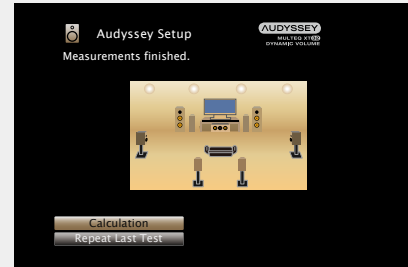

12 Select “Calculation” and then press ENTER.



Measuring results are analyzed, and the frequency response of each speaker in the listening room is determined.

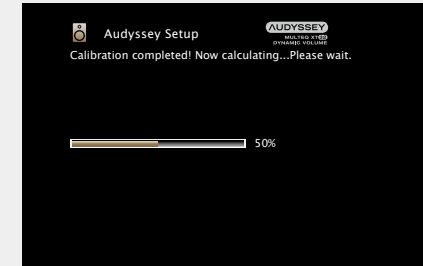

- Analysis takes several minutes to complete. The more speakers and measurement positions that there are, the more time it takes to perform the analysis.

Check

13 Use Δ / ∇ to select the item you want to check, and then press **ENTER**.

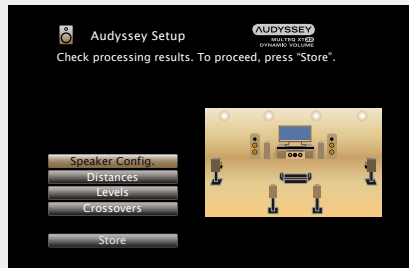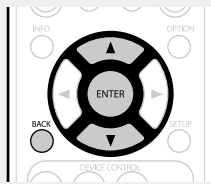



- Subwoofers may measure a greater reported distance than the actual distance due to added electrical delay common in subwoofers.
- If you want to check another item, press **BACK**.

NOTE

- If the result differs from the actual connection status, or if “Caution!” is displayed, see “Error messages” ([page 40](#)). Then carry out Audyssey® Setup again.
- If you change speaker positions or orientation, perform Audyssey® Setup again to find the optimal equalizer settings.

Store

14 Select “Store” and then press **ENTER**.
Save the measurement results.

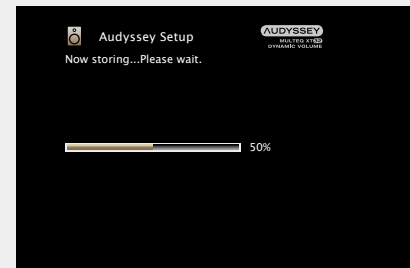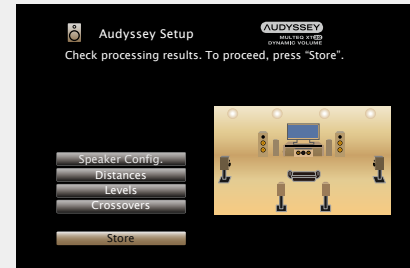

- Saving the results requires about 20 seconds.
- During saving of measurements results, “Now storing...Please wait.” is displayed. When saving is completed, “Storing complete. Audyssey® Setup is now finished. Please unplug microphone.” is displayed.

NOTE


During saving of measurement results, be sure not to turn off the power.

Finish

15 Unplug the setup microphone from the unit’s **SETUP MIC** jack.



16 Set Audyssey Dynamic Volume®.

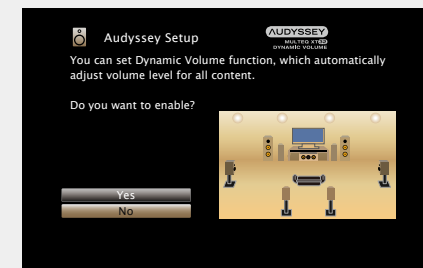

- This feature adjusts the output volume to the optimal level while constantly monitoring the level of the audio input to the unit. Optimal volume control is performed automatically without any loss in the dynamism and clarity of the sound when, for example, the volume suddenly increases for commercials shown during television programs.

When turning Dynamic Volume on

- Press Δ to select “Yes”, and then press **ENTER**.

The unit automatically enters “Medium” ([page 124](#)) mode.

When turning Dynamic Volume off

- Press ∇ to select “No”, and then press **ENTER**.






NOTE

After performing Audyssey® Setup, do not change the speaker connections or subwoofer volume. In event of a change, perform Audyssey® Setup again.

Error messages

NOTE

- An error message is displayed if Audyssey® Setup could not be completed due to speaker placement, the measurement environment, etc. If an error message is displayed, check the relevant items and perform the necessary measures. Then perform Audyssey® Setup again.
- If the result still differs from the actual connection status after remeasurement or the error message still appears, it is possible that the speakers are not connected properly. Turn this unit off, check the speaker connections and repeat the measurement process from the beginning.
- Be sure to turn off the power before checking speaker connections.
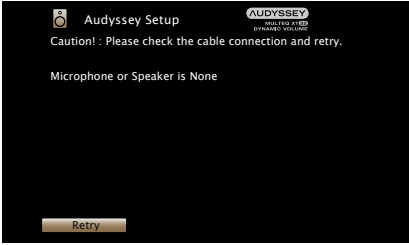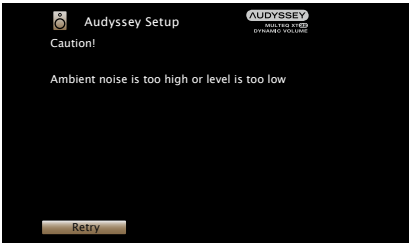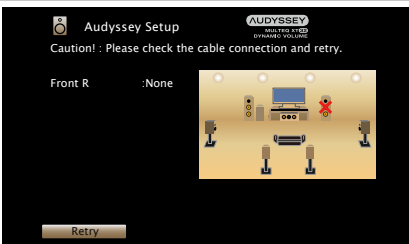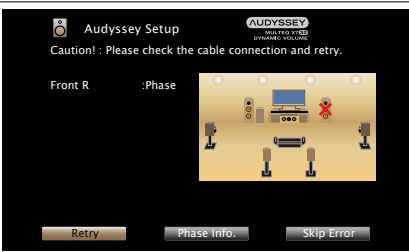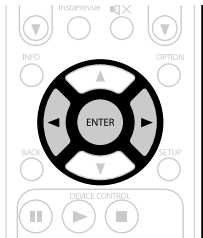
| Examples | Error details | Measures |
|---|--|--|
|  <p>Audyssey Setup CAUTION! : Please check the cable connection and retry. Microphone or Speaker is None Retry</p> | <ul style="list-style-type: none"> • The connected setup microphone is broken, or a device other than the supplied setup microphone is connected. • Not all speakers could be detected. | <ul style="list-style-type: none"> • Connect the included setup microphone to the SETUP MIC jack of this unit. • Check the speaker connections. |
|  <p>Audyssey Setup CAUTION! Ambient noise is too high or level is too low Retry</p> | <ul style="list-style-type: none"> • There is too much noise in the room for accurate measurements to be made. • Speaker or subwoofer sound is too low for accurate measurements to be made. | <ul style="list-style-type: none"> • Either turn off any device generating noise or move it away. • Perform again when the surroundings are quieter. • Check the speaker installation and the direction in which the speakers are facing. • Adjust the subwoofer's volume. |
|  <p>Audyssey Setup CAUTION! : Please check the cable connection and retry. Front R :None Retry</p> | <ul style="list-style-type: none"> • The displayed speaker could not be detected. (The screen on the left indicates that the front right speaker cannot be detected.) | <ul style="list-style-type: none"> • Check the connections of the displayed speaker. |
|  <p>Audyssey Setup CAUTION! : Please check the cable connection and retry. Front R :Phase Retry Phase Info. Skip Error</p> | <ul style="list-style-type: none"> • The displayed speaker is connected with the polarity reversed. (The screen on the left indicates that the polarity phases of the front right speakers are reversed.) | <ul style="list-style-type: none"> • Check the polarity of the displayed speaker. • For some speakers, this error message may be displayed even if the speaker is properly connected. If you are sure the connection is correct, use ◀▶ to select "Skip Error", then press ENTER.  |


❑ Subwoofer level error message and how to adjust

The optimal level of each subwoofer channel for Audyssey Setup measurement is 75 dB.

During subwoofer level measurement (see [page 35](#) “Set up speakers (Audyssey® Setup)”), an error message is displayed when one level of subwoofers is outside the 72 – 78 dB range.


When using a subwoofer with built-in amplifier (active type), adjust the subwoofer volume so that the subwoofer level is within the 72 to 78 dB range.

[Error message]

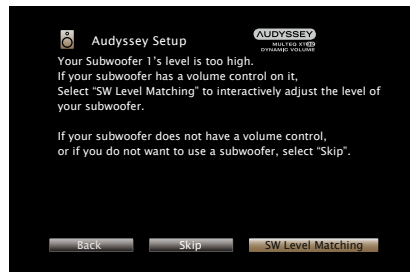


1 Select “SW Level Matching” and then press ENTER.

Subwoofer level measurement begins. During measuring, a “Calibrating...” message is displayed. The measured level appears on the level indicator after about 3 to 5 seconds.

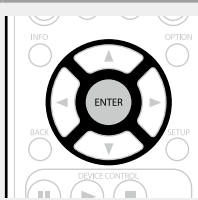

- If the measured level is outside the 72 to 78 dB range, the level indicator is red.
- When measuring finishes, select “Back” and then press **ENTER**.

2 Adjust the volume control on your subwoofer so that the measured level is within the 72 to 78 dB range.

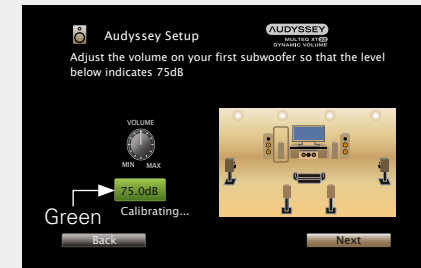

- If the measured level is within the 72 to 78 dB range, the level indicator is green.

3 When the measured level is within the 72 to 78 dB range, select “Next” and then press ENTER.

- If you use two subwoofers, the second subwoofer’s adjust will be started. Repeat the operation from step 2, 3.




When you use two subwoofers, adjust each subwoofer so that the volume levels of Subwoofer 1 and Subwoofer 2 are appropriate for your needs.

Check Results


This function enables you to check the measurement results and equalizer characteristics after Audyssey® Setup.

- 1** Press **SETUP** to display the menu on the TV screen.
- 2** Use Δ / ∇ to select “Speakers” – “Audyssey® Setup” and then press **ENTER** or \triangleright .
- 3** Use Δ / ∇ to select “Check Results” and then press **ENTER**.

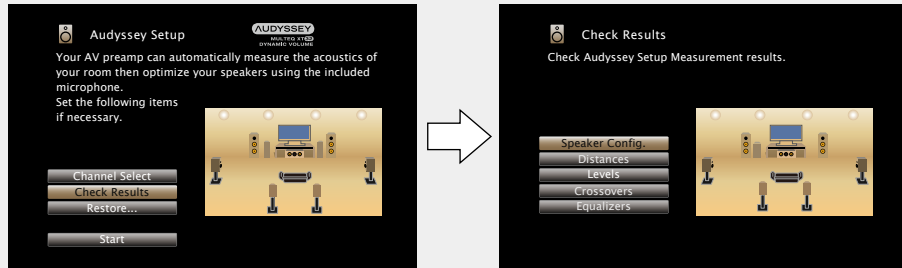

- 4** Use Δ / ∇ to select the item you want to check, then press **ENTER**.
Measurement results for each speaker are displayed.

| | |
|------------------------|--|
| Speaker Config. | Check the speaker configuration. |
| Distances | Check the speaker distance. |
| Levels | Check the speaker channel level. |
| Crossovers | Check the speaker crossover frequency. |
| Equalizers | Check the equalizer. |

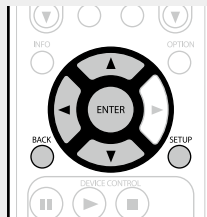

- If “Equalizers” is selected, press Δ / ∇ to select equalizing curve (“Audyssey” or “Audyssey Flat”) to be checked.
Use Δ / ∇ to switch the display between the different speakers.

- 5** Press \triangleleft or **BACK**.
The confirmation screen reappears. Repeat step 2.

Retrieving Audyssey® Setup settings

If you set “Restore...” to “Restore”, you can return to Audyssey® Setup measurement result (value calculated at the start by MultEQ® XT 32) even when you have changed each setting manually.



Making the network settings (Network)



This unit can be connected to a home network (LAN) to listen to Internet Radio or play back music files and still image (JPEG) files stored on a computer.

- 1** Connect the Ethernet cable (👉 [page 33](#) “Connecting to a home network (LAN)”).
- 2** Turn on this unit (👉 [page 43](#)).
This unit performs automatic network setup due to the DHCP function.
When connecting to a network that has no DHCP function, perform the setting in “Settings” (👉 [page 143](#)).

Playback (Basic operation)

Setup (page 35)

- ❑ Turning the power on (page 43)
- ❑ Selecting the input source (page 43)
- ❑ Adjusting the master volume (page 44)
- ❑ Turning off the sound temporarily (page 44)

❑ Playing a Blu-ray Disc player/DVD player (page 44)

- ❑ Playing Super Audio CD (page 44)
- ❑ Playing a CD player (page 45)
- ❑ Playing an iPod (page 46)
- ❑ Playing a USB memory device (page 49)
- ❑ Listening to FM broadcasts (page 52)

- ❑ Listening to Internet Radio (page 63)
- ❑ Playing back files stored on a PC and NAS (page 66)
- ❑ Using online services (page 70)
- ❑ Convenient functions (page 78)
- ❑ AirPlay function (page 84)

Selecting a listening mode (Sound Mode) (page 86)

Playback (Advanced operation) (page 102)

Important information

Before starting playback, make the connections between the different devices and the settings on the unit.

NOTE

Also refer to the operating instructions of the connected devices when playing them.

Turning the power on

Press **ON/STANDBY** to turn on power to the unit.
The power turns on.



You can also switch the power to standby by pressing **ON/STANDBY** on the main unit.

❑ When power is switched to standby

Press **ON/STANDBY**.

[Power indicator status in standby mode]

- Normal standby : Red
- When "HDMI Pass Through" or "HDMI Control" (page 128) is set to "On" : Orange
- When "Network" (page 142) is set to "Always On" : Orange
- When a mobile device that supports MHL is being charged : Orange

Selecting the input source

Press the input source select button (**CBL/SAT, DVD, Blu-ray, AUX1, M-XP, TUNER, GAME, AUX2, PHONO, iPod/USB, MEDIA PLAYER, CD, NETWORK or INTERNET RADIO**) to be played back.

The desired input source can be selected directly.




You can also use the following operation to select an input source.

❑ Select the input source using the main unit

Turn **INPUT SELECTOR**.

- Turning **INPUT SELECTOR** switches the input source, as shown below.

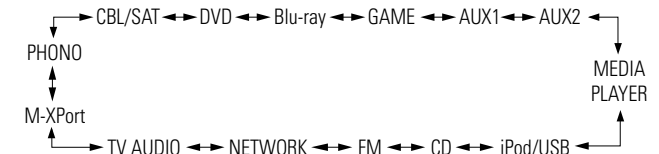

Adjusting the master volume

Use **VOLUME ▲▼** to adjust the volume.

- The volume display method varies depending on the "Scale" setting ([page 123](#)).

□ When the "Scale" setting ([page 123](#)) is "0 – 98"

[Adjustable range] 0.0 0.5 – 98.0

□ When the "Scale" setting ([page 123](#)) is "-79.5dB – 18.0dB"

[Adjustable range] ----- -79.5dB – 18.0dB


- The variable range differs according to the input signal and channel level setting.




 
You can also adjust the master volume by turning **VOLUME** on the main unit.

Turning off the sound temporarily

Press **MUTE** .

- "MUTE" indicator on the display flashes.
-  appears on a TV screen.

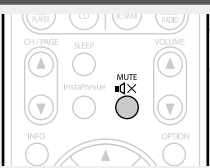

- The sound is reduced to the level set at "Mute Level" ([page 123](#)).
- To cancel, press **MUTE**  again. Muting can also be canceled by adjusting the master volume.

Playing a Blu-ray Disc player/DVD player

The following describes the procedure for playing Blu-ray Disc player/DVD player.

1 Prepare for playback.


- Turn on the power of the TV, subwoofer and player.
- Change the TV input to the input of this unit.
- Load the disc in the player.

2 Press ON/STANDBY to turn on power to the unit.

3 Press Blu-ray or DVD to switch an input source for a player used for playback.

4 Play the Blu-ray Disc player or DVD player.

- Make the necessary settings on the player (language setting, subtitles setting, etc.) beforehand.

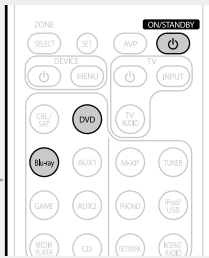

Playing Super Audio CD

The following describes the procedure for playing Super Audio CD.

1 Prepare for playback.

- Turn on the power of the subwoofer and player.
- Load the disc in the player.

2 Press ON/STANDBY to turn on power to the unit.

3 Perform the settings of the "Input Assign" menu ([page 133](#)).

Assign HDMI connectors for the input source (example: DVD).

4 Press the input source select button (example: DVD) to switch an input source assigned in step 3.

5 Set the audio input mode to "Auto" using the "Input Mode" menu ([page 136](#)).

- The default setting of "Input Mode" is "Auto".

6 Play the component connected to this unit.


The **[DSD]** indicator lights on the display.




When playing back Super Audio CD, DSD signals are converted into PCM signals which are then converted into analog signals.

Playing a CD player

The following describes the procedure for playing CD player.

- 1 Prepare for playback.**
 - ① Turn on the power of the subwoofer and player.
 - ② Load the disc in the player.
- 2 Press ON/STANDBY  to turn on power to the unit.**
- 3 Press CD to switch the input source to “CD”.**
- 4 Play the CD player.**

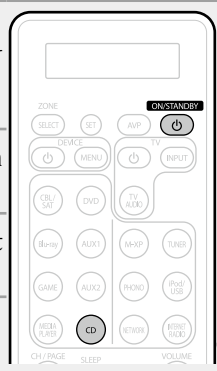

Playing an iPod

You can use the USB cable provided with the iPod to connect the iPod with the unit's iPod/USB port and enjoy music stored on the iPod.

For information on the iPod models that can be played back with this unit, see "Connecting an iPod or USB memory device to the iPod/USB port" ([page 24](#)).

Listening to music on an iPod

The iPod display modes include "From iPod" and "On-Screen". By default, "From iPod", where you directly operate iPod itself while seeing the iPod screen, is set.


To change to "On-Screen", where you perform operations while having the iPod information displayed on the TV screen, see "Setting operation mode (iPod Browse Mode)" ([page 47](#)).

1 Using the USB cable provided with the iPod, connect the iPod to the iPod/USB port ([page 24](#)).

2 Press **ON/STANDBY**  to turn on power to the unit.

3 Press **iPod/USB** to switch the input source to "iPod/USB".
"From iPod" is displayed on the display of this unit.

4 Operate iPod itself directly while seeing the iPod screen to play back music.

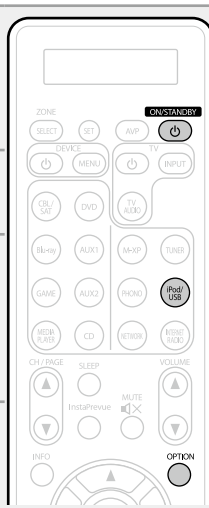

- Streaming music stored in iPhone, iPod touch, or iPad directly to the unit ([page 84](#))
- Playing iTunes music with this unit ([page 84](#))

Operations available through the OPTION button

Press the **OPTION** button to display a menu of functions that can be used on the TV screen. Select the function you want to use from this menu. You can easily find and use the desired function.

Setting the USB port to use (USB Select)
([page 78](#))

Setting operation mode (iPod Browse Mode)
([page 47](#))

Performing repeat playback (Repeat)
([page 48](#))

Performing random playback (Random)
([page 48](#))

Adjusting the picture quality for your viewing environment (Picture Mode) ([page 82](#))

All Zone Stereo function ([page 82](#))



❑ Setting operation mode (iPod Browse Mode)

In this mode, various lists and screens during playback on iPod are displayed on the TV screen.
This section describes the steps up to playing back tracks on iPod in "On-Screen".


1 Press **iPod/USB** to switch the input source to "iPod/USB".

2 Press **OPTION**.
The option menu screen is displayed.

3 Select "iPod Browse Mode", then press **ENTER**.
The "iPod Browse Mode" screen is displayed.

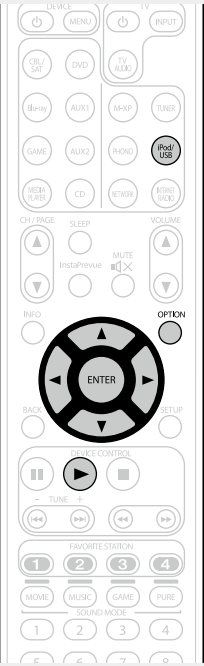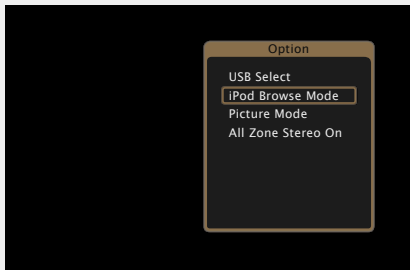

4 Use **◀ ▶** to select "On-Screen", then press **ENTER**.
The iPod screen is displayed.

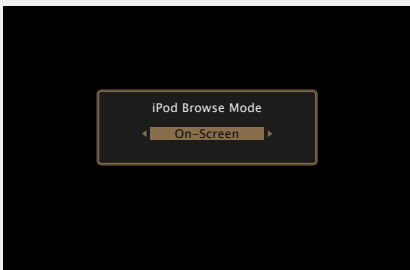

- English letters, numbers and certain symbols are displayed. Incompatible characters are displayed as "." (period).
- Operations available for "On-Screen" and "From iPod" are listed below.

| Display mode | | From iPod | On-Screen |
|----------------|---------------------------------|-----------|-----------|
| Playable files | Music file | ✓ | ✓ |
| | Video file | * | |
| Active buttons | Remote control unit (This unit) | ✓ | ✓ |
| | iPod | ✓ | |

* Only the sound is played.

5 Use **△▽** to select the item, then press **ENTER** or **▶** to select the file to be played.

6 Press **ENTER**, **▶** or **▶▶**.
Playback starts.

❑ Adjusting the sound quality (M-DAX)

Make this setting at "M-DAX" ([page 122](#)) in the menu.
You can use the "M-DAX" function to restore to a state close to the audio before compression while correcting the bass feel to enjoy a richer playback experience. The default setting is "Off".

❑ Changing the screen display duration

Make this setting at "Now Playing" ([page 131](#)) in the menu. The default setting is "Always On".
When "Auto Off" is set, the on-screen display is turned off 30 seconds after an operation.
Press **△▽◀▶** while the display is off to return to the original screen.

❑ Switching the screen display

Press **STATUS** on this unit during playback with "iPod Browse Mode" set to "On-Screen".
The display switches between track title, artist name, and album title etc. each time the button is pressed.


NOTE

- Depending on the type of iPod and the software version, some functions may not operate.
- Note that marantz will accept no responsibility whatsoever for any problems arising with the data on an iPod when using this unit in conjunction with the iPod.


Performing repeat playback (Repeat)

1 Press **OPTION** with “iPod Browse Mode” set to “On-Screen”.
The option menu screen is displayed.

2 Use Δ / ∇ to select “Repeat”, then press **ENTER**.

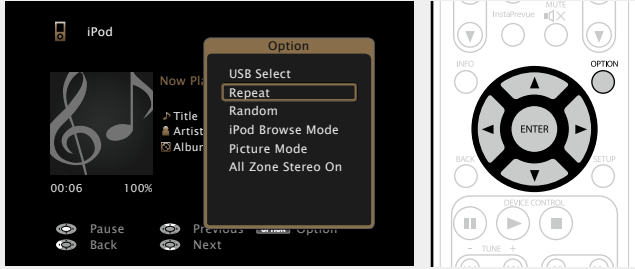

3 Use \triangleleft / \triangleright to select repeat playback mode.

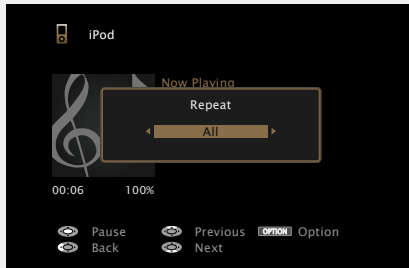

• Each time \triangleleft / \triangleright is pressed, the setting is changed as shown below.



Off Repeat playback mode is canceled.

One A file being played is played repeatedly.

All All files in the folder currently being played are played repeatedly.

4 Press **ENTER**.
The display returns to the playback screen.


Performing random playback (Random)

1 Press **OPTION** with “iPod Browse Mode” set to “On-Screen”.
The option menu screen is displayed.

2 Use Δ / ∇ to select “Random”, then press **ENTER**.



3 Use \triangleleft / \triangleright to select random playback mode.

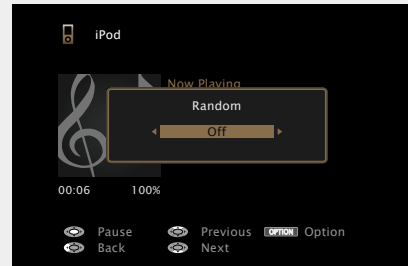

• Each time \triangleleft / \triangleright is pressed, the setting is changed as shown below.



Off Disable random playback.

On Enable random playback.

4 Press **ENTER**.
The display returns to the playback screen.



The random playback randomly selects a track to play back from all tracks every time a track ends. Therefore, the same track may be played back consecutively.

iPod operation buttons



| Operation buttons | Function |
|--|---|
| CH/PAGE Δ / ∇ | Page search |
| INFO | Display of information such as the source name, volume, and sound mode name |
| OPTION | USB Select / Repeat playback / Random playback / iPod Browse Mode switching / Picture Mode / All Zone Stereo |
| Δ / ∇ / \triangleleft / \triangleright | Cursor operation / Auto search (cue, Δ / ∇) / Manual search (Press and hold, Δ / ∇) |
| ENTER (Press and release) | Enter |
| ENTER (Press and hold) | Stop |
| BACK | Return |
| SETUP | Setup menu |
| II | Pause |
| ▶ | Playback / Pause |
| ■ | Stop |
| I◀◀▶▶I | Auto search (cue) |
| ◀◀▶▶ (Press and hold) | Manual search (fast-reverse/fast-forward) |

Playing a USB memory device

Playing back music or still picture (JPEG) files recorded on a USB memory device.

Important information

- Only USB memory devices conforming to mass storage class and MTP (Media Transfer Protocol) standards can be played on this unit.
- This unit is compatible with USB memory devices in “FAT16” or “FAT32” format.
- This unit is compatible with MP3 files conforming to “MPEG-1 Audio Layer-3” standards.
- File types that this unit can play back and specifications are shown below.

[Supported file types]

| Supported file types | USB memory devices *1 |
|--|-----------------------|
| WMA (Windows Media Audio) | ✓*2 |
| MP3 (MPEG-1 Audio Layer-3) | ✓ |
| WAV | ✓ |
| MPEG-4 AAC | ✓*3 |
| FLAC (Free Lossless Audio Codec) | ✓ |
| JPEG | ✓ |
| ALAC (Apple Lossless Audio Codec) | ✓ |

*1 USB memory device

- This unit is compatible with MP3 ID3-Tag (Ver. 2) standard.
- This unit can show the artwork that was embedded by using MP3 ID3-Tag Ver. 2.3 or 2.4.
- This unit is compatible with WMA META tags.
- If the image size (pixels) of an album artwork exceeds 500 × 500 (WMA/MP3/WAV/FLAC) or 349 × 349 (MPEG-4 AAC), then music may not be played back properly.
- WAV format Quantization bit length: 16 or 24 bits.
- FLAC format Quantization bit length: 16 or 24 bits.

*2 Copyright-protected files can be played on certain portable players compatible with MTP.

*3 Only files that are not protected by copyright can be played on this unit.

Content downloaded from pay sites on the Internet are copyright protected. Also, files encoded in WMA format when ripped from a CD, etc. on a computer may be copyright protected, depending on the computer’s settings.

NOTE

File types that this unit does not support are not displayed.

[Compatible formats]

| | Sampling frequency | Bit rate | Extension |
|---|--------------------------------------|---------------|------------------------|
| WMA (Windows Media Audio) | 32/44.1/48 kHz | 48 – 192 kbps | .wma |
| MP3 (MPEG-1 Audio Layer-3) | 32/44.1/48 kHz | 32 – 320 kbps | .mp3 |
| WAV | 32/44.1/48/88.2/96/ 176.4/192 kHz | – | .wav |
| MPEG-4 AAC | 32/44.1/48 kHz | 16 – 320 kbps | .aac/ .m4a/ .mp4 |
| FLAC (Free Lossless Audio Codec) | 32/44.1/48/88.2/96/ 176.4/192 kHz | – | .flac |
| ALAC (Apple Lossless Audio Codec)* | 32/44.1/48/88.2/96 kHz | – | .m4a |

* Copyright [2012] [D&M Holdings. Inc.]

Licensed under the Apache License, Version 2.0 (the “License”); you may not use this file except in compliance with the License. You may obtain a copy of the License at <http://www.apache.org/licenses/LICENSE-2.0>

Maximum Number of Playable Files and Folder

The limits on the number of folders and files that can be displayed by this unit are as follows.

| Item | Media | USB memory devices |
|--------------------------------------|-------|----------------------------|
| Memory capacity | | FAT16 : 2 GB, FAT32 : 2 TB |
| Number of folder directory levels *1 | | 8 levels |
| Number of folders | | 500 |
| Number of files *2 | | 5000 |

*1 The limited number includes the root folder.

*2 The allowable number of files may differ according to the USB memory device capacity and the file size.

Playing files stored on USB memory devices


1 Connect the USB memory device to the iPod/USB port (☞ [page 24](#)).

2 Press iPod/USB to switch the input source to “iPod/USB”.



3 Use Δ / ∇ to select the search item or folder, then press **ENTER** or \triangleright .

4 Use Δ / ∇ to select the file, then press **ENTER**, \triangleright or \blacktriangleright . Playback starts.

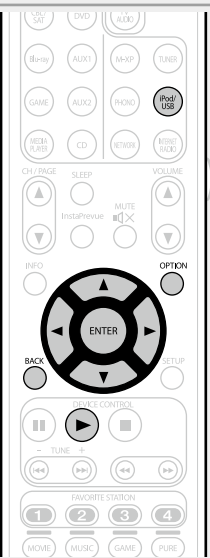

❑ Adjusting the sound quality (M-DAX)

Make this setting at “M-DAX” (☞ [page 122](#)) in the menu.

You can use the “M-DAX” function to restore to a state close to the audio before compression while correcting the bass feel to enjoy a richer playback experience. The default setting is “Off”.

❑ Going back to the previous screen

Press \triangleleft or **BACK**.

❑ Changing the screen display duration

Make this setting at “Now Playing” (☞ [page 131](#)) in the menu. The default setting is “Always On”.

When “Auto Off” is set, the on-screen display is turned off 30 seconds after an operation.

Press Δ / ∇ / \triangleleft / \triangleright while the display is off to return to the original screen.



- When an MP3 music file includes album art data, the album art can be displayed while playing the file.
- If the USB memory device is divided into multiple partitions, only the first partition is played back.

NOTE

- Note that marantz will accept no responsibility whatsoever for any problems arising with the data on a USB memory device when using this unit in conjunction with the USB memory device.
- USB memory devices will not work via a USB hub.
- marantz does not guarantee that all USB memory devices will operate or be supplied power. When using a USB portable hard disk that can draw power from an AC adapter, we recommend using the AC adapter.
- It is not possible to connect and use a computer via the iPod/USB port of this unit using a USB cable.

Operations available through the OPTION button

Press the **OPTION** button to display a menu of functions that can be used on the TV screen. Select the function you want to use from this menu. You can easily find and use the desired function.

❑ Setting the USB port to use (USB Select)

(☞ [page 78](#))

❑ Searching content with keywords (Text Search) (☞ [page 78](#))

❑ Performing repeat playback (Repeat)

(☞ [page 79](#))

❑ Performing random playback (Random)


(☞ [page 79](#))

❑ Playing back music and a favorite picture at the same time (Slideshow) (☞ [page 81](#))

❑ Playing back still images in sequential order (Slideshow Interval) (☞ [page 81](#))

❑ All Zone Stereo function (☞ [page 82](#))

□ USB memory device operation buttons

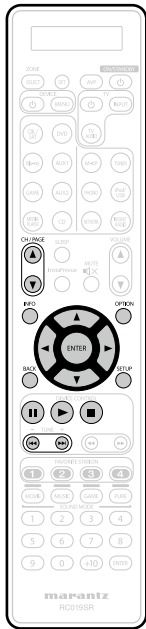

| Operation buttons | Function |
|-------------------------------------|---|
| CH/PAGE ▲▼ | Page search |
| INFO | Display of information such as the source name, volume, and sound mode name |
| OPTION | USB Select / Text Search / Repeat playback / Random playback / Slideshow / Slideshow Interval / All Zone Stereo |
| △▽◀▶ | Cursor operation / Auto search (cue, △▽) |
| ENTER (Press and release) | Enter |
| ENTER (Press and hold) | Stop |
| BACK | Return |
| SETUP | Setup menu |
| II | Pause |
| ▶ | Playback / Pause |
| ■ | Stop |
| ◀▶ | Auto search (cue) |

Listening to FM broadcasts

For antenna connections, see “Connecting an FM antenna” ([page 28](#)).

How to tune in


The modes for receiving FM broadcasts consists of “Auto” mode that automatically searches available broadcast stations and “Manual” mode that lets you tune in using buttons to change the frequency. The default setting is “Auto”. You can also use “Direct Tune” to tune in by entering the frequency directly.

In “Auto” mode, you cannot tune in to radio stations if the reception is not good. If this is the case, then use the “Manual” mode or “Direct Tune” to tune in.



Listening to FM broadcasts

1 Press **TUNER** to switch the input source to “FM”.

[TV Screen]

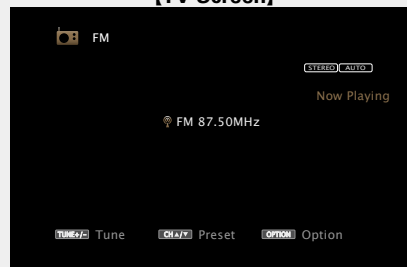

[Display of this unit]

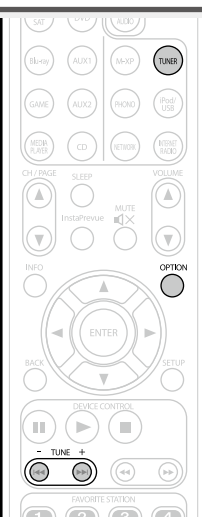 

2 Press **TUNE +** or **TUNE -** to select the station you want to hear.

Scanning is performed until it finds an available radio station. When it finds a radio station, it stops the scan automatically and tunes in.

Adding to the FAVORITE STATION button ([page 80](#))

Operations available through the OPTION button

Press the **OPTION** button to display a menu of functions that can be used on the TV screen. Select the function you want to use from this menu. You can easily find and use the desired function.

Tuning in by entering the radio frequency (Direct Tune) ([page 54](#))

RDS search ([page 59](#))

PTY search ([page 60](#))

TP search ([page 61](#))

Radio Text ([page 62](#))

Tuning in to radio stations and presetting them automatically (Auto Preset Memory) ([page 55](#))

Changing the tuning mode (Tune Mode) ([page 53](#))

Presetting the current broadcast station (Preset Memory) ([page 56](#))

Specify a name for the preset broadcast station (Preset Name) ([page 57](#))

Skipping preset broadcast stations (Preset Skip) ([page 58](#))

All Zone Stereo function ([page 82](#))

❑ Changing the tuning mode (Tune Mode)


You can change the mode for tuning into FM broadcasts. If you cannot tune in automatically with "Auto" mode, then change the mode to "Manual" and tune in manually.

1 Press **TUNER** to switch the input source to "FM".



2 Press **OPTION**.
The option menu screen is displayed.

3 Use Δ / ∇ to select "Tune Mode", then press **ENTER**.

[TV Screen]

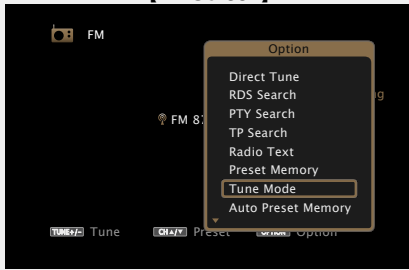


[Display of this unit]

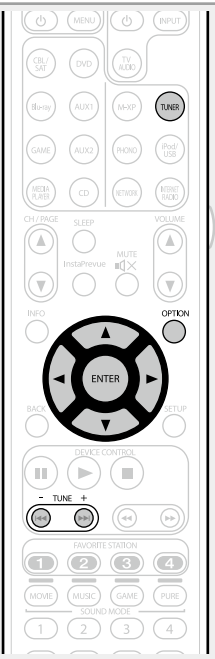 

4 Use \triangleleft / \triangleright to select tuning mode, then press **ENTER**.

[TV Screen]

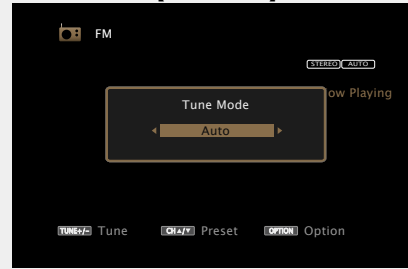

[Display of this unit]



Auto Automatically tune to the station.

Manual Manually tune to the station.

5 Press **TUNE +** or **TUNE -** to select the station you want to hear.

The frequency changes in steps each time the button is pressed.



When tuning in stations manually, press and hold **TUNE +** or **TUNE -** to change frequencies continuously.

❑ Changing the screen display duration

Make this setting at "Now Playing" ([page 131](#)) in the menu. The default setting is "Always On".

When "Auto Off" is set, the on-screen display is turned off 30 seconds after an operation.

Press Δ / ∇ / \triangleleft / \triangleright while the display is off to return to the original screen.

❑ **Tuning in by entering the radio frequency (Direct Tune)**


You can enter the receiving frequency directly to tune in.

1 Press **TUNER** to switch the input source to “FM”.



2 Press **OPTION**.
The option menu screen is displayed.

3 Use Δ / ∇ to select “Direct Tune”, then press **ENTER**.
The direct tuner screen is displayed and “--” in the display flashes.

[TV Screen]

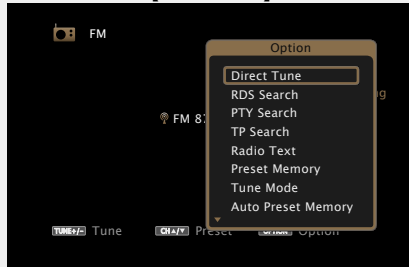


[Display of this unit]

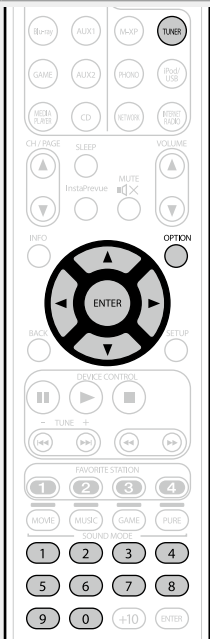 


4 Use Δ / ∇ or **0 – 9** to select a number and press \triangleright .
The screen that lets you enter the frequency is displayed.

[TV Screen]

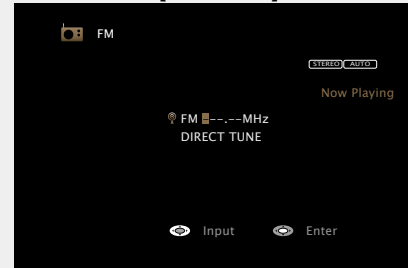

[Display of this unit]

 

• If \triangleleft is pressed, the immediately preceding input is cancelled.

5 Repeat step 4 and enter the frequency of the radio station you want to hear.

6 When setting is completed, press **ENTER**.
The preset frequency is tuned in.

Presetting broadcast stations

□ Tuning in to radio stations and presetting them automatically (Auto Preset Memory)


Up to 56 stations can be preset.

If "Auto Preset Memory" is performed after performing "Preset Memory", the "Preset Memory" settings will be overwritten.



1 Press **TUNER** to switch the input source to "FM".

2 Press **OPTION**.
The option menu screen is displayed.

3 Use Δ / ∇ to select "Auto Preset Memory", then press **ENTER**.

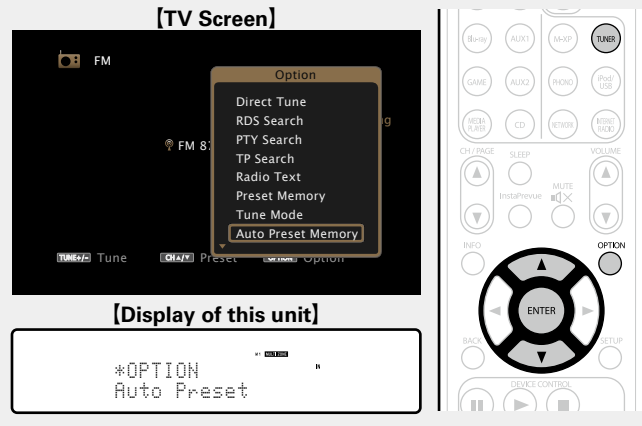

 4 Press **ENTER**.
The unit starts to tune in to radio stations automatically and preset them.

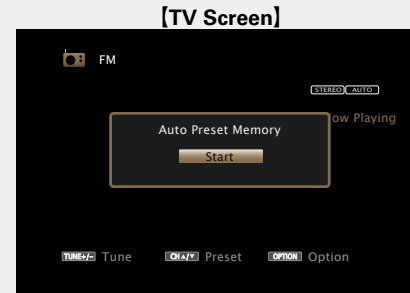

- When presetting is completed, "Completed" is displayed for about 5 seconds and the option menu screen turns off.

❑ Presetting the current broadcast station (Preset Memory)


Your favorite broadcast stations can be preset so that you can tune them in easily. Up to 56 stations can be preset.

1 Tune in the broadcast station you want to preset.


2 Press **OPTION**.
The option menu screen is displayed.

3 Use $\Delta \nabla$ to select “Preset Memory”, then press **ENTER**.
The list of already preset channels is displayed.

[TV Screen]

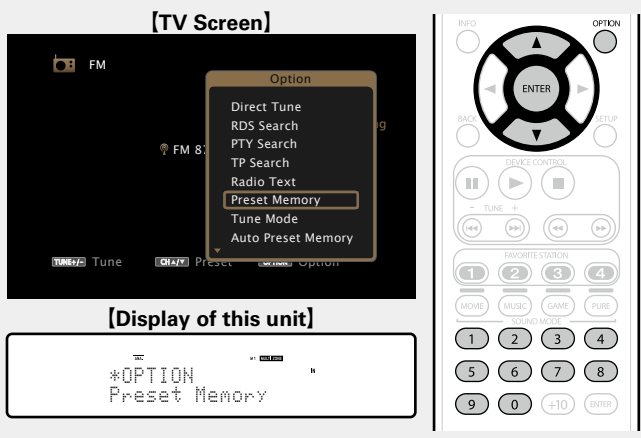

[Display of this unit]


 


4 Use $\Delta \nabla$ or **0 – 9** to select the channel you want to preset, then press **ENTER**.



The current broadcast station that is preset.

- To preset other stations, repeat steps 1 to 4.

[TV Screen]

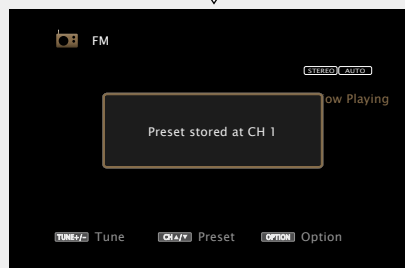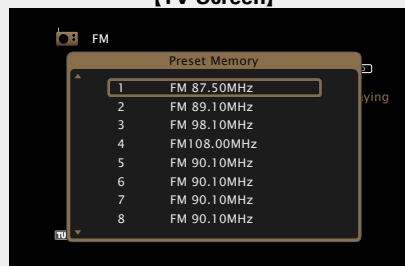

[Display of this unit]

  



The channel numbers of broadcast stations set as “Preset Skip” (page 58) are grayed out, but these stations can be preset. When grayed out channel numbers are preset, these are highlighted and the “Preset Skip” setting changes to “On”.

| Channel | Default Settings |
|---------|--|
| 1 – 8 | 87.50 / 89.10 / 98.10 / 108.00 / 90.10 / 90.10 / 90.10 / 90.10 MHz |
| 9 – 16 | 90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 MHz |
| 17 – 24 | 90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 MHz |
| 25 – 32 | 90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 MHz |
| 33 – 40 | 90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 MHz |
| 41 – 48 | 90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 MHz |
| 49 – 56 | 90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 MHz |

Listening to preset stations

Use **CH/PAGE** $\Delta \nabla$ or **0 – 9** to select the desired preset channel.

 [Display of this unit]

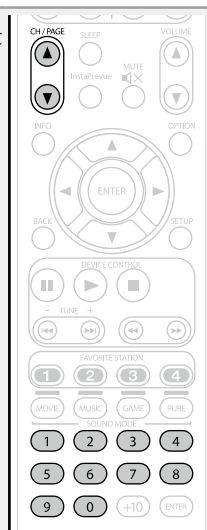

Specify a name for the preset broadcast station (Preset Name)


You can set the name to the preset broadcast station or change it. Up to eight characters can be input.

1 Press **TUNER** to switch the input source to “FM”.



2 Press **OPTION**.
The option menu screen is displayed.

3 Use Δ / ∇ to select “Preset Name”, then press **ENTER**.
The Preset Name screen is displayed.

[TV Screen]

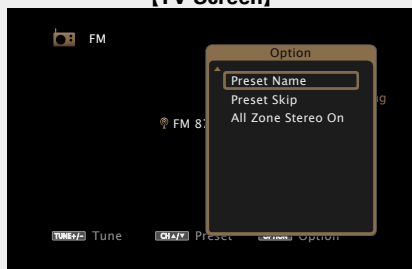


[Display of this unit]

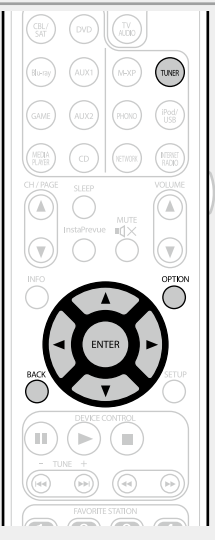 


4 Use \triangleleft / \triangleright to select the group of the broadcast station you want to name then press **ENTER**.

The screen that lets you edit the preset name is displayed.

 
- Each time \triangleleft / \triangleright is pressed, the setting is changed as shown below.



[TV Screen]

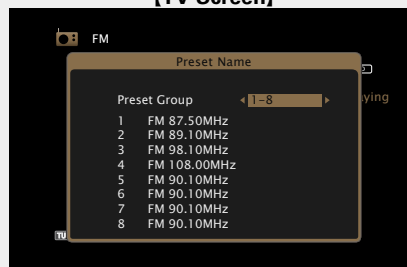


[Display of this unit]

 


5 Use Δ / ∇ to select the broadcast station you want to name, then press **ENTER**.

[TV Screen]

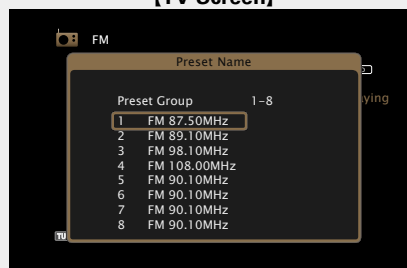

[Display of this unit]

 

6 Use Δ / ∇ to select a name label, then press **ENTER**.

The screen that lets you edit the preset name is displayed.

- If you select “Set Defaults”, then the unit returns to displaying the frequency.

7 Enter the characters, then press **OK**.

- For character input, see [page 118](#).

8 Press **BACK** twice.

The display returns to the playback screen.


❑ Skipping preset broadcast stations (Preset Skip)

You can set in advance, the stations you do not want to be displayed when tuning in, by groups or by stations. The preset skip setting is useful when tuning in, because only your favorite stations are displayed.

1 Press **TUNER** to switch the input source to “FM”.

2 Press **OPTION**.
The option menu screen is displayed.


3 Use $\Delta \nabla$ to select “Preset Skip”, then press **ENTER**.
The Preset Skip screen is displayed.

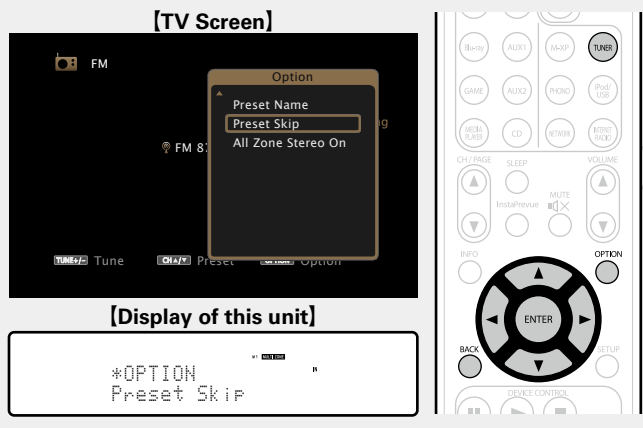

4-1 [To set the stations you want to skip by groups]

① Use $\triangleleft \triangleright$ to select the group of broadcast stations you want to skip.


 
- Each time $\triangleleft \triangleright$ is pressed, the setting is changed as shown below.




② Press Δ to select “Set * - * to Skip”, then press **ENTER**.

All broadcast stations in the group “* - *” you selected are not displayed.
(* are the selected group numbers)

③ Press **BACK**.

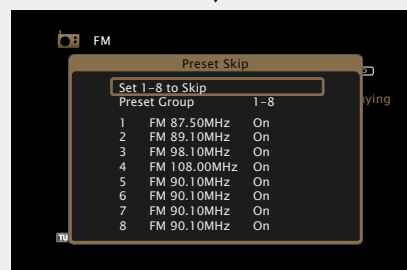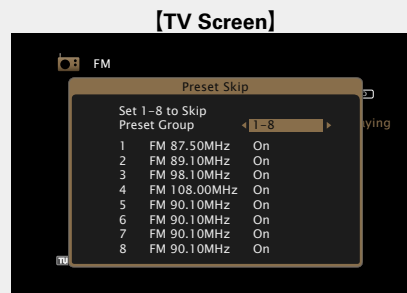


[Display of this unit]

 

4-2 [To set the stations you want to skip by stations]

① Use $\triangleleft \triangleright$ to select the group of broadcast stations you want to skip.

 
- Each time $\triangleleft \triangleright$ is pressed, the setting is changed as shown below.




② Use $\Delta \nabla$ to select the broadcast station you want to skip.

③ Use $\triangleleft \triangleright$ to select “Skip”.
The station you selected is not displayed.

④ Press **BACK**.

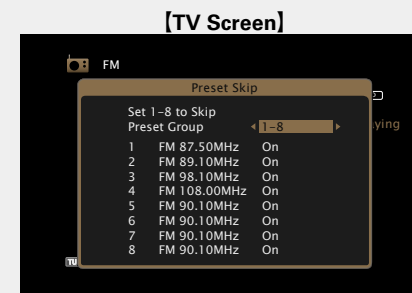


[Display of this unit]

 

Cancelling preset skip

1 While the Preset Skip screen is displayed, use ◀▶ to select a group containing a broadcast station to cancel the skip for.

2 Use △▽ to select a broadcast station to cancel the skip for.

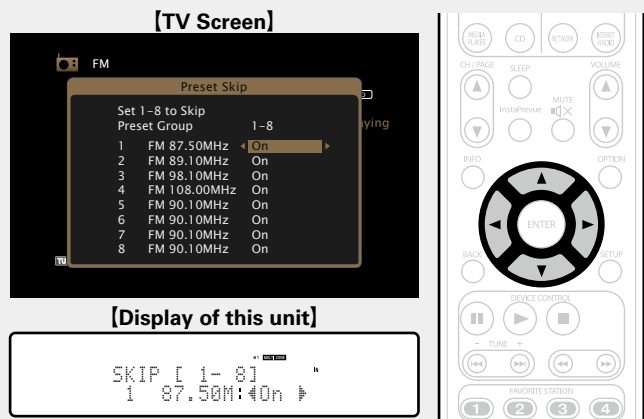

3 Use ◀▶ to select “On”.
The skip is cancelled.

NOTE

You cannot cancel the skip for each group.

RDS search

RDS (works only on the FM band) is a broadcasting service which allows a station to send additional information along with the regular radio program signal.

Use this function to automatically tune to FM stations that provide the RDS service.


NOTE

Note that the RDS function only works when receiving RDS compatible stations.


1 Press **TUNER** to switch the input source to “FM”.

2 Press **OPTION**.
The option menu screen is displayed.

3 Use △▽ to select “RDS Search”, then press **ENTER**.

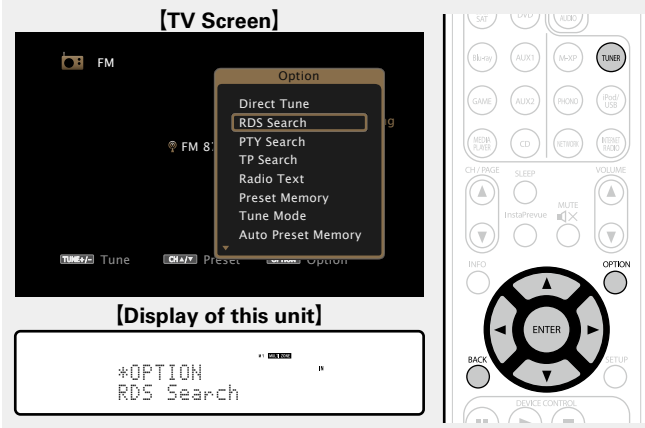

4 Press **ENTER**.
The search for RDS stations begins automatically.

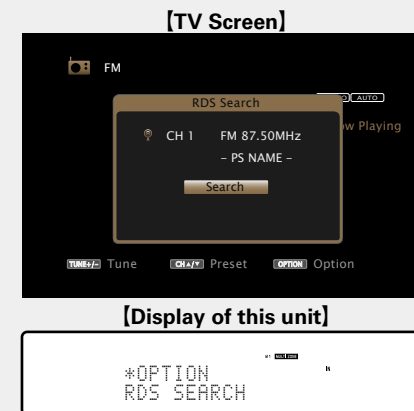

- If no RDS stations are found with the above operation, all the reception bands are searched.
- When a broadcast station is found, that station’s name appears on the display.
- If no RDS station is found when all the frequencies have been searched, “NO RDS” is displayed.



If you press ◀▶ within 5 seconds after the broadcast station name is shown on the display, you can search for a different station.

□ PTY search

Use this function to find RDS stations broadcasting a designated program type (PTY).

PTY identifies the type of RDS program.


The program types and their displays are as follows:

| | | | |
|-----------------|----------------------|-----------------|--------------------|
| NEWS | News | WEATHER | Weather |
| AFFAIRS | Current Affairs | FINANCE | Finance |
| INFO | Information | CHILDREN | Children's program |
| SPORT | Sports | SOCIAL | Social Affairs |
| EDUCATE | Education | RELIGION | Religion |
| DRAMA | Drama | PHONE IN | Phone In |
| CULTURE | Culture | TRAVEL | Travel |
| SCIENCE | Science | LEISURE | Leisure |
| VARIED | Varied | JAZZ | Jazz Music |
| POP M | Pop Music | COUNTRY | Country Music |
| ROCK M | Rock Music | NATION M | National Music |
| EASY M | Easy Listening Music | OLDIES | Oldies Music |
| LIGHT M | Light Classical | FOLK M | Folk Music |
| CLASSICS | Serious Classical | DOCUMENT | Documentary |
| OTHER M | Other Music | | |

1 Press **TUNER** to switch the input source to “FM”.

2 Press **OPTION**.
The option menu screen is displayed.

3 Use $\Delta \nabla$ to select “PTY Search”, then press **ENTER**.

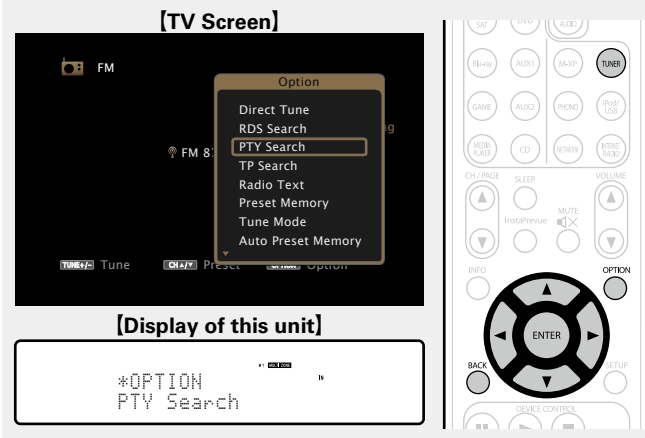


4 Watching the display, press $\Delta \nabla$ to call out the desired program type.

[TV Screen]



 [Display of this unit]



5 Press **ENTER**.
PTY search begins automatically.

- If there is no station broadcasting the designated program type with the above operation, all the reception bands are searched.
- The station name is displayed on the display after searching stops.
- If no station broadcasting the designated program type is found when all the frequencies have been searched, “NO PROGRAMME” is displayed.



If you press $\triangleleft \triangleright$ within 5 seconds after the broadcast station name is shown on the display, you can search for a different station.


TP search

TP identifies programs that carry traffic announcements. This allows you to easily find out the latest traffic conditions in your area before leaving home. Use this function to find RDS stations broadcasting traffic programs (TP stations).


1 Press **TUNER** to switch the input source to “FM”.

2 Press **OPTION**.
The option menu screen is displayed.


3 Use Δ / ∇ to select “TP Search”, then press **ENTER**.

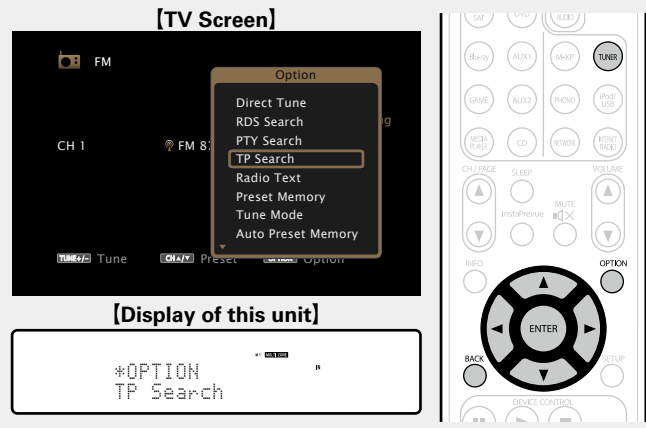

4 Press **ENTER**.
TP search begins automatically.

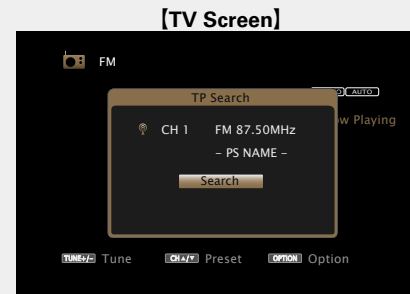

[Display of this unit]

 

- If no TP station is found with the above operation, all the reception bands are searched.
- The station name is displayed on the display after searching stops.
- If no other TP station is found when all the frequencies have been searched, “NO PROGRAMME” is displayed.



If you press \triangleleft / \triangleright within 5 seconds after the broadcast station name is shown on the display, you can search for a different station.


Radio Text

RT allows RDS stations to send text messages that appear on the display. "Radio Text" appears on the display when radio text data is received.


1 Press **TUNER** to switch the input source to "FM".

2 Press **OPTION**.
The option menu screen is displayed.


3 Use $\Delta \nabla$ to select "Radio Text", then press **ENTER**.

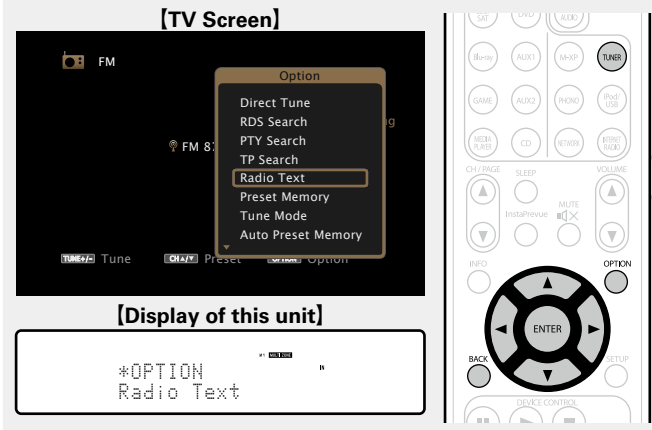

4 Use $\triangleleft \triangleright$ to select "On", then press **ENTER**.

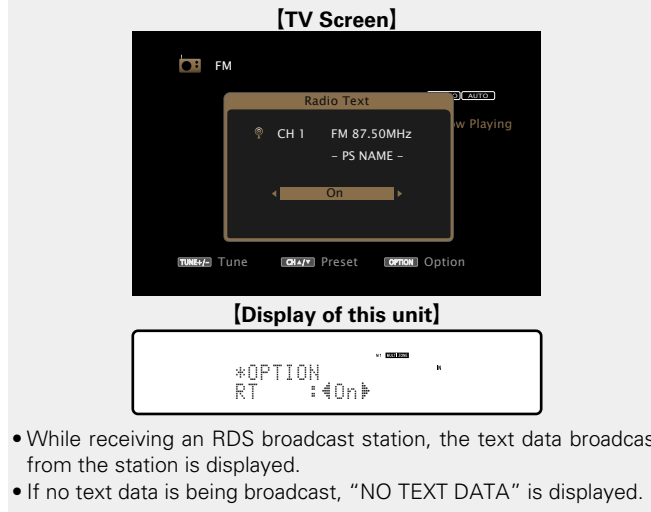

FM operation buttons

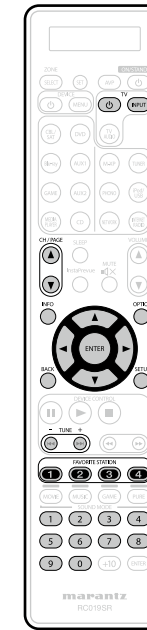

| Operation buttons | Function |
|--|---|
| TV \square | TV power on/standby |
| TV INPUT | Switch TV input |
| FAVORITE STATION 1 - 4 (Press and release) | Call up favorite stations |
| FAVORITE STATION 1 - 4 (Press and hold) | Add to the favorite stations |
| CH/PAGE $\blacktriangle \blacktriangledown$ | Preset channel selection |
| INFO | Display of information such as the source name, volume, and sound mode name |
| OPTION | Switch tuning modes / Direct frequency tuning / RDS Search / PTY Search / TP Search / Radio Text / Preset Memory / Auto Preset Memory / Preset Name / Preset Skip / All Zone Stereo |
| $\triangleleft \triangleright \Delta \nabla$ | Cursor operation |
| ENTER | Enter |
| BACK | Return |
| SETUP | Setup menu |
| TUNE +, - | Tuning (up/down) |
| 0 - 9 | Preset channel selection (1 - 8) / Direct frequency tuning (0 - 9) |

Network contents

Listening to Internet Radio

Internet Radio refers to radio broadcasts distributed over the Internet. Internet Radio stations from around the world can be received.

Important information

The broadcast station types and specifications supported by this unit for playback are as follows.

[Playable broadcast station types]

| Supported file types | Internet Radio |
|-----------------------------------|----------------|
| WMA (Windows Media Audio) | ✓ |
| MP3 (MPEG-1 Audio Layer-3) | ✓ |

[Playable broadcast station specifications]

| | Sampling frequency | Bit rate | Extension |
|-----------------------------------|--------------------|---------------|-----------|
| WMA (Windows Media Audio) | 32/44.1/48 kHz | 48 – 192 kbps | .wma |
| MP3 (MPEG-1 Audio Layer-3) | 32/44.1/48 kHz | 32 – 320 kbps | .mp3 |

Listening to Internet Radio



1 Prepare for playback.

- ① Check the network environment, then turn on this unit's power (see [page 33](#) "Connecting to a home network (LAN)").
- ② If settings are required, make the "Settings" (see [page 143](#)).

2 Press NETWORK.

- You can also press **INTERNET RADIO** to select the input source "Internet Radio" directly.

3 Use Δ ∇ \triangleleft \triangleright to select "Internet Radio", then press ENTER.

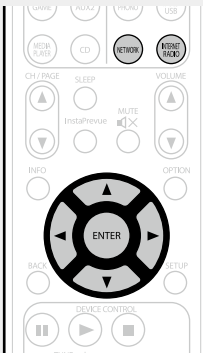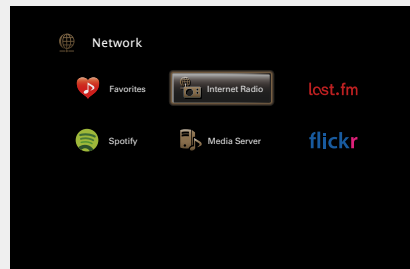

4 Use Δ ∇ to select the item you want to play, then press ENTER or \triangleright .



- ******* (Country name) Displays typical Internet Radio stations your country.
- Search Stations** Displays all Internet Radio stations that this unit can tune in to.
- Search Podcasts** Displays Internet Radio stations in the podcasts that this unit can tune in to.
- Recommended Stations** Displays recommended Internet Radio stations.
- radiomarantz.com** Displays Internet Radio stations added to favorites in vTuner. For instructions on how to add to favorites in vTuner, see "Using vTuner to add Internet Radio stations to favorites" (see [page 65](#)).
- Recently Played** Displays recently played Internet Radio stations. Up to 20 stations stored in "Recently Played".
- Search by Keyword** Displays Internet Radio stations searched by keyword. For character input, see [page 118](#).

5 Repeat step 4 until the station list is displayed.

The station list is displayed.

6 Use Δ ∇ to select the station, then press ENTER or \triangleright .

Playback starts once buffering reaches "100%".

❑ Adjusting the sound quality (M-DAX)

Make this setting at "M-DAX" ([page 122](#)) in the menu.

You can use the "M-DAX" function to restore to a state close to the audio before compression while correcting the bass feel to enjoy a richer playback experience. The default setting is "Off".

❑ Switching the screen display

Press **STATUS** on the main unit.

The display switches between track title and radio station name etc. each time the button is pressed.

❑ Going back to the previous screen

Press **<** or **BACK**.

❑ Changing the screen display duration

Make this setting at "Now Playing" ([page 131](#)) in the menu. The default setting is "Always On".

When "Auto Off" is set, the on-screen display is turned off 30 seconds after an operation.

Press **△▽<▷** while the display is off to return to the original screen.



- There are many Internet Radio stations on the Internet, and the quality of the programs they broadcast as well as the bit rate of the tracks varies widely.

Generally, the higher the bit rate, the higher the sound quality, but depending on the communication lines and server traffic, the music or audio signals being streamed may be interrupted. Inversely, lower bit rates mean a lower sound quality but less tendency for the sound to be interrupted.

- "Radio station server full" or "Connection down" is displayed if the station is busy or not broadcasting.
- On this unit, folder and file names can be displayed as titles. Any characters that cannot be displayed are replaced with "." (period).

NOTE

The radio station database service may be suspended without notice.

Operations available through the OPTION button

Press the **OPTION** button to display a menu of functions that can be used on the TV screen. Select the function you want to use from this menu. You can easily find and use the desired function.

❑ **Searching content with keywords (Text Search)** ([page 78](#))

❑ **Add to favorites from the Option menu (Save to Favorites)** ([page 80](#))

❑ **Playing back music and a favorite picture at the same time (Slideshow)** ([page 81](#))

❑ **Adjusting the picture quality for your viewing environment (Picture Mode)** ([page 82](#))


❑ **All Zone Stereo function** ([page 82](#))

❑ Playing the last played Internet Radio station

This unit memorizes the last played Internet Radio station. If you press **INTERNET RADIO** to switch to the Internet Radio function from another input source, the last Internet Radio station you listened to is played.

Press INTERNET RADIO.

The source switches to "Internet Radio" and the last played radio station plays.

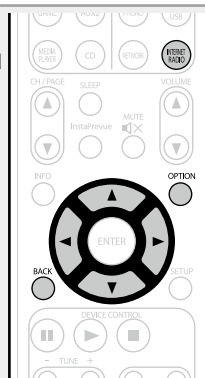

❑ Using vTuner to add Internet Radio stations to favorites

There are many Internet Radio stations in the world, and this unit can tune into these stations. But finding the radio station you want to hear may be difficult, because there are too many stations. If this is the case, then please use vTuner, an Internet Radio station search website specifically designed for this unit. You can use your PC to search Internet Radio stations and add them as your favorites. This unit can play radio stations added to vTuner.

1 Check the MAC address of this unit (☞ page 142).

The screen that lets you edit the preset name is displayed.

MAC address:

- The MAC address is necessary when you create an account for vTuner.

2 Use your PC to access the vTuner website (<http://www.radiomarantz.com>).

The vTuner login screen is displayed.

3 Enter the MAC address of this unit, then click “Go”.

The account creation screen is displayed.

4 Enter your E-mail address and a password of your choice.

The account is registered and you can now log in.

5 Enter your account information (E-mail address and password) and log in.

The top menu of vTuner is displayed.

6 Select the search criteria (genre, region, language, etc.) of your choice.

The list of radio stations matching the criteria is displayed.

- You can also enter a keyword to search for a station you want to hear.

7 Select the radio station of your choice from the list, and then click the Add to Favorites icon.

The screen that lets you create a favorite group is displayed.

8 Enter the name of the favorite group, then click “Go”.

A new favorite group that includes the selected radio station is created.

- Internet Radio stations added to favorites in vTuner can be played from “radiomarantz.com” (☞ page 63) with this unit.

❑ Internet Radio operation buttons



| Operation buttons | Function |
|--|--|
| TV | TV power on/standby |
| TV INPUT | Switch TV input |
| INTERNET RADIO | Last played Internet Radio station |
| CH/PAGE | Page search |
| INFO | Display of information such as the source name, volume, and sound mode name |
| OPTION | Text Search / Save to Favorites / Slideshow / Picture Mode / All Zone Stereo |
| | Cursor operation |
| ENTER (Press and release) | Enter |
| ENTER (Press and hold) | Stop |
| BACK | Return |
| SETUP | Setup menu |
| | Stop |
| FAVORITE STATION 1 – 4 (Press and release) | Call up favorite stations |
| FAVORITE STATION 1 – 4 (Press and hold) | Add to the favorite stations |

Playing back files stored on a PC and NAS

This unit can play back music files and playlists (m3u, wpl) stored on a PC and on Network Attached Storage (NAS) that supports DLNA.

Important information

- The network audio playback function of this unit connects to the server using technologies shown below.
 - Windows Media Player Network Sharing Service
 - Windows Media DRM10
- File types that this unit can play back and specifications are shown below.

[Supported file types]

| Supported file types | Media Server *1 |
|--|-----------------|
| WMA (Windows Media Audio) | ✓ |
| MP3 (MPEG-1 Audio Layer-3) | ✓ |
| WAV | ✓ |
| MPEG-4 AAC | ✓*2 |
| FLAC (Free Lossless Audio Codec) | ✓ |
| JPEG | ✓ |
| ALAC (Apple Lossless Audio Codec) | ✓ |

A server or server software compatible with distribution in the corresponding formats is required to play music files via a network.

*1 Media Server

- This unit is compatible with MP3 ID3-Tag (Ver. 2) standard.
- This unit can show the artwork that was embedded by using MP3 ID3-Tag Ver. 2.3 or 2.4.
- This unit is compatible with WMA META tags.
- If the image size (pixels) of an album artwork exceeds 500 × 500 (WMA/MP3/WAV/FLAC) or 349 × 349 (MPEG-4 AAC), then music may not be played back properly.
- WAV format Quantization bit length: 16 or 24 bits.
- FLAC format Quantization bit length: 16 or 24 bits.

*2 Only files that are not protected by copyright can be played on this unit.

Content downloaded from pay sites on the Internet are copyright protected. Also, files encoded in WMA format when ripped from a CD, etc. on a computer may be copyright protected, depending on the computer's settings.

NOTE

File types that this unit does not support are not displayed.

[Specifications of supported files]

| | Sampling frequency | Bit rate | Extension |
|---|--------------------------------------|---------------|------------------------|
| WMA (Windows Media Audio) | 32/44.1/48 kHz | 48 – 192 kbps | .wma |
| MP3 (MPEG-1 Audio Layer-3) | 32/44.1/48 kHz | 32 – 320 kbps | .mp3 |
| WAV | 32/44.1/48/88.2/96/ 176.4/192 kHz | – | .wav |
| MPEG-4 AAC | 32/44.1/48 kHz | 16 – 320 kbps | .aac/ .m4a/ .mp4 |
| FLAC (Free Lossless Audio Codec) | 32/44.1/48/88.2/96/ 176.4/192 kHz | – | .flac |
| ALAC (Apple Lossless Audio Codec)* | 32/44.1/48/88.2/96 kHz | – | .m4a |

* Copyright [2012] [D&M Holdings, Inc.]

Licensed under the Apache License, Version 2.0 (the "License"); you may not use this file except in compliance with the License. You may obtain a copy of the License at <http://www.apache.org/licenses/LICENSE-2.0>

Applying media sharing settings

Here, we apply the settings to share music files stored on a PC and NAS on the network.

Sharing media stored in PC

If you are using a Media Server, be sure to apply this setting first.

When using Windows Media Player 12 (Windows 7)

NOTE

Perform this procedure after changing the control panel display to "Category".

- 1** In the PC's "Control Panel", select "Network and Internet" - "Choose homegroup and sharing options".
- 2** Select the "Stream my pictures, music, and videos to all devices on my home network" check box and select "Choose media streaming options".
- 3** Select "Allowed" in the drop-down list for "AV8801".
- 4** Select "Allowed" in the drop-down list for "Media programs on this PC and remote connections...".
- 5** Click "OK" to finish.

When using Windows Media Player 11

- 1** Start up Windows Media Player 11 on the PC.
- 2** Select "Media Sharing" in the "Library".
- 3** Click the "Share my media" check box, select "AV8801", and then click "Allow".
- 4** As you did in step 3, select the icon of the device (other PCs and mobile devices) you want to use as a media controller, and then click "Allow".
- 5** Click "OK" to finish.

Sharing media stored in NAS

Change settings on the NAS to allow this unit and other devices (PCs and mobile devices) used as media controllers to access the NAS. For details, see the owner's manual that came with the NAS.

Playing back files stored on a PC and NAS



Use this procedure to play music files, image files or playlists.

1 Prepare for playback.

- ① Check the network environment, then turn on this unit's power (☞ [page 33](#) "Connecting to a home network (LAN)").
- ② If settings are required, make the "Settings" (☞ [page 143](#)).
- ③ Prepare the computer (☞ Computer's operating instructions).

2 Press NETWORK.

3 Use $\Delta \nabla \triangleleft \triangleright$ to select "Media Server", then press ENTER.

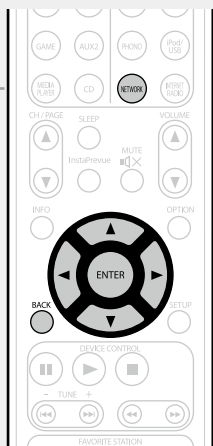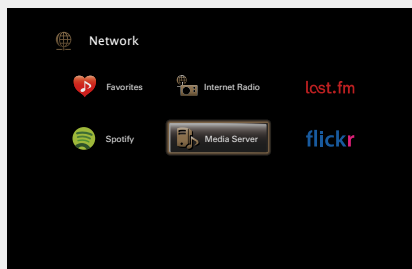

4 Use $\Delta \nabla$ to select the server including the file to be played, then press ENTER or \triangleright .

5 Use $\Delta \nabla$ to select the search item or folder, then press ENTER or \triangleright .

6 Repeat step 4 until the file is displayed.

7 Use $\Delta \nabla$ to select the file, then press ENTER or \triangleright . Playback starts once buffering reaches "100%".

Adjusting the sound quality (M-DAX)

Make this setting at "M-DAX" (☞ [page 122](#)) in the menu.

You can use the "M-DAX" function to restore to a state close to the audio before compression while correcting the bass feel to enjoy a richer playback experience. The default setting is "Off".

Switching the screen display

Press **STATUS** on the main unit.

The display switches between track title, artist name, and album title each time the button is pressed.

Going back to the previous screen

Press \triangleleft or **BACK**.

Changing the screen display duration

Make this setting at "Now Playing" (☞ [page 131](#)) in the menu. The default setting is "Always On".

When "Auto Off" is set, the on-screen display is turned off 30 seconds after an operation.

Press $\Delta \nabla \triangleleft \triangleright$ while the display is off to return to the original screen.



- When a WMA (Windows Media Audio), MP3 or MPEG-4 AAC file includes album art data, the album art can be displayed while the music files are playing.
- If you use Ver.11 or later of Windows Media Player, the album art for WMA files can be displayed.
- WMA Lossless files can be played when using a server supporting transcoding, such as Windows Media Player Ver. 11 or later.

NOTE

- Depending on the size of the still picture (JPEG) file, some time may be required for the file to be displayed.
- The order in which the tracks/files are displayed depends on the server specifications. If the tracks/files are not displayed in alphabetical order due to the server specifications, searching by the first letter may not work properly.

Operations available through the OPTION button

Press the **OPTION** button to display a menu of functions that can be used on the TV screen. Select the function you want to use from this menu. You can easily find and use the desired function.

❑ **Searching content with keywords (Text Search)** (👉 page 78)

❑ **Performing repeat playback (Repeat)** (👉 page 79)

❑ **Performing random playback (Random)** (👉 page 79)

❑ **Add to favorites from the Option menu (Save to Favorites)** (👉 page 80)


❑ **Playing back music and a favorite picture at the same time (Slideshow)** (👉 page 81)

❑ **Playing back still images in sequential order (Slideshow Interval)** (👉 page 81)

❑ **Adjusting the picture quality for your viewing environment (Picture Mode)** (👉 page 82)

❑ **All Zone Stereo function** (👉 page 82)

❑ Media Server operation buttons

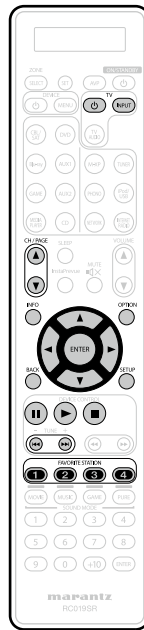

| Operation buttons | Function |
|--|---|
| TV | TV power on/standby |
| TV INPUT | Switch TV input |
| CH/PAGE | Page search |
| INFO | Display of information such as the source name, volume, and sound mode name |
| OPTION | Text Search / Repeat playback / Random playback / Save to Favorites / Slideshow / Slideshow Interval / Picture Mode / All Zone Stereo |
| | Cursor operation / Auto search (cue,) |
| ENTER (Press and release) | Enter |
| ENTER (Press and hold) | Stop |
| BACK | Return |
| SETUP | Setup menu |
| II | Pause |
| | Playback / Pause |
| | Stop |
| | Auto search (cue) |
| FAVORITE STATION 1 – 4 (Press and release) | Add/call up favorite stations |
| FAVORITE STATION 1 – 4 (Press and hold) | Add to the favorite stations |

Using online services

This unit supports playback of the online services shown below.

□ About Last.fm (👉 [page 71](#))

Last.fm learns what you love... and it's a great way to discover new music.

Your new marantz AV pre tuner is very clever. You can create a free Last.fm profile when you start using your marantz AV pre tuner and magically keep track of all the songs you hear.

When you sign in at <http://www.last.fm>, you can see your top music charts, view thousands of reviews, biographies and artwork, and get recommendations for local performances you won't want to miss.

With an affordable subscription you can enjoy an endless choice of personalised ad-free radio stations. Check out <http://www.last.fm/subscribe> today for more details.

Your subscription also gives you access to Last.fm radio on a great range of music products, including your marantz AV pre tuner. This feature is not available in all countries.

Visit <http://www.last.fm/hardware> to find out more.

□ About Flickr (👉 [page 74](#))

Flickr is an online photograph sharing service that started in 2004. You can use this unit to view photographs that have been made public by Flickr users. You do not need an account to use Flickr.

To view photographs that you recorded yourself, you need an account in order to upload these photographs to the Flickr server. For details, see the Flickr homepage.

<http://www.flickr.com/>

□ About Spotify (👉 [page 76](#))

Introduce your marantz to a whole new world of music. With Spotify, you can enjoy instant access to millions of songs.

A Spotify Premium subscription is required.

For details, see the Spotify homepage.

<http://www.spotify.com>

Listening to Last.fm



Last.fm radio is not available in all countries. Please check <http://www.last.fm/hardware> for more information. You'll also need a subscription. Get one today at <http://www.last.fm/subscribe>.

1 Prepare for playback.


- ① Check the network environment, then turn on this unit's power (see [page 33](#) "Connecting to a home network (LAN)").
- ② If settings are required, make the "Settings" (see [page 143](#)).
- ③ Complete step 3 and obtain a Last.fm account.
 - If you already have a Last.fm account, you do not need to obtain a new account. Use your existing Last.fm account.

2 Press NETWORK.

3 Use $\Delta \nabla \triangleleft \triangleright$ to select "Last.fm", then press ENTER.

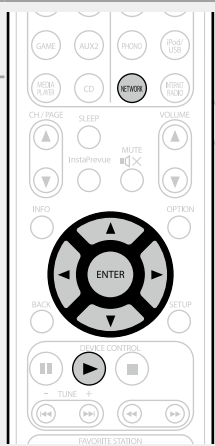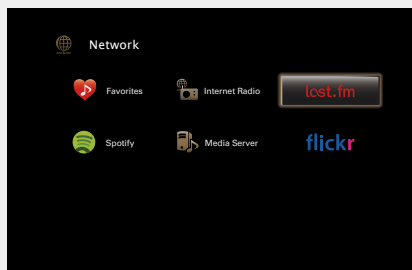


4 If you have a Last.fm account, press $\Delta \nabla$ to select "I have a Last.fm account". Then press ENTER or \triangleright .

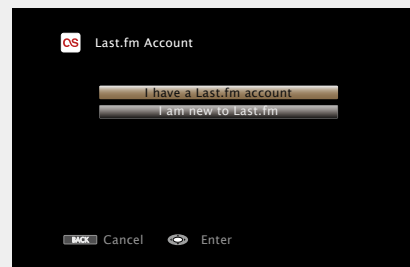

- If you do not have a Last.fm account, press ∇ to select "I am new to Last.fm". Then press ENTER. Create an account in accordance with the instructions on the screen.

5 Use $\Delta \nabla \triangleright$ to enter your username and password.

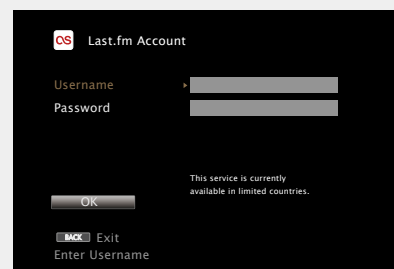

- For character input, see [page 118](#).

6 After inputting the username and password, select "OK", then press ENTER.

If the username and password match, the top menu for Last.fm is displayed.

7 Use $\Delta \nabla$ to select menu and then press ENTER.

Popular Stations Play popular artists and tags in your area.


Your Recent Stations Play your recent stations.

Your stations You can play tracks from the following personalised stations ("Your Recommended Radio", "Your Library", "Your Friends' Radio", "Your Top Artists".)


Search Stations You can search station by Artist or Tag.

8 Use $\Delta \nabla$ to select a station, and press ENTER or \blacktriangleright to start playback.

Playback starts and the following screen appears.

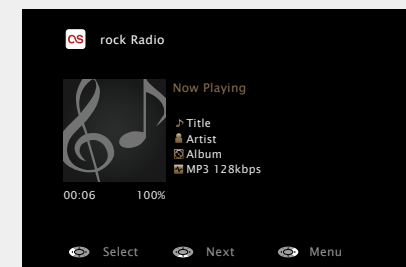

9 Menu items on playback screen.

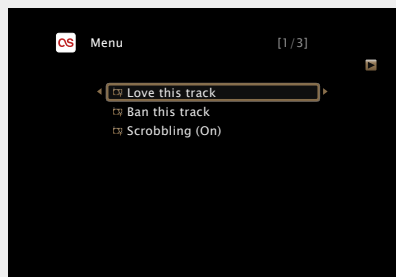

Love this track Loving tracks improves your Last.fm recommendations, and you can optionally share them on popular social networks.

Ban this track If you ban a track, we won't play it again. You can undo this on the Last.fm website.

Scrobbling Scrobbling sends the tracks you played to your Last.fm account. You can see charts of the music you've been listening to, get recommendations for new music and events in your area and share your listening tastes with your friends. You can turn this service on or off using this option. The more you scrobble, the better your recommendations will become.

NOTE

- The password should be no longer than 99 characters.
- Press **BACK** to cancel the input. When "Cancel input?" is displayed, select "Yes", then press **ENTER**.

Adjusting the sound quality (M-DAX)

Make this setting at "M-DAX" ([page 122](#)) in the menu.

You can use the "M-DAX" function to restore to a state close to the audio before compression while correcting the bass feel to enjoy a richer playback experience. The default setting is "Off".

Switching the screen display

Press **STATUS** on the main unit.

The display switches between track title and radio station name each time the button is pressed.

Going back to the previous screen

Press **<** or **BACK**.

Changing the screen display duration

Make this setting at "Now Playing" ([page 131](#)) in the menu. The default setting is "Always On".



When "Auto Off" is set, the on-screen display is turned off 30 seconds after an operation.

Press **△▽<▷** while the display is off to return to the original screen.

Log out


Disassociate this unit from your Last.fm account.

1 While the Last.fm top menu is displayed, press **BACK**.

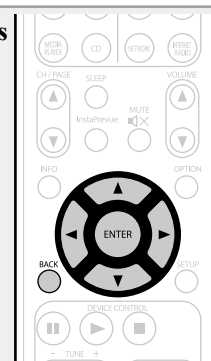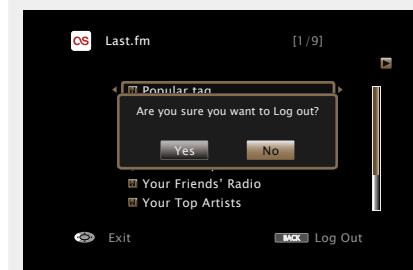

2 When the popup menu appears, use **<▷** to select "Yes", then press **ENTER**.

□ Last.fm operation buttons

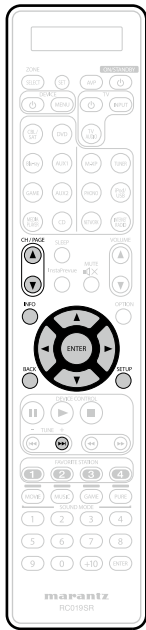

| Operation buttons | Function |
|-------------------------------------|---|
| CH/PAGE ▲▼ | Page search |
| INFO | Display of information such as the source name, volume, and sound mode name |
| △▽◀▶ | Cursor operation / Auto search (cue, △▽) |
| ENTER (Press and release) | Enter |
| ENTER (Press and hold) | Stop |
| BACK | Return |
| SETUP | Setup menu |
| ▶▶ | Auto search (cue) |

Viewing photographs on the Flickr site

You can view photographs shared by particular users, or all of the photographs shared on Flickr.



Viewing photographs shared by particular users

1 Prepare for playback.


- ① Check the network environment, then turn on this unit's power (refer to [page 33](#) "Connecting to a home network (LAN)").
- ② If settings are required, make the "Settings" (refer to [page 143](#)).

2 Press NETWORK.

3 Use $\Delta \nabla \triangleleft \triangleright$ to select "Flickr", then press ENTER.

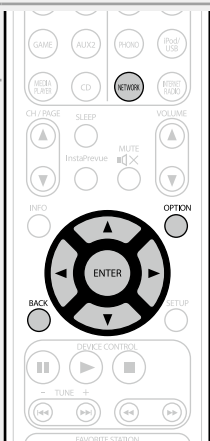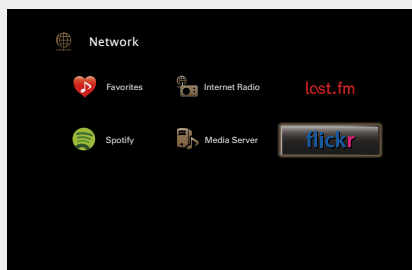

4 Use $\Delta \nabla$ to select "Add Flickr Contact", then press ENTER or \triangleright .

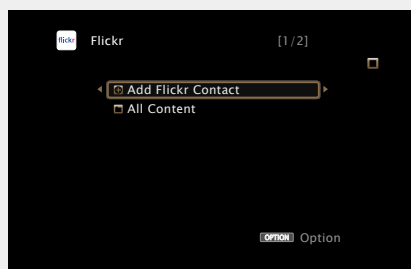

5 In "Contact", add the screen name (user name you want to view) you want to add.

- For character input, see [page 118](#).

6 After inputting the "Contact", press **OK**.

The screen name is added to "Contact", and the screen name you entered in Step 5 is displayed on the top screen of Flickr.

- If you enter a screen name that does not exist, "The Flickr Contact you entered could not be found" is displayed. Check and enter the correct screen name.

7 Use $\Delta \nabla$ to select the folder, and then press ENTER or \triangleright .

| | |
|----------------------------|--|
| Favorites | Displays the favorite photographs of the specified user. |
| Photostream | Displays a list of shared photographs. |
| PhotoSets | Displays the folder (photograph album) list. |
| Contacts | Displays the screen name used by the specified user in Contacts. |
| Remove this Contact | Deletes a user from Flickr Contact. |
| Add this Contact | Adds a user from Flickr Contact. |

8 Use $\Delta \nabla$ to select the file, and then press ENTER or \triangleright .

The selected file is displayed.

Going back to the previous screen

Press \triangleleft or **BACK**.


Operations available through the OPTION button

Press the **OPTION** button to display a menu of functions that can be used on the TV screen. Select the function you want to use from this menu. You can easily find and use the desired function.

Playing back still images in sequential order (Slideshow Interval) (refer to [page 81](#))

❑ Viewing all photographs on Flickr

1 Use Δ / ∇ to select “All Content”, then press **ENTER** or \triangleright .

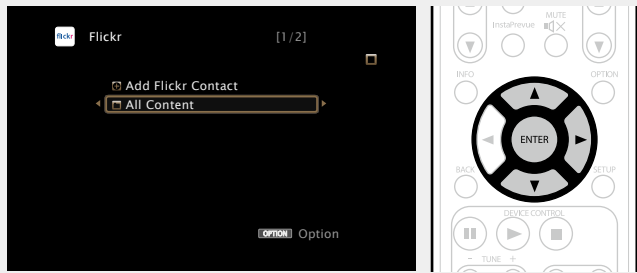

2 Use Δ / ∇ to select the folder, and then press **ENTER** or \triangleright .

Interestingness Displays photographs that are popular from the number of user comments or number of times they are added as favorites.

Recent Displays the most recently added photographs.


Search by text Search for photographs by keyword.

3 Use Δ / ∇ to select the file, and then press **ENTER** or \triangleright .
The selected file is displayed.

NOTE


Depending on the file format, some photographs cannot be viewed.

❑ Flickr operation buttons

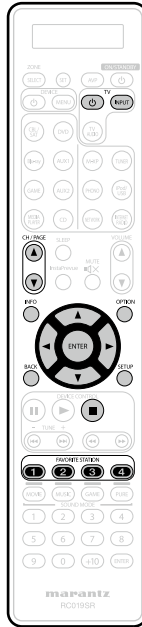

| Operation buttons | Function |
|--|---|
| TV ⏻ | TV power on/standby |
| TV INPUT | Switch TV input |
| CH/PAGE Δ / ∇ | Page search |
| INFO | Display of information such as the source name, volume, and sound mode name |
| OPTION | Slideshow Interval |
| Δ / ∇ / \triangleleft / \triangleright | Cursor operation / Auto search (cue, Δ / ∇) |
| ENTER (Press and release) | Enter |
| ENTER (Press and hold) | Stop |
| BACK | Return |
| SETUP | Setup menu |
| \blacksquare | Stop |
| FAVORITE STATION 1 – 4 (Press and release) | Call up favorite stations |
| FAVORITE STATION 1 – 4 (Press and hold) | Add to the favorite stations |

9 Menu items on playback screen.

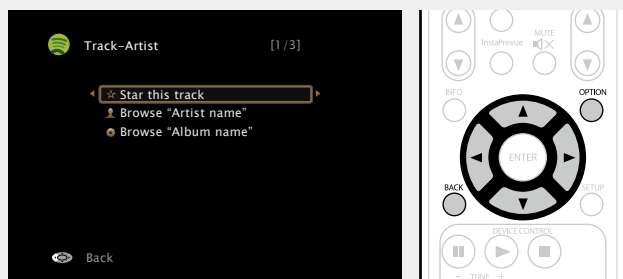

Star this track Adds a star to the selected track.

Browse "Artist name" Displays the list of albums by the artist of the track that is being played back.

Browse "Album name" Displays the list of tracks on the album that is being played back.

❑ Adjusting the sound quality (M-DAX)

Make this setting at "M-DAX" ([page 122](#)) in the menu. You can use the "M-DAX" function to restore to a state close to the audio before compression while correcting the bass feel to enjoy a richer playback experience. The default setting is "Off".

❑ Switching the screen display

Press **STATUS** on the main unit. The display switches between track title, artist name, and album title each time the button is pressed.

❑ Going back to the previous screen

Press **◀** or **BACK**.

❑ Changing the screen display duration

Make this setting at "Now Playing" ([page 131](#)) in the menu. The default setting is "Always On". When "Auto Off" is set, the on-screen display is turned off 30 seconds after an operation. Press **△▽◀▶** while the display is off to return to the original screen.

Operations available through the OPTION button

Press the **OPTION** button to display a menu of functions that can be used on the TV screen. Select the function you want to use from this menu. You can easily find and use the desired function.

❑ Performing repeat playback (Repeat)

([page 79](#))

❑ Performing random playback (Random)

([page 79](#))

❑ All Zone Stereo function ([page 82](#))

❑ Spotify operation buttons



| Operation buttons | Function |
|--|---|
| CH/PAGE ▲▼ | Page search |
| INFO | Display of information such as the source name, volume, and sound mode name |
| OPTION | Repeat playback / Random playback / All Zone Stereo |
| △▽◀▶ | Cursor operation / Auto search (cue, △▽) |
| ENTER (Press and release) | Enter |
| ENTER (Press and hold) | Stop |
| BACK | Return |
| SETUP | Setup menu |
| II | Pause |
| ▶ | Playback |
| ■ | Stop |
| ◀▶▶▶ | Auto search (cue) |
| FAVORITE STATION 1 – 4 (Press and release) | Call up favorite stations |
| FAVORITE STATION 1 – 4 (Press and hold) | Add to the favorite stations |

Convenient functions

Here, we explain how to use convenient functions for NETWORK sources and USB sources. The source names under the titles of each function's description are sources that allow use of these functions.

❑ Setting the USB port to use (USB Select)

([page 78](#))

❑ Searching content with keywords

([Text Search](#)) ([page 78](#))

❑ Performing repeat playback (Repeat)

([page 79](#))

❑ Performing random playback (Random)

([page 79](#))

❑ Favorites function

([page 80](#))

❑ Playing back music and a favorite picture at the same time (Slideshow)

([page 81](#))

❑ Playing back still images in sequential order

([Slideshow Interval](#)) ([page 81](#))

❑ Adjusting the picture quality for your viewing environment (Picture Mode)

([page 82](#))

❑ All Zone Stereo function


([page 82](#))

Setting the USB port to use (USB Select)


iPod **USB**

1 Press **OPTION**.
The option menu screen is displayed.

2 Use Δ / ∇ to select "USB Select", then press **ENTER**.

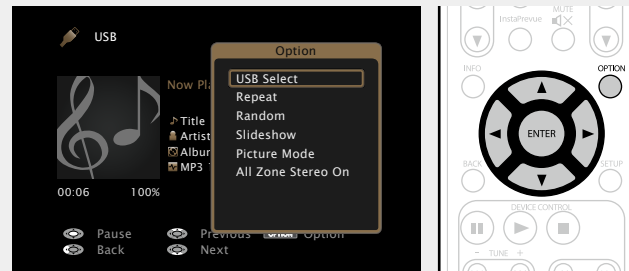

3 Use \triangleleft / \triangleright to select the USB port to use.

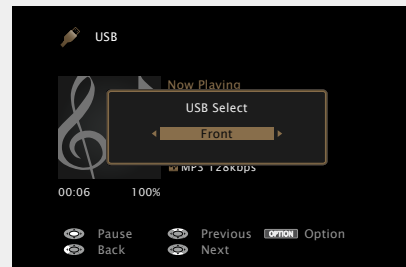

• Each time \triangleleft / \triangleright is pressed, the setting is changed as shown below.

Front \longleftrightarrow Rear

Front Uses the USB port on the front panel.

Rear Uses the USB port on the rear panel.


4 Press **ENTER**.
The display returns to the playback screen.

Searching content with keywords (Text Search)

USB **Internet Radio** **Media Server**

1 While content is playing, press **OPTION**.
The option menu screen is displayed.

2 Use Δ / ∇ to select "Text Search", then press **ENTER**.
The keyboard input screen is displayed.

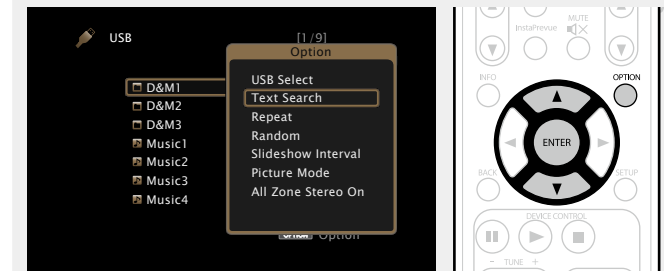

3 Enter the first character of the Internet Radio station or file you want to search for, and then press **OK**.

• For character input, see [page 118](#).




"Text Search" searches for Internet Radio stations or files that start with the entered first character from the displayed list.

NOTE

"Text Search" may not work for some lists.

❑ Playing back a search result content

Use Δ / ∇ to select the content you want to play, and then press **ENTER** or \triangleright .
Playback starts.

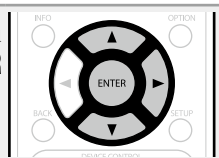


Performing repeat playback (Repeat)


USB Media Server Spotify

1 While content is playing, press **OPTION**.
The option menu screen is displayed.


2 Use Δ / ∇ to select "Repeat", then press **ENTER**.

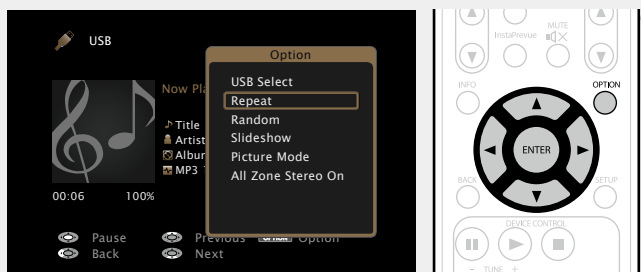

3 Use \triangleleft / \triangleright to select repeat playback mode.

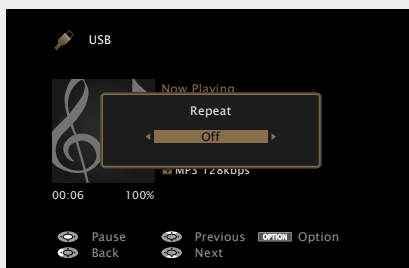

 • Each time \triangleleft / \triangleright is pressed, the setting is changed as shown below.



Off Repeat playback mode is canceled.

One A file being played is played repeatedly.

All All files in the folder currently being played are played repeatedly.


4 Press **ENTER**.
The display returns to the playback screen.

Performing random playback (Random)


USB Media Server Spotify

1 While content is playing, press **OPTION**.
The option menu screen is displayed.

2 Use Δ / ∇ to select "Random", then press **ENTER**.

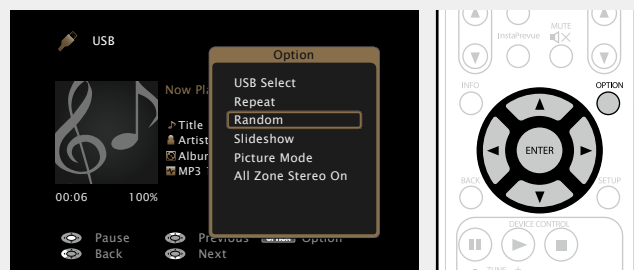

3 Use \triangleleft / \triangleright to select random playback mode.

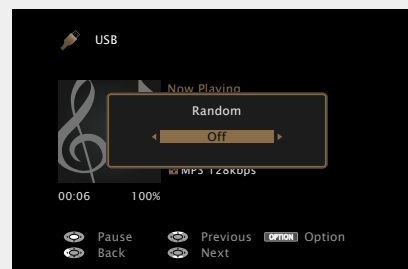

• Each time \triangleleft / \triangleright is pressed, the setting is changed as shown below.



Off Disable random playback.

On Enable random playback.

4 Press **ENTER**.
The display returns to the playback screen.



The random playback randomly selects a track to play back from all tracks every time a track ends. Therefore, the same track may be played back consecutively.

Favorites function

There are two ways to add content to favorites:

- ① Add to favorites from the Option menu
- ② Add to the **FAVORITE STATION** button

❑ Add to favorites from the Option menu (Save to Favorites)

Internet Radio **Media Server**


You can add up to 100 items as favorites for all sources (Internet Radio and Media Server).

1 While content is playing, press **OPTION**.

The option menu screen is displayed.

2 Use $\Delta \nabla$ to select “Save to Favorites”, then press **ENTER**.

“Favorite added” is displayed, and the current content is added to favorites.

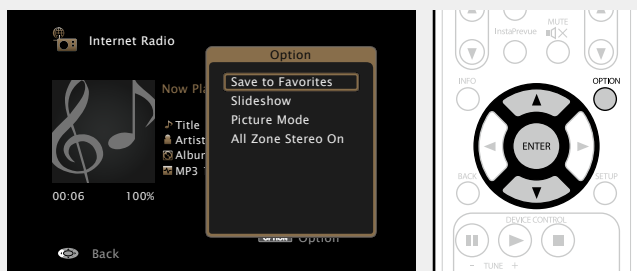

- The display returns to the playback screen when the procedure is completed.

Playing back content added in “Save to Favorites”

1 Press **NETWORK**.

2 Use $\Delta \nabla \triangleleft \triangleright$ to select “Favorites”, then press **ENTER**.



3 Use $\Delta \nabla$ to select the content you want to play, and then press **ENTER** or \triangleright . Playback starts.

❑ Adding to the **FAVORITE STATION** button


You can add up to four types of content.

NOTE

- Please note that if you add new content to a number that already contains content, the older content is deleted.
- The following operations update the database on the Media Server, which may make the added music files unplayable.
 - When you quit the Media Server and then restart it.
 - When music files are deleted or added on the Media Server.

While content is playing, press and hold one of the **FAVORITE STATION 1 – 4** buttons for more than 3 seconds.

The content is added to the button you pressed.

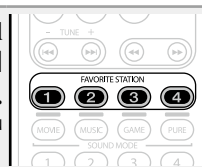

Contents that can be added to the **FAVORITE STATION** button differ depending on the input source.


| Input source | Contents that can be added |
|-----------------------|--|
| FM | Radio station |
| Internet Radio | Top list of content / Internet Radio station |
| Media Server | Top list of content / Track |
| Last.fm | Top list of content |
| Flickr | Top list of content |
| Spotify | Top list of content |
| Favorites | Top list of content |

Playing back content added to the **FAVORITE STATION** button

You can easily call up content by pressing the **FAVORITE STATION** button.

Press one of the **FAVORITE STATION 1 – 4** buttons that you added content to.

Playback starts.


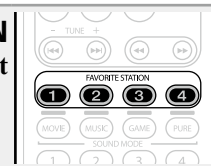


- When the **FAVORITE STATION 1 – 4** buttons is pressed, the AVP-operation mode starts automatically.
- Internet Radio stations are already registered to the **FAVORITE STATION 1 – 4** buttons. However, you may not be able to play the stations due to restrictions imposed by the radio stations.

Deleting content added to favorites (Remove from Favorites)

1 Press **NETWORK**.


2 Use $\Delta \nabla \triangleleft \triangleright$ to select "Favorites", then press **ENTER**.

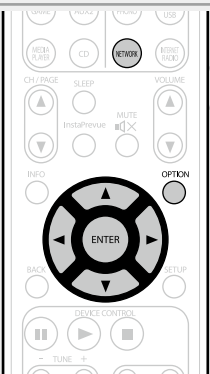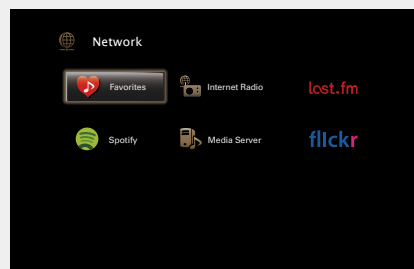

3 Use $\Delta \nabla$ to select the content you want to delete from favorites, then press **OPTION**.
The option menu screen is displayed.

4 Use $\Delta \nabla$ to select "Remove from Favorites", then press **ENTER**.

"Favorite removed" is displayed, and the selected content is deleted from favorites.

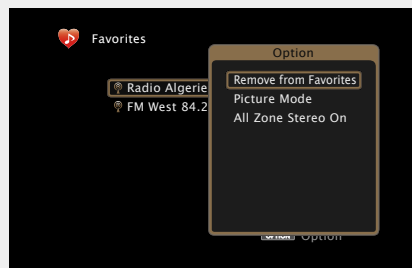

- The display returns to the original screen when the procedure is completed.

Playing back music and a favorite picture at the same time (Slideshow)

USB **Internet Radio** **Media Server**



1 Play back a still picture.

- Playing back still pictures stored on USB memory devices (page 50).
- Playing back still pictures stored on Flickr (page 74).

2 Play back a music file or Internet Radio station (page 63, 68).

3 Press **OPTION**.
The option menu screen is displayed.

4 Use $\Delta \nabla$ to select "Slideshow", then press **ENTER**.
The option menu disappears, and the picture you were viewing is shown on the screen.

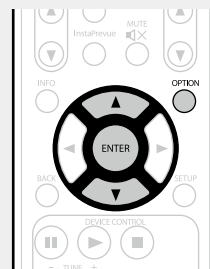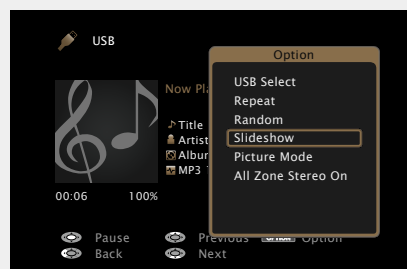



Playing back still images in sequential order (Slideshow Interval)

You can play back still image (JPEG) files stored on a USB memory device or Media Server and pictures on Flickr website as a slide show. The display time can also be set.

USB **Media Server** **Flickr**


1 Play back an image and press **OPTION**.
The option menu screen is displayed.

2 Use $\Delta \nabla$ to select "Slideshow Interval", then press **ENTER**.

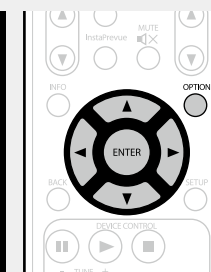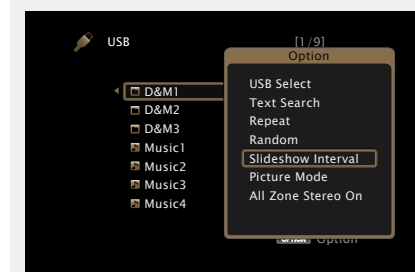

3 Use $\triangleleft \triangleright$ to set the display time.

 - Each time $\triangleleft \triangleright$ is pressed, the setting is changed as shown below.



Off The slide show is not played back.

5s – 60s Set the time for displaying a single image when playing back images in the slide show.

4 Press **ENTER**.
The slide show is displayed on the screen.



This unit plays back image (JPEG) files in the orientation in which they are stored in the folder.


Adjusting the picture quality for your viewing environment (Picture Mode)




* You can set the picture mode when an HDMI, component video or video connector is assigned.

1 While content is playing, press **OPTION**.
The option menu screen is displayed.


2 Use Δ / ∇ to select "Picture Mode", then press **ENTER**.

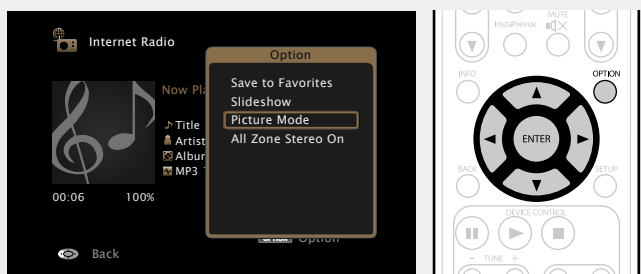

3 Use \triangleleft / \triangleright to select picture mode.

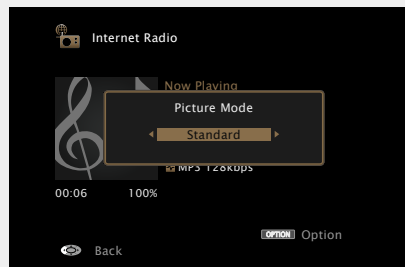

 • Each time \triangleleft / \triangleright is pressed, the setting is changed as shown below.



- Off** No picture quality adjustment is done with this unit.
- Standard** The standard mode suited for most living room viewing environments.
- Movie** A mode suited for watching movies in a dark room such as a theater room.
- Vivid** A mode that makes graphic images for games, etc. brighter and more vivid.
- Streaming** A mode suited for low bit rate video sources.
- Custom** Adjusts the picture quality manually.

4 Press **ENTER**.
The display returns to the playback screen.

All Zone Stereo function

You can play back music in multi-zones (ZONE2/ZONE3) simultaneously that is played back in MAIN ZONE.

It is useful when you want to enjoy the same music at the same time in multiple rooms during home party or when you want to play back the same BGM in the entire house.

Using the All Zone Stereo function (All Zone Stereo On)

The All Zone Stereo function can be set for any source.




Before setting this function, you need to turn on the multi-zones (ZONE2/ZONE3) for which you want to use the All Zone Stereo function.

1 Press **ZONE SELECT** to switch "MAIN".

2 Press **OPTION**.
The option menu screen is displayed.


3 Use Δ / ∇ to select "All Zone Stereo On", then press **ENTER**.
The input source for the multi-zones (ZONE2/ZONE3) is switched to the same as the one for MAIN ZONE, and playback in the All Zone Stereo mode starts.

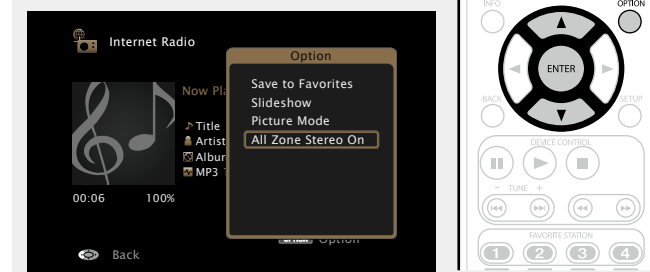

❑ Stopping the All Zone Stereo function (All Zone Stereo Off)

1 During playback in All Zone Stereo, press **OPTION**.
The option menu screen is displayed.

2 Use Δ / ∇ to select “All Zone Stereo Off”, then press **ENTER**.

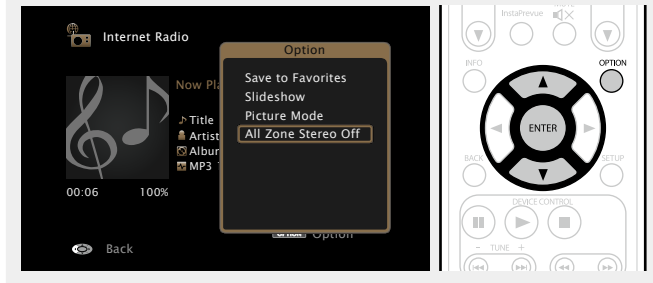

The All Zone Stereo function is also stopped when you:

- Turn MAIN ZONE off.
- Change the input source for MAIN ZONE.
- Change the sound mode.

NOTE

When “HDMI Audio Out” ([page 127](#)) is set to “TV”, the All Zone Stereo function is not available.

AirPlay function

Enjoy music from your iTunes library with high quality sound anywhere in your home.

Use the Apple Remote App* for iPhone, iPod touch and iPad to control iTunes from any room in your home.

* Available as a free download from the App Store.


Streaming music stored in iPhone, iPod touch, or iPad directly to the unit

If you update your "iPhone/iPod touch/iPad" to iOS 4.2.1 or later, you can stream music stored in your "iPhone/iPod touch/iPad" directly to this unit.

1 Make the Wi-Fi settings for iPhone, iPod touch, or iPad.


• For details, see your device's manual.

2 Startup iPhone, iPod touch, or iPad music or iPod app.

 is displayed on the iPhone, iPod touch or iPad screen.

3 Tap the AirPlay icon .

4 Select the speaker you want to use.

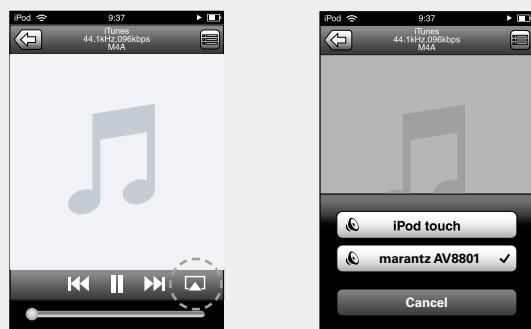

NOTE

In playback using the AirPlay function, the sound is output at the iPhone, iPod touch, iPad or iTunes volume setting level.

You should turn down the iPhone, iPod touch, iPad or iTunes volume prior to playback and then adjust it to a suitable level.

Playing iTunes music with this unit

1 Install iTunes 10, or later, on a Mac or Windows PC that is connected to the same network as this unit.


2 Turn this unit ON.

Set "Network" ([page 142](#)) to "Always On" for this unit.

NOTE

When "Network" is set to "Always On", the unit consumes more standby power.

3 Launch iTunes and click the AirPlay icon displayed in the lower right of the window and select this unit from the list.

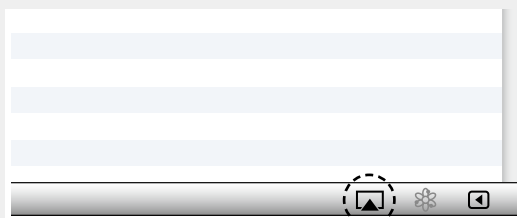

4 Choose a song and click play in iTunes.


The music will stream to this unit.

Selecting multiple speakers (devices)

It is possible to play iTunes songs on your home's AirPlay compatible speakers (devices) other than those of this unit.

1 Click the AirPlay icon and select "Multiple Speakers" from the list.

2 Check the speakers you want to use.

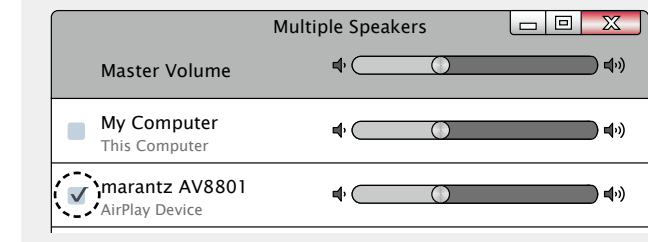


❑ Perform iTunes playback operations with the remote control unit of this unit


With this unit's remote control unit, you can perform iTunes song play, pause, and auto search (cue) operations.

1 Select "Edit" – "Preferences..." on the menu.

2 Select "Devices" in the iTunes setting window.

3 Check "Allow iTunes control from remote speakers", and then click "OK".

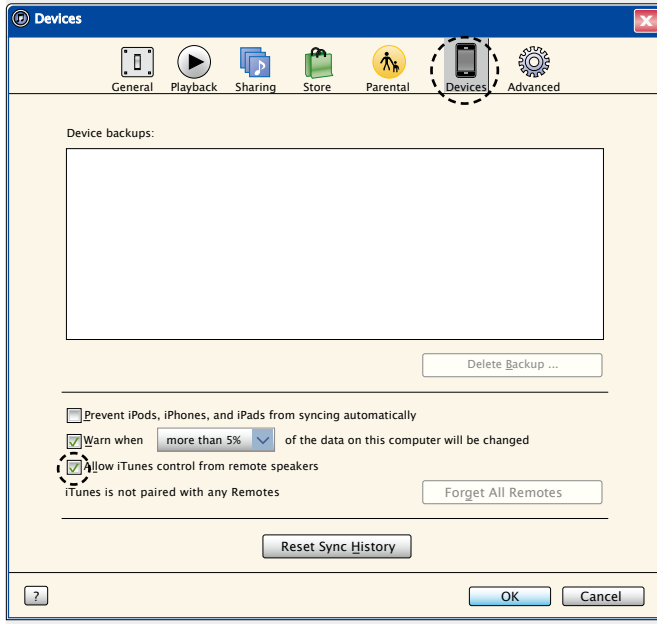

•  is displayed on the menu screen while AirPlay is being operated.


• Source input will be switched to "NETWORK" when AirPlay playback is started.

• You can stop AirPlay playback by pressing the < or choosing other input source.

• To see song and artist names together, press **STATUS** on the main unit.

• For information about how to use iTunes, also see the Help for iTunes.

• The screen may differ depending on the OS and software versions.

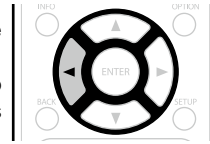

Selecting a listening mode (Sound Mode)


This unit allows you to enjoy various kinds of surround and stereo playbacks.

Multi-channel audio formats are adopted by many of the contents including Blu-ray disc and DVD as well as digital broadcasting and Internet-delivered movies and music.

This unit supports playback of almost all of these multi-channel audio formats. It also supports surround playback of audio formats other than multi-channel audio such as 2-channel stereo audio.

This unit automatically generates a list of all the playable sound modes based on the input audio format and the current speaker setup configuration and displays the list on the screen. Therefore, you can select a correct surround playback mode even if you are not familiar with sound mode selection. Try out various surround playback modes and enjoy surround playback in your favorite mode.

[Example] When **MOVIE** is pressed and held

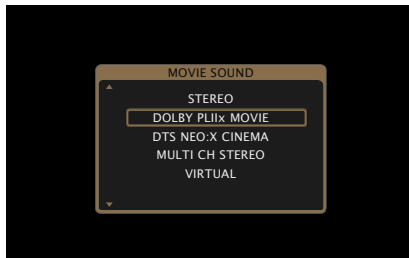

The displayed sound modes include the 2-channel stereo playback mode.



For audio formats recorded in a disc, see the disc jacket.

Selecting a listening mode

1 Play the selected device (🔗 [page 44 – 76](#)).

2 Press and hold **MOVIE**, **MUSIC** or **GAME** to select a listening mode.

This unit automatically generates and displays a list of selectable sound modes.

- Each time **MOVIE**, **MUSIC** or **GAME** is pressed, the listening mode is switched.

- MOVIE** Switches to the listening mode suitable for enjoying movies and TV programs.
- MUSIC** Switches to the listening mode suitable for enjoying music.
- GAME** Switches to the listening mode suitable for enjoying games.

- Pressing **MOVIE**, **MUSIC** or **GAME** displays a list of the listening modes that can be selected. Each time you press **MOVIE**, **MUSIC** or **GAME**, the listening mode changes.
- While the list is displayed, you can also use Δ / ∇ to select a listening mode.



- The **MOVIE**, **MUSIC**, or **GAME** button memorizes the last sound mode selected for its button. Pressing **MOVIE**, **MUSIC**, or **GAME** recalls the same sound mode as the one selected at the previous playback.
- If the content played back does not support the previously selected sound mode, the most standard sound mode for the content is automatically selected.

Direct/DSD Direct playback

Sound recorded in source is played as is.

1 Play the selected device (🔗 [page 44 – 76](#)).



2 Press **PURE** to select “**DIRECT**” or “**DSD DIRECT**”. Direct playback begins.



“DSD DIRECT” is shown on the display when playing DSD signals in the DIRECT mode.

Pure direct playback

This mode is for playback in higher sound quality than in “DIRECT” mode. Turn the display of the amplifier off to stop the analogue video circuit. This suppresses the source of noise that affects sound quality.

1 Play the selected device (🔗 [page 44 – 76](#)).



2 Press **PURE** to select “**PURE DIRECT**”. The display goes dark, and pure direct playback begins.



In DIRECT/DSD DIRECT and PURE DIRECT listening mode, the following items cannot be adjusted.

- Tone (🔗 [page 122](#))
- M-DAX (🔗 [page 122](#))
- MultEQ® XT 32 (🔗 [page 123](#))
- Dynamic EQ (🔗 [page 124](#))
- Dynamic Volume (🔗 [page 124](#))

NOTE

- Video signals are only output when HDMI signals are played in the PURE DIRECT mode.
- When in the PURE DIRECT mode, the menu screen is not displayed.
- When in the PURE DIRECT mode, the display turns off and appears as if there is no electricity.

Auto surround playback

This mode detects the type of input digital signal, and automatically selects the corresponding mode for playback.

1 Play the selected device (☞ [page 44 – 76](#)).

2 Press **PURE** to select “**AUTO**”.
Auto surround playback begins.



This can also be set by pressing **PURE DIRECT** on the main unit.


Listening mode


- The following listening modes can be selected using the **MOVIE**, **MUSIC**, **GAME**, and **PURE** buttons.
- Adjust the sound field effect with the menu “Surround Parameter” (☞ [page 120](#)) to enjoy your favorite sound mode.

| Operation button | Input signal | Listening mode | |
|--------------------|--------------------|--|---------|
| MOVIE | 2-channel *1 | STEREO | |
| | | AUTO *2 | |
| | | DOLBY PLIIx Movie *3 / DOLBY PLIIx Movie A-DSX *5 | |
| | | DOLBY PLII Movie *3 / DOLBY PLII Movie A-DSX *5 | |
| | | DOLBY PLIIz Height *3 | |
| | | DTS NEO:X Cinema *3 *6 | |
| | | MULTI CH STEREO | |
| | | VIRTUAL | |
| | | Multi-channel *4 | STEREO |
| | | | AUTO *2 |
| | Dolby Digital | DOLBY DIGITAL / DOLBY DIGITAL A-DSX *5 | |
| | | DOLBY DIGITAL EX | |
| | | DOLBY DIGITAL + PLIIx Movie | |
| | | DOLBY DIGITAL + PLIIz | |
| | | DOLBY DIGITAL + NEO:X Cinema | |
| | Dolby TrueHD | DOLBY TrueHD / DOLBY TrueHD A-DSX *5 | |
| | | DOLBY TrueHD + EX | |
| | | DOLBY TrueHD + PLIIx Movie | |
| | | DOLBY TrueHD + PLIIz | |
| | | DOLBY TrueHD + NEO:X Cinema | |
| | Dolby Digital Plus | DOLBY DIGITAL Plus / DOLBY DIGITAL Plus A-DSX *5 | |
| | | DOLBY DIGITAL Plus + EX | |
| | | DOLBY DIGITAL Plus + PLIIx Movie | |
| | | DOLBY DIGITAL Plus + PLIIz | |
| | | DOLBY DIGITAL Plus + NEO:X Cinema | |
| | DTS | DTS SURROUND / DTS SURROUND A-DSX *5 | |
| | | DTS ES DSCRT 6.1 | |
| | | DTS ES MTRX 6.1 | |
| | | DTS 96/24 | |
| | | DTS + PLIIx Movie | |
| DTS + PLIIz | | | |
| DTS + NEO:X Cinema | | | |

| Operation button | Input signal | Listening mode |
|------------------|--------------------------|---|
| MOVIE | DTS-HD / DTS Express | DTS-HD HI RES / DTS-HD HI RES A-DSX *5 |
| | | DTS-HD MSTR / DTS-HD MSTR A-DSX *5 |
| | | DTS Express / DTS Express A-DSX *5 |
| | | DTS-HD + PLIIx Movie |
| | | DTS-HD + PLIIz |
| | | DTS-HD + NEO:X Cinema |
| | | VIRTUAL |
| | PCM/DSD multi-channel | MULTI CH IN / MULTI CH IN A-DSX *5 |
| | | MULTI CH IN 7.1 |
| | | MULTI IN + Dolby EX |
| | | MULTI IN + PLIIx Movie |
| | | MULTI IN + PLIIz |
| | | MULTI IN + NEO:X Cinema *6 |
| | Multi-channel *4 | MULTI CH STEREO |
| | | VIRTUAL |

- *1 2-channel also includes analog input.
- *2 When AUTO mode is selected, the sound mode that is compatible with the input signal is used for playback.
- *3 This mode plays back 2-channel source in 5.1, 7.1, 9.1 or 11.1-channel playback. It cannot be selected when headphones are used, or when only front speakers are used.
- *4 Some listening modes cannot be selected, depending on the audio format or number of channels of the input signal. For details, see “Types of input signals, and corresponding sound modes” (☞ [page 172](#)).
- *5 These modes add a new channel to the 5.1 channel surround using Audyssey DSX® processing (☞ [page 125](#)). When “Heights” is selected in “Audyssey DSX®” (☞ [page 125](#)), a front height channel is added in playback. When “Wides” is selected, a front wide channel is added in playback. When “Wides/Heights” is selected, a front wide channel and a front height channel are added in playback.
- *6 This mode cannot be selected when DSD signals are input.

| Operation button | Input signal | Listening mode |
|---|----------------------------------|-----------------------------|
|  | 2-channel *1 | STEREO |
| | | AUTO *2 |
| | | DOLBY PLIIx Music *3 / |
| | | DOLBY PLIIx Music A-DSX *5 |
| | | DOLBY PLII Music *3 / |
| | | DOLBY PLII Music A-DSX *5 |
| | | DOLBY PLIIz Height *3 |
| | | DTS NEO:X Music *3 *6 |
| | MULTI CH STEREO | |
| | VIRTUAL | |
| | Multi-channel *4 | STEREO |
| | | AUTO *2 |
| | Dolby Digital | DOLBY DIGITAL / |
| | | DOLBY DIGITAL A-DSX *5 |
| | | DOLBY DIGITAL EX |
| | | DOLBY DIGITAL + PLIIx Music |
| | | DOLBY DIGITAL + PLIIz |
| | DOLBY DIGITAL + NEO:X Music | |
| | Dolby TrueHD | DOLBY TrueHD / |
| | | DOLBY TrueHD A-DSX *5 |
| | | DOLBY TrueHD + EX |
| | | DOLBY TrueHD + PLIIx Music |
| | | DOLBY TrueHD + PLIIz |
| | DOLBY TrueHD + NEO:X Music | |
| Dolby Digital Plus | DOLBY DIGITAL Plus / | |
| | DOLBY DIGITAL Plus A-DSX *5 | |
| | DOLBY DIGITAL Plus + EX | |
| | DOLBY DIGITAL Plus + PLIIx Music | |
| | DOLBY DIGITAL Plus + PLIIz | |
| DOLBY DIGITAL Plus + NEO:X Music | | |
| DTS | DTS SURROUND / | |
| | DTS SURROUND A-DSX *5 | |
| | DTS ES DSCRT 6.1 | |
| | DTS ES MTRX 6.1 | |
| | DTS 96/24 | |
| | DTS + PLIIx Music | |
| | DTS + PLIIz | |
| DTS + NEO:X Music | | |

| Operation button | Input signal | Listening mode |
|---|---------------------------|------------------------|
|  | DTS-HD / DTS Express | DTS-HD HI RES / |
| | | DTS-HD HI RES A-DSX *5 |
| | | DTS-HD MSTR / |
| | | DTS-HD MSTR A-DSX *5 |
| | | DTS Express / |
| | | DTS Express A-DSX *5 |
| | | DTS-HD + PLIIx Music |
| | DTS-HD + PLIIz | |
| | DTS-HD + NEO:X Music | |
| | PCM/DSD multi-channel | MULTI CH IN / |
| | | MULTI CH IN A-DSX *5 |
| | | MULTI CH IN 7.1 |
| | | MULTI IN + Dolby EX |
| Multi-channel *4 | MULTI IN + PLIIx Music | |
| | MULTI IN + PLIIz | |
| | MULTI IN + NEO:X Music *6 | |
| | MULTI CH STEREO | |
| | VIRTUAL | |


- *1 2-channel also includes analog input.
- *2 When AUTO mode is selected, the sound mode that is compatible with the input signal is used for playback.
- *3 This mode plays back 2-channel source in 5.1, 7.1, 9.1 or 11.1-channel playback. It cannot be selected when headphones are used, or when only front speakers are used.
- *4 Some listening modes cannot be selected, depending on the audio format or number of channels of the input signal. For details, see "Types of input signals, and corresponding sound modes" ([page 172](#)).
- *5 These modes add a new channel to the 5.1 channel surround using Audyssey DSX® processing ([page 125](#)). When "Heights" is selected in "Audyssey DSX®" ([page 125](#)), a front height channel is added in playback. When "Wides" is selected, a front wide channel is added in playback. When "Wides/Heights" is selected, a front wide channel and a front height channel are added in playback.
- *6 This mode cannot be selected when DSD signals are input.

| Operation button | Input signal | Listening mode |
|-------------------------|---|---|
| GAME | 2-channel *1 | STEREO |
| | | AUTO *2 |
| | | DOLBY PLIIx Game *3 / DOLBY PLIIx Game A-DSX *5 |
| | | DOLBY PLII Game *3 / DOLBY PLII Game A-DSX *5 |
| | | DOLBY PLIIz Height *3 |
| | | DTS NEO:X Game *3 *6 |
| | | MULTI CH STEREO |
| | VIRTUAL | |
| | Multi-channel *4 | STEREO |
| | | AUTO *2 |
| | Dolby Digital | DOLBY DIGITAL / DOLBY DIGITAL A-DSX *5 |
| | | DOLBY DIGITAL EX |
| | | DOLBY DIGITAL + PLIIz |
| | | DOLBY DIGITAL + NEO:X |
| | Dolby TrueHD | DOLBY TrueHD / DOLBY TrueHD A-DSX *5 |
| | | DOLBY TrueHD + EX |
| | | DOLBY TrueHD + PLIIz |
| | | DOLBY TrueHD + NEO:X Game |
| | Dolby Digital Plus | DOLBY DIGITAL Plus / DOLBY DIGITAL Plus A-DSX *5 |
| | | DOLBY DIGITAL Plus + EX |
| | | DOLBY DIGITAL Plus + PLIIz |
| | | DOLBY DIGITAL Plus + NEO:X Game |
| | DTS | DTS SURROUND / DTS SURROUND A-DSX *5 |
| | | DTS ES DSCRT 6.1 |
| | | DTS ES MTRX 6.1 |
| | | DTS 96/24 |
| | | DTS + PLIIz |
| DTS + NEO:X Game | | |
| DTS-HD / DTS Express | DTS-HD HI RES / DTS-HD HI RES A-DSX *5 | |
| | DTS-HD MSTR / DTS-HD MSTR A-DSX *5 | |
| | DTS Express / DTS Express A-DSX *5 | |
| | DTS-HD + PLIIz | |
| | DTS-HD + NEO:X Game | |

| Operation button | Input signal | Listening mode |
|------------------|--------------------------|---------------------------------------|
| GAME | PCM/DSD multi-channel | MULTI CH IN / MULTI CH IN A-DSX *5 |
| | | MULTI CH IN 7.1 |
| | MULTI IN + Dolby EX | |
| Multi-channel *4 | Multi-channel *4 | MULTI IN + PLIIz |
| | | MULTI IN + NEO:X Game *6 |
| PURE | All | MULTI CH STEREO |
| | | VIRTUAL |
| | Except DSD | PURE DIRECT |
| | | AUTO *2 |
| DSD | DIRECT | |
| | DSD | DSD DIRECT |

- *1 2-channel also includes analog input.
- *2 When AUTO mode is selected, the sound mode that is compatible with the input signal is used for playback.
- *3 This mode plays back 2-channel source in 5.1, 7.1, 9.1 or 11.1-channel playback. It cannot be selected when headphones are used, or when only front speakers are used.
- *4 Some listening modes cannot be selected, depending on the audio format or number of channels of the input signal. For details, see "Types of input signals, and corresponding sound modes" (page 172).
- *5 These modes add a new channel to the 5.1 channel surround using Audyssey DSX® processing (page 125). When "Heights" is selected in "Audyssey DSX®" (page 125), a front height channel is added in playback. When "Wides" is selected, a front wide channel is added in playback. When "Wides/Heights" is selected, a front wide channel and a front height channel are added in playback.
- *6 This mode cannot be selected when DSD signals are input.

Views on the TV screen or display

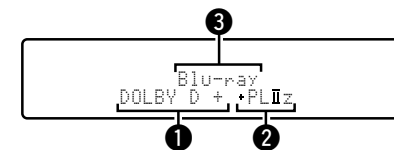

- 1 Shows a decoder to be used.
 - A DOLBY DIGITAL Plus decoder is displayed as "DOLBY D +".
- 2 Shows a decoder that creates sound output from the surround back speakers.
 - "+ PLIIz" indicates the front height sound from front height speakers.
- 3 Shows the name of the input source being played back.

□ Description of listening mode types

Dolby listening mode

| Listening mode type | Description |
|---------------------|---|
| DOLBY PLIIx*1 | This mode can be selected when a Dolby Pro Logic IIx decoder is used to play back 2-channel source in 6.1/7.1-channel surround sound including the surround back channel. By adding the surround back channel, a stronger surround feeling is obtained compared to Dolby Pro Logic II. There are three playback modes: "Movie" mode that is optimized for movie playback, "Music" mode that is optimized for music playback, and "Game" mode that is optimized for game play. |
| DOLBY PLII | This mode can be selected when a Dolby Pro Logic II decoder is used to play back 2-channel source in 5.1-channel surround sound with a natural, realistic feel. |
| DOLBY PLIIz*2 | This mode can be selected when a Dolby Pro Logic IIz decoder is used to play back 2-channel source in 7.1-channel surround sound with added front height channel. By adding a front height channel, the vertical expression is emphasized, improving the three-dimensionality of the sound. |
| DOLBY DIGITAL | This mode can be selected when playing sources recorded with Dolby Digital. |
| DOLBY DIGITAL EX*1 | Using a Dolby Digital EX decoder, this mode plays Dolby Digital source in 6.1/7.1 channel surround sound with added surround back channel. By adding a surround back channel, spacial expressiveness and sound localization are enhanced. |
| DOLBY TrueHD | This mode can be selected when playing sources recorded in Dolby TrueHD. |
| DOLBY DIGITAL Plus | This mode can be selected when playing sources recorded with Dolby Digital Plus. |

*1 This can be selected when "Speaker Config." – "Surr. Back" ([page 138](#)) is not set to "None".

*2 This can be selected when "Speaker Config." – "Front Height" ([page 138](#)) is not set to "None".

DTS listening mode

| Listening mode type | Description |
|---------------------|---|
| DTS NEO:X*1 | This matrix decoding technology uses the DTS NEO:X decoder to playback 2-channel source or 5.1/6.1/7.1 channel surround sources as a maximum of 11.1 channel surround sound. There are 3 modes: "Music" suited for playing music, "Cinema" suited for playing movies, and "Game" which is optimized for playing games. |
| DTS SURROUND | This mode can be selected when playing sources recorded in DTS. |
| DTS ES DSCRT6.1*2 | This mode is suitable for playing discs recorded in DTS-ES. The surround back channel added using the discrete method is played as an independent channel. Since all channels are independent, the 360-degree spacial expressiveness and sound localization are enhanced. |
| DTS ES MTRX6.1*3 | This mode is suitable for playing discs recorded in DTS-ES. The surround back channel added to the surround-left and surround-right channels by a matrix encoder at software recording time is decoded by this unit's matrix decoder and played from each channel (surround left, surround right, surround back). |
| DTS 96/24 | This mode can be selected when playing sources recorded in DTS 96/24. |
| DTS-HD | This mode can be selected when playing sources recorded in DTS-HD. |
| DTS Express | This mode can be selected when playing sources recorded in DTS Express. |

*1 This mode cannot be selected when DSD signals are input.

*2 This mode can be selected when only one surround back speaker is used and no front height speaker or front wide speaker is used.

*3 This can be selected when "Speaker Config." – "Surr. Back" ([page 138](#)) is not set to "None".

PCM/DSD multi-channel listening mode

| Listening mode type | Description |
|---------------------|--|
| MULTI CH IN | This mode can be selected when playing multi-channel PCM/DSD sources . |

Audyssey DSX® listening mode

| Listening mode type | Description |
|------------------------|--|
| Audyssey DSX® (A-DSX)* | This mode creates playback for the new channels (front wide or front height) in 5.1-channel systems. By adding front wide or front high channels, the surround sound effects sound more three dimensional and realistic. |

* This mode is displayed when “Audyssey DSX®” ([page 125](#)) is set to “Wides/Heights”, “Heights” or “Wides”.

Original listening mode

| Listening mode type | Description |
|---------------------|--|
| MULTI CH STEREO | This mode is for enjoying stereo sound from all speakers. The same sound as that from the front speakers (L/R) is played back at the same level from the surround speakers (L/R) and surround back speakers (L/R). |
| VIRTUAL | This mode is for enjoying surround effects using only the front speakers or headphones. |

AUTO listening mode

| Listening mode type | Description |
|---------------------|---|
| AUTO | In this mode, the type of digital signal input, such as Dolby Digital, Dolby TrueHD, Dolby Digital Plus, DTS, DTS-HD, PCM (multi-channel) is detected, and the playback mode switches automatically to the corresponding mode. If the input signal is analog or PCM (2-channel), stereo playback is used. |

STEREO listening mode







| Listening mode type | Description |
|---------------------|--|
| STEREO | This is the mode for playing in stereo. The tone can be adjusted. <ul style="list-style-type: none"> • Sound is output from the front left and right speakers and subwoofer. • If multichannel signals are input, they are mixed down to 2-channel audio and are played. |

Direct listening mode

| Listening mode type | Description |
|---------------------|---|
| DIRECT/DSD DIRECT | Sound recorded in source is played as is. |
| PURE DIRECT | This mode is for playback in higher sound quality than in DIRECT mode. This suppresses the source of noise that affects sound quality. The following circuits that affect sound quality are set to off. <ul style="list-style-type: none"> • Main unit’s display circuit (The display is turned off.) • Analog video input/output circuit |

Advanced version

Here, we explain functions and operations that let you make better use of this unit.

- **Installation/connection/setup of speakers (Advanced)**  [page 93](#)
- **Connections (Advanced connection)**  [page 100](#)
- **Playback (Advanced operation)**  [page 102](#)
- **Playback in ZONE2/ZONE3/ZONE4 (Separate room)**  [page 111](#)
- **How to make detailed settings**  [page 114](#)
- **Operating external devices with the remote control**  [page 151](#)

Installation/connection/setup of speakers (Advanced)

Procedure for speaker settings

Speaker installation



Speaker connection (👉 page 95)



Set up speakers (👉 page 98)


Speaker installation

Determine the speaker system depending on the number of speakers you are using and install each speaker and subwoofer in the room. Here, we explain how to install the speakers using a typical example.

This unit is compatible with Audyssey DSX® (👉 page 178), Dolby Pro Logic IIz (👉 page 178) and DTS Neo:X (👉 page 179) which offers an even wider and deeper surround sensation. When using Audyssey DSX®, install front wide speakers or front height speakers. When using Dolby Pro Logic IIz, install front height speakers. When using Dolby Pro Logic IIz, install front height speakers.



Use the illustration below as a guide for how high each speaker should be installed. The height does not need to be exactly the same.

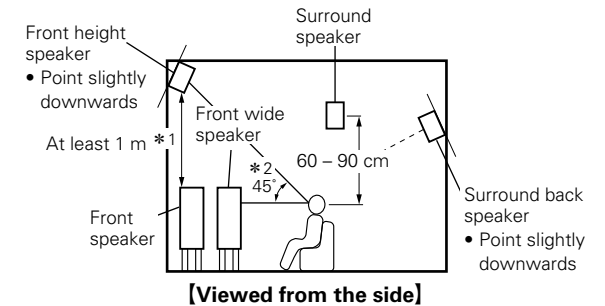


- *1 Recommended for Dolby Pro Logic IIz
- *2 Recommended for Audyssey DSX®

Typical speaker layout

When using Audyssey DSX[®], install front wide speakers or front height speakers.

When using Dolby Pro Logic IIz, install front height speakers.

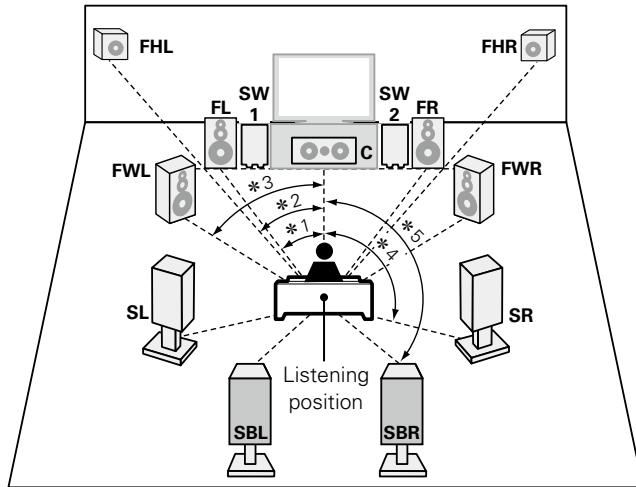


- *1 22° - 30°
- *2 22° - 45°
- *3 55° - 60°
- *4 90° - 110°
- *5 135° - 150°

[Speaker abbreviations]


- | | |
|---------------------------------|--------------------------------------|
| FL Front speaker (L) | SBL Surround back speaker (L) |
| FR Front speaker (R) | SBR Surround back speaker (R) |
| C Center speaker | FHL Front height speaker (L) |
| SW Subwoofer | FHR Front height speaker (R) |
| SL Surround speaker (L) | FWL Front wide speaker (L) |
| SR Surround speaker (R) | FWR Front wide speaker (R) |
| SB Surround back speaker | |

When 6.1ch speakers are installed

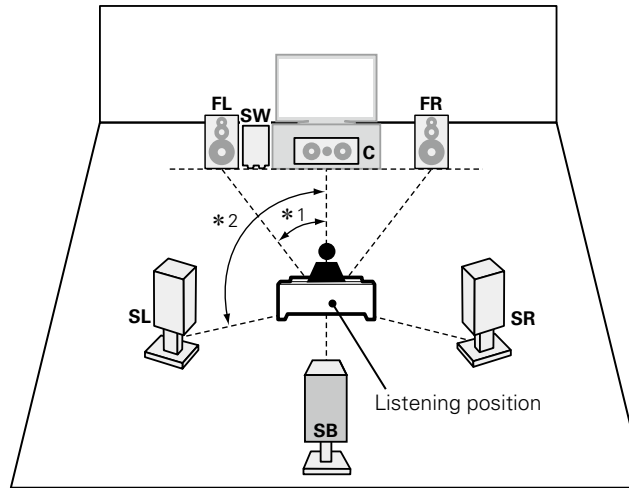

- *1 22° - 30°
- *2 90° - 110°

When 5.1ch speakers are installed

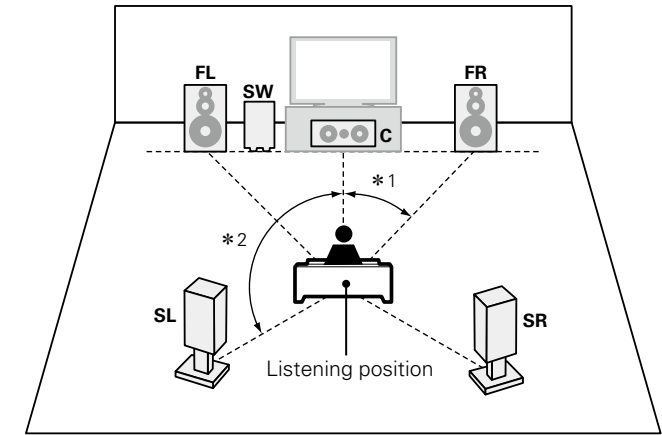

- *1 22° - 30°
- *2 120°

Speaker connection

Example of connections to marantz MM8077 power amp


- ❑ Normal connection (👉 page 95)
- ❑ 6.1-channel (Surround back speaker) connection (👉 page 96)
- ❑ 5.1-channel connection (👉 page 96)
- ❑ 2.1-channel connection (👉 page 97)

Important information

Up to 11.2 channels can be connected by using either UNBALANCED RCA terminals or BALANCED XLR terminals. When using UNBALANCED RCA terminals for connection, set the input change switch to "UNBALANCED" on MM8077. When using BALANCED XLR terminals for connection, set the input change switch to "BALANCED" on MM8077. This example explains how to make a connection when using UNBALANCED RCA terminals.


Normal connection

If you connect the surround back, front height, and front wide speakers before you start playback, the audio is played back by automatically switching the speakers in accordance with the surround mode or input signals.

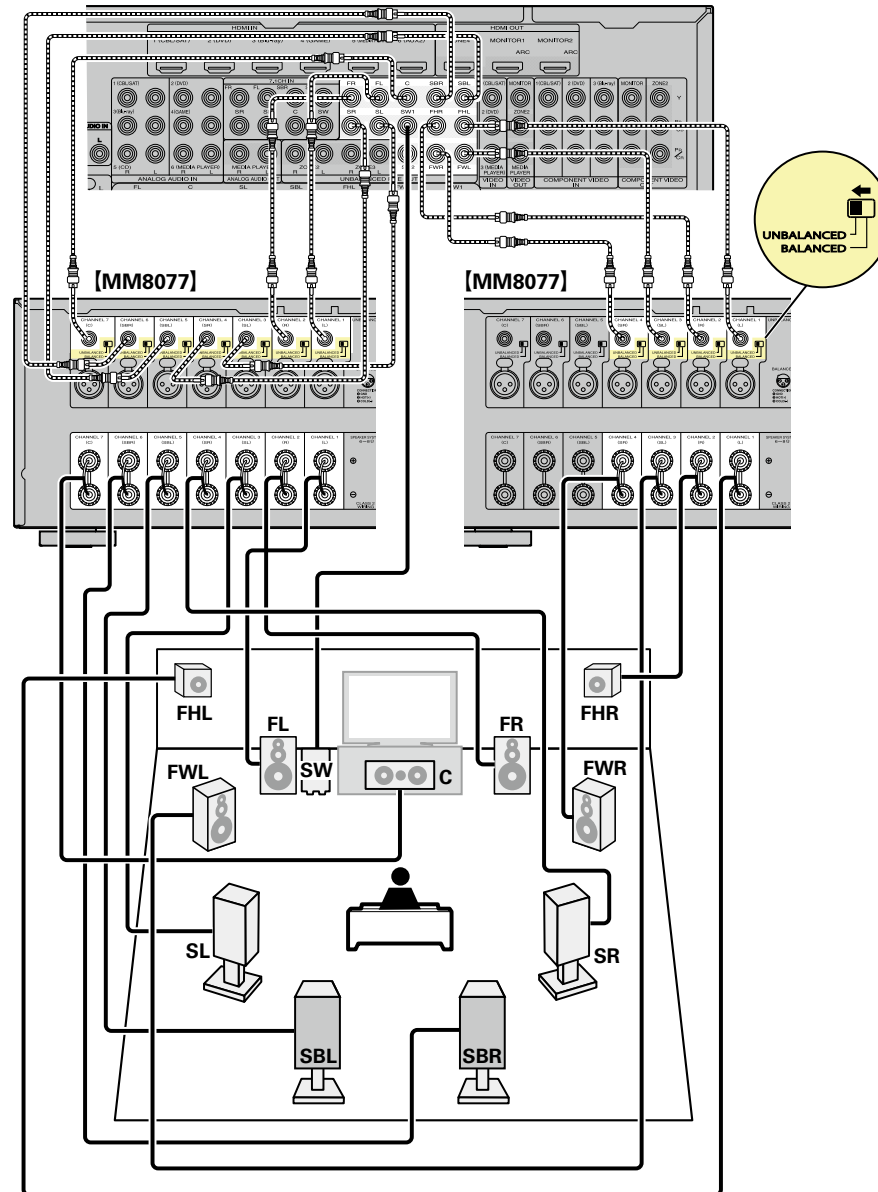


6.1-channel (Surround back speaker) connection


If you are using just one surround back speaker, connect it to the SBL terminal on the power amp. For speaker settings in this case, see "When 6.1ch speakers are installed" ([page 94](#)).

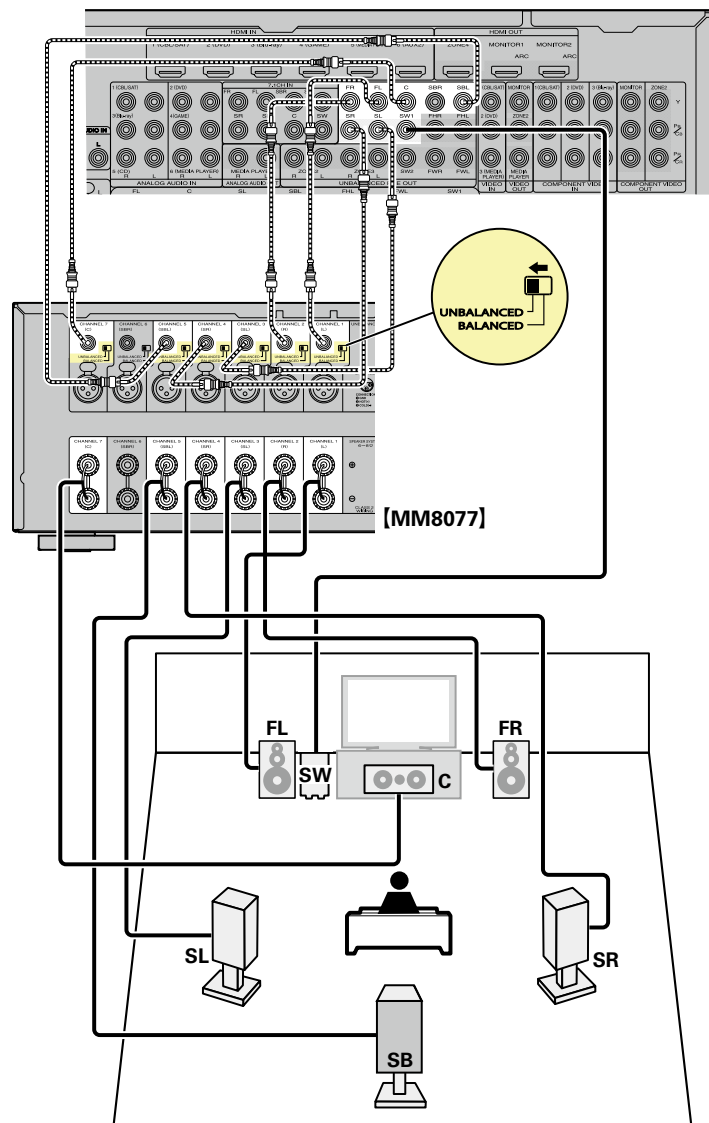

5.1-channel connection

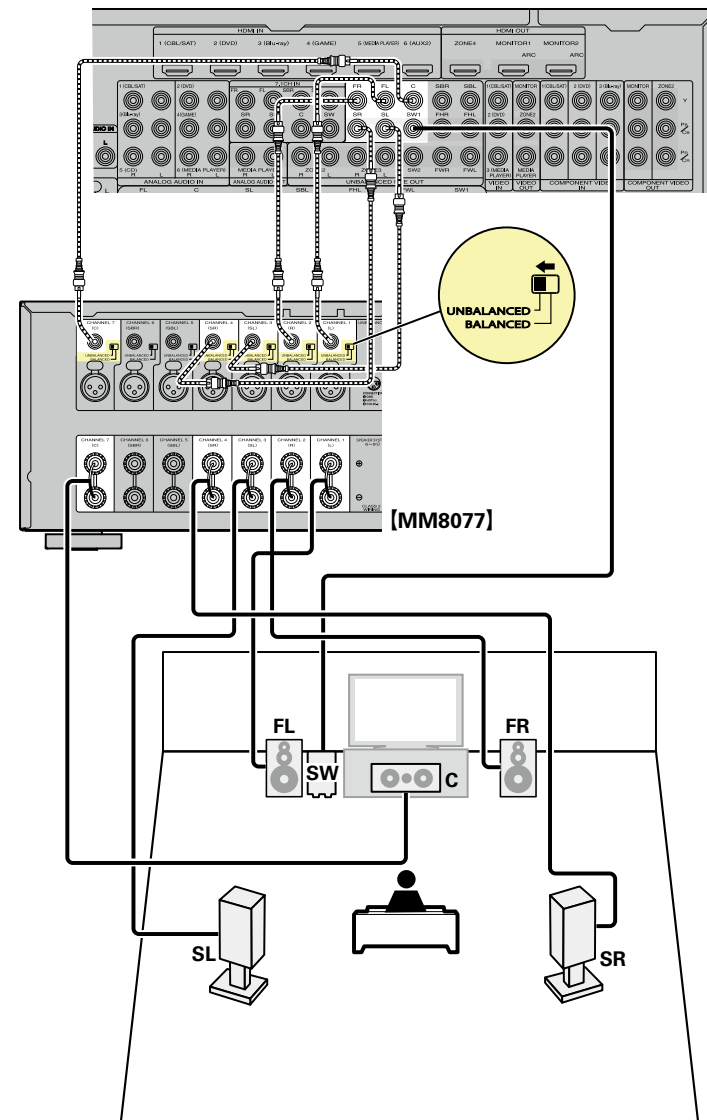

2.1-channel connection

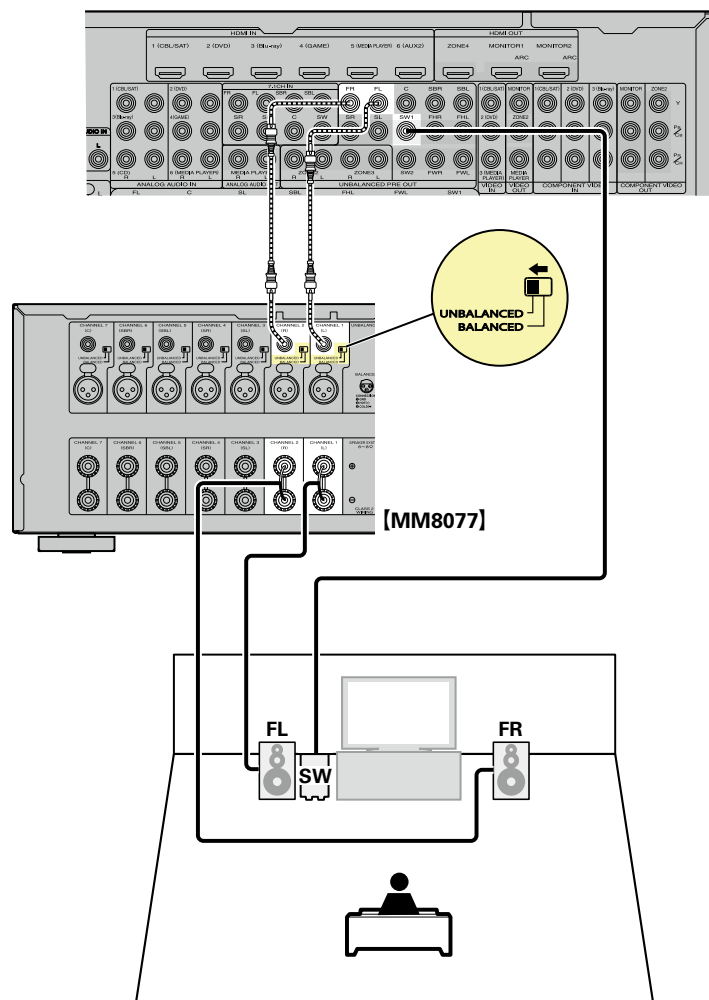


For connecting two subwoofers

Two subwoofers can be connected to this unit.

To use two subwoofers, set "Subwoofer" to "2 spkr" using the "Speaker Config." setting ([page 138](#)).

The level and distance can be set separately for Subwoofer 1 and Subwoofer 2.

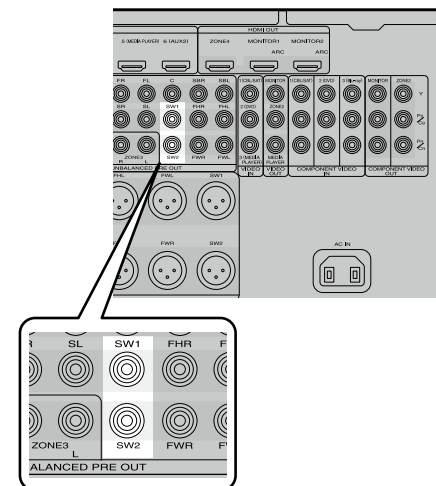

Set up speakers

 around items indicate the settings.

This section describes detailed settings for Audyssey® Setup.

Connecting the Pre Tuner, Power Amplifier and your TV.

Before Audyssey® Setup measurement, the settings shown below can be made.

- Setting the channels to be used (Channel Select)


If channels that are not to be used are set in advance, measurement for the set channels is skipped, and measuring time can be reduced. You can also change the number of surround back speakers ([page 98](#) "Set up "Channel Select"").

□ Audio output from each PRE OUT terminal

| | PRE OUT channel | | | | | | |
|---------------------------------|-----------------|--------|---------------------------|----------|---------------|--------------|------------|
| UNBALANCED RCA PRE OUT terminal | FL/FR | C | SW1/SW2 | SL/SR | SBL/SBR | FHL/FHR | FWL/FWR |
| BALANCED XLR PRE OUT terminal | FL/FR | C | SW1/SW2 | SL/SR | SBL/SBR | FHL/FHR | FWL/FWR |
| Audio Output | Front | Center | Subwoofer 1 / Subwoofer 2 | Surround | Surround Back | Front Height | Front Wide |

1 Set up the zone mode


Press **ZONE SELECT** to switch "MAIN".

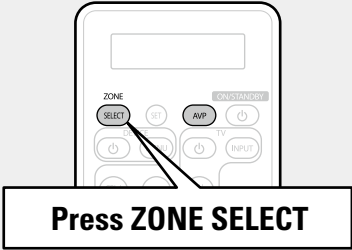



NOTE

When using a remote control with preset codes registered ([page 154](#)), press **AVP** to set the remote control to the AVP-operation mode before operation.

2 Connect the setup microphone.

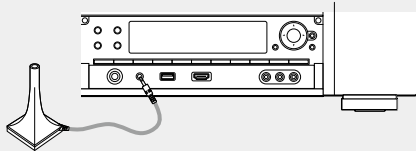

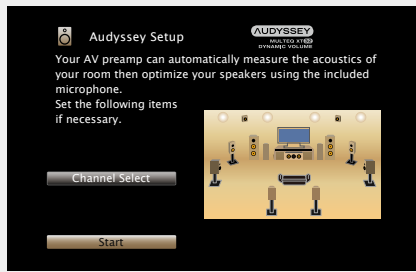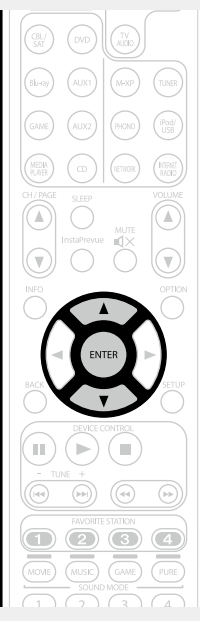


When the setup microphone is connected, the following screen is displayed.





3 Set up "Channel Select"

Use Δ / ∇ to select "Channel Select", and then press **ENTER**.

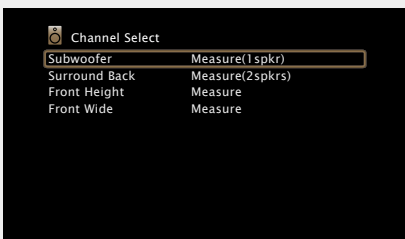4 Use \triangle / ∇ to select a channel, and then press **ENTER**.

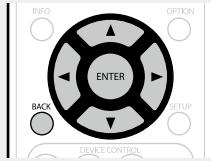

Subwoofer / Surround Back / Front Height / Front Wide

5 Use \triangleleft / \triangleright to set whether or not a subwoofer channel is measured, and then press **ENTER**.

Measure (2 spkrs) Set for measuring two subwoofers (Audyssey Sub EQ HT™).

Measure (1 spkr) Set for measuring a subwoofer.

Skip Set for no measuring of a subwoofer.

6 Use \triangleleft / \triangleright to set whether or not a surround back channel is measured, and then press **ENTER**.

Measure (2 spkrs) Set for measuring two surround back speakers.

Measure (1 spkr) Set for measuring a surround back speaker.

Skip Set for no measuring of a surround back speaker.

7 Use \triangleleft / \triangleright to set whether or not a front height channel is measured, and then press **ENTER**.

Measure Set to measure the front height speakers.

Skip Set when you do not want to measure the front height speakers.

8 Use \triangleleft / \triangleright to set whether or not a front wide channel is measured, and then press **ENTER**.

Measure Set to measure the front wide speakers.

Skip Set when you do not want to measure the front wide speakers.

9 Press \triangleleft or **BACK**.
Proceed to [page 37](#) **Preparation** step 5.

NOTE


After performing Audyssey® Setup, do not change the speaker connections or subwoofer volume. In event of a change, perform Audyssey® Setup again.

Connections (Advanced connection)

Connecting the REMOTE CONTROL connectors


Performing operations on this unit and external devices

- You can connect an IR receiver to this unit to perform operations on this unit and external devices with the supplied remote control unit.
- To do this, disable the remote control signal receiving function ([page 109](#) "Remote lock function").

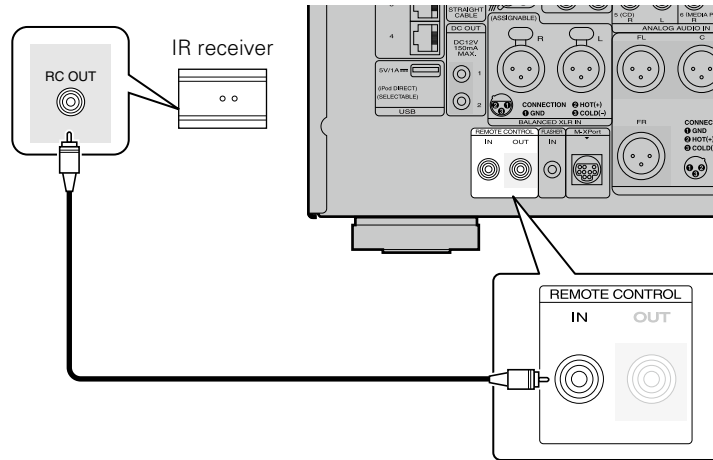

Remotely connecting marantz devices

- When you are using a marantz device other than this unit that supports remote connection, an IR receiver is not necessary.
- You can transmit remote control signals just by connecting the device to the REMOTE CONTROL IN/OUT connector with a monaural cable.
- Set the remote control switch located on the rear panel of the connected audio component to "EXTERNAL" or "EXT." to use this feature.
- If a marantz power amplifier (excluding certain models) is connected to any of these connectors, the power of the power amplifier switches to on/standby in conjunction with the **ON/STANDBY** button of the this unit.

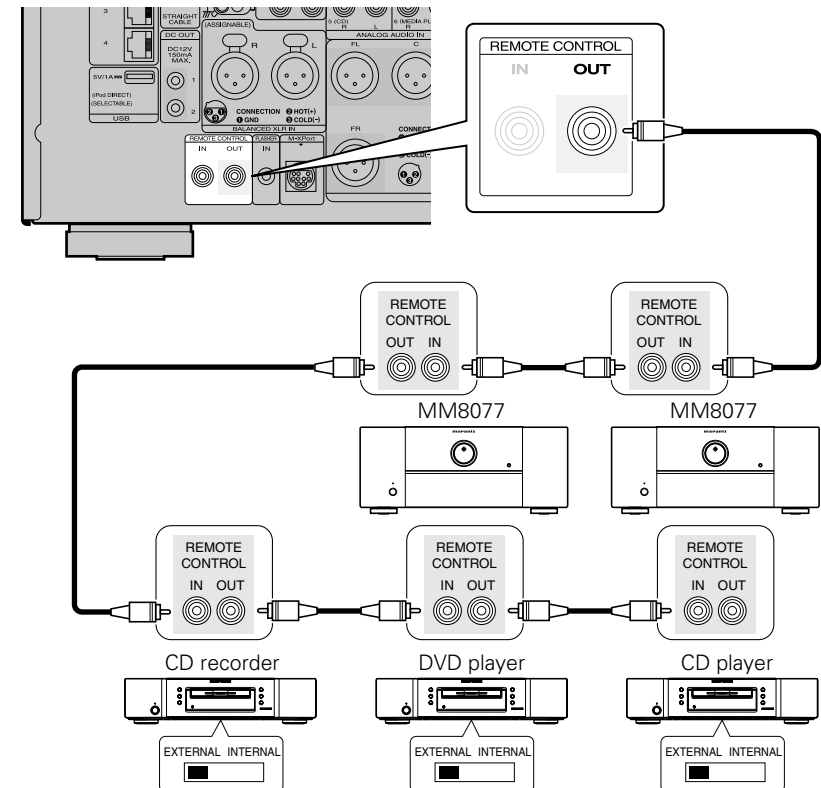


NOTE

When not connecting an IR receiver, make sure to enable the remote control signal receiving function. When the function is disabled, you can not perform operations with the remote control unit.

Connecting an external control device

RS-232C connector

When you connect an external control device, you can control this unit with the external control device (such as power supply operation, volume adjustment, and input source switching).

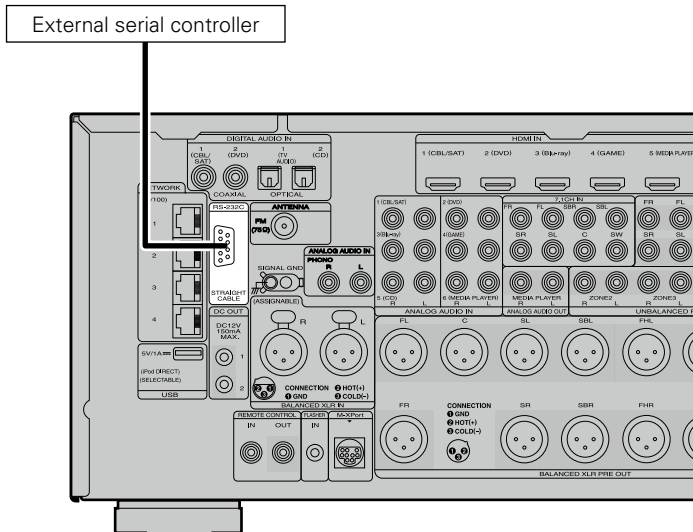


Perform the operation below beforehand.

- ① Turn on the power of this unit.
- ② Turn off the power of this unit from the external controller.
- ③ Check that the unit is in the standby mode.

DC OUT jacks

When a device with DC IN jack is connected, the connected device's power on/standby can be controlled through linked operation to this unit.

The DC OUT jack outputs a maximum 12 V/150 mA electrical signal.

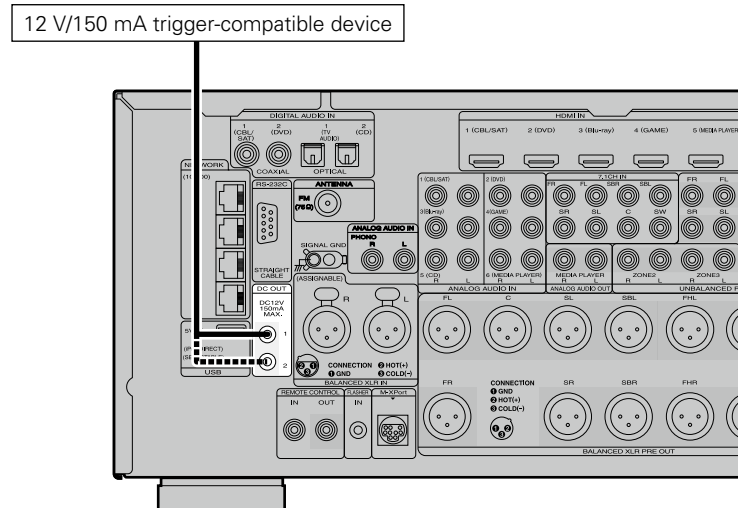

NOTE

- Use the monaural mini-plug cable for connecting DC OUT jacks. Do not use the stereo mini-plug cable.
- If the permissible trigger input level for the connected device is larger than 12 V/150 mA, or has shorted, the DC OUT jack cannot be used. In this case, turn off the power to the unit, and disconnect it.

Playback (Advanced operation)

Setup (👉 page 35)

Playback (Basic operation) (👉 page 43)

Selecting a listening mode (Sound Mode)
(👉 page 86)

- HDMI control function (👉 page 102)
- InstaPrevue function (👉 page 104)
- Sleep timer function (👉 page 105)
- Web control function (👉 page 106)
- Dual backup memory function (👉 page 108)
- Panel lock function (👉 page 108)
- Remote lock function (👉 page 109)
- Switches light illumination on/off (👉 page 110)
- Various memory functions (👉 page 110)

HDMI control function

If you connect the unit and an HDMI control function compatible TV or player with an HDMI cable and then enable the HDMI control function setting on each device, the devices will be able to control each other.

Operations possible by HDMI control

- **This unit power off can be linked to the TV power off step.**
- **You can switch audio output devices with a TV operation.**
When you set "Output audio from amp" in the TV audio output setup operation, you can switch the amp power on.
- **You can adjust this unit volume in the TV volume adjustment operation.**
- **You can switch this unit input sources through linkage to TV input switching.**
- **When playing the player, this unit input source switches to the source for that player.**
- **If you switch the input source of the unit to "TV AUDIO", you can play TV audio with this unit (👉 page 10 "About ARC (Audio Return Channel) function").**
- **When "HDMI Control" (👉 page 128) in the menu is set to "On", signals input to the HDMI input connector are output to the television or other device connected to the HDMI output connector, even if the power of this unit is in standby (pass-through function).**



To use this unit to play the audio of a TV that does not support the ARC function, connect the TV with an optical-digital or analog connection (👉 page 10).

Setting procedure

- 1 Set the HDMI output connector corresponding with the HDMI control function.**
Set "HDMI Control" (👉 page 128) to "On".
- 2 Turn the power on for all the devices connected by HDMI cable.**
- 3 Set the HDMI control function for all devices connected by HDMI cable.**
 - Please consult the operating instructions for the connected devices to check the settings.
 - Carry out steps 2 and 3 should any of the devices be unplugged.
- 4 Switch the television input to the HDMI input connected to this unit.**
- 5 Switch this unit input to the HDMI input source and check if the picture from the player is ok.**
- 6 When you turn the TV's power to standby, check that the power of this unit also goes to standby.**



If the HDMI control function does not operate properly, check the following points.

- Is the TV or player compatible with the HDMI control function?
- Is "HDMI Control" ([page 128](#)) set to "On"?
- Is "Power Off Control" ([page 129](#)) set to "All" or "Video"?
- Is "Control Monitor" ([page 129](#)) set for the monitor output connected to television?
- Is "Control Monitor" ([page 129](#)) set to the TV that uses the HDMI control function when this unit is connected to two TVs that support HDMI connectors?
- Are the HDMI control function settings of all devices correct?

NOTE

- **When "HDMI Control" is set to "On", it consumes more standby power.**
- The HDMI control function controls operations of a TV that is compatible with the HDMI control function. Make sure that the TV and HDMI are connected when you perform HDMI control.
- Some functions may not operate depending on the connected TV or player. Check the owner's manual of each device for details beforehand.
- When "Power Off Control" on the menu is set to "Off" ([page 129](#)), this unit is not set to standby even if the connected device is in the standby mode.
- When connection changes are implemented, such as adding connections to HDMI devices, linked operations may be initialized. In this case, you will need to reconfigure the settings.
- When "HDMI Control" is set to "On", it is not possible to assign an HDMI connector to "TV AUDIO" at "Input Assign" ([page 133](#)).
- Should any of the operations below be performed, the interlocking function may be reset, in which case, repeat steps 2 and 3.
 - "Input Assign" – "HDMI" ([page 133](#)) setting has changed.
 - "Video Output" ([page 128](#)) setting is changed.
 - There is a change to the connection between the devices and the HDMI, or an increase in devices.
- The HDMI ZONE4 function is compatible with the HDMI control function.
- The ARC function, Power Off Control function, and Volume Control function is not compatible with the HDMI ZONE4 control function.
- When the HDMI ZONE4 function is used with "HDMI Control" in the menu set to "On", the HDMI ZONE4 control function may not fully work.
- When the power in ZONE4 is on with "HDMI Control" ([page 128](#)) set to "On" and "Control Monitor" set to "Monitor 1" or "Monitor 2" ([page 129](#)), the following operations occur (Some example behaviors are listed below.).
 - When the power of the TV used for MAIN ZONE is off and the player selected for ZONE4 starts playback, the TV used for MAIN ZONE is turned on. In this case, the input source selected for MAIN ZONE changes to the input source selected for ZONE4.
 - When playing back a TV used for MAIN ZONE and ZONE4 with an HDMI connection, turning off the TV used for MAIN ZONE also turns off this unit and the player.
 - When a same input source is selected for MAIN ZONE and ZONE4, stopping playback of the player on the TV stops the playback on the player and the video being played back in ZONE4 as well.

- When the power in ZONE4 is on with "HDMI Control" ([page 128](#)) set to "On" and "Control Monitor" set to "ZONE4" ([page 129](#)), the following operations occur.
 - When the power of the TV used for ZONE4 is off and the player selected for MAIN ZONE starts playback, the TV used for ZONE4 is turned on. In this case, the input source selected for ZONE4 changes to the input source selected for MAIN ZONE.
 - When playing back a TV used for ZONE4 and MAIN ZONE with an HDMI connection, turning off the TV used for ZONE4 also turns off the player.
 - When a same input source is selected for ZONE4 and MAIN ZONE, stopping playback of the player on the TV stops the playback on the player and the video being played back in MAIN ZONE as well.

InstaPrevue function

You can display sub screens on the main screen to preview playback video of the HDMI input connected to this unit. You can also display various video inputs in a single screen to switch input sources such as Blu-ray, DVD, and GAME while viewing them on sub screens.



The InstaPrevue function is compatible with the HDMI 1 – 6 connectors. It is not supported for the HDMI 7 / MHL connectors.

Switching input sources

Switch to the desired input source on this unit while viewing sub screens.

1 Press **ZONE SELECT** to switch “MAIN”.

2 Press **InstaPrevue**.

The main screen (current input video) and sub screens (other input video) are displayed.


3 Use $\Delta \nabla \triangleleft \triangleright$ to select the desired input source from the sub screen, and press **ENTER**.

To operate devices with the remote control unit of this unit after selecting the input source:

While sub screens are displayed, press an input source select button to select the desired input source.



Before you can perform this operation, you must register preset codes for the remote control unit ([page 151](#)).

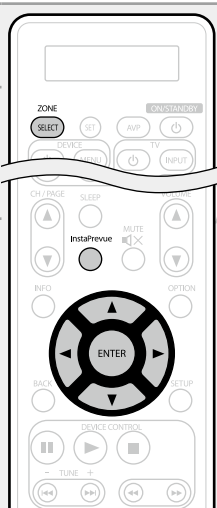

Setting how to display sub screens

You can select to display five sub screens or only one sub screen.

1 While sub screens are displayed, press **OPTION**.


The InstaPrevue setting screen is displayed.

2 Press $\triangleleft \triangleright$ in “HDMI Input” to select how to display sub screens.

All Displays five sub screens.

One at time Displays only one sub screen.

3 Press **OPTION** to enter the setting.

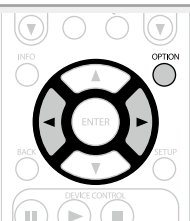

Changing the display location of sub screens

You can change the display location of sub screens to a desired location.

 
1 While sub screens are displayed, press **OPTION**.

The InstaPrevue setting screen is displayed.

2 Press ∇ to select “Location” and use $\triangleleft \triangleright$ to select the location where you want to display sub screens.


• The locations where sub screens can be displayed differ according to the “HDMI Input” setting.

When “HDMI Input” is set to “All”



• The default setting is “Bottom”.

When “HDMI Input” is set to “One at time”

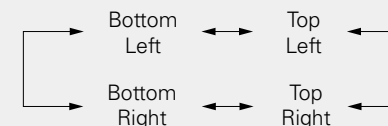

• The default setting is “Bottom Left”.

3 Press **OPTION** to enter the setting.


NOTE

- The InstaPrevue function is available when HDMI signals are input to the main screen. However, it is not available while computer's resolution (e.g. VGA) or certain 3D video contents is being played back.
- The InstaPrevue function is not available for the ZONE4 HDMI monitor output. It is also not available when the power in ZONE4 is on.

Sleep timer function

- You can have the power automatically switched to standby once a set time has elapsed. This is convenient for viewing and listening while going to sleep.
- The sleep timer function can be set for each zone ([page 113](#) "Sleep timer function"). (The MAIN ZONE setting method is explained here.)


1 Press ZONE SELECT to switch "MAIN".

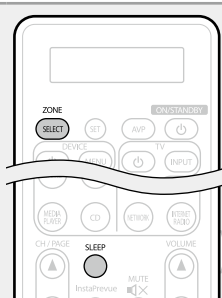

2 Press SLEEP and display the time you want to set.

The **S** indicator on the display lights.

 - The time switches as shown below each time **SLEEP** is pressed.



- If **SLLEP** on the main unit is pressed, the same function as with the remote control unit can be obtained.

To confirm the countdown time before putting the unit to sleep

Press **SLEEP**.

"Sleep : *min" appears on the display.

* Countdown time

To cancel the sleep timer

Press **SLEEP** to set "Off".

The **S** indicator on the display turns off.



- The sleep timer setting is canceled if this unit's power is set to standby.
- The sleep timer function can be set separately for the different zones ([page 113](#) "Sleep timer function").

NOTE

The sleep timer function cannot turn off the power of devices connected to this unit. To turn off the power of those connected devices, set up sleep timers on the connected devices themselves.

Web control function


You can control this unit from a web control screen on a web browser.



- This unit and the PC need to be connected to the network properly (page 33 “Connecting to a home network (LAN)”) in order to use the web control function.
- Depending on the settings of your security-related software, you may not be able to access this unit from your PC. If this is the case, then change the settings of the security-related software.

1 Switch the “Network” setting to “Always On” (page 142).


2 Check the IP address of this unit with “Information” (page 142).

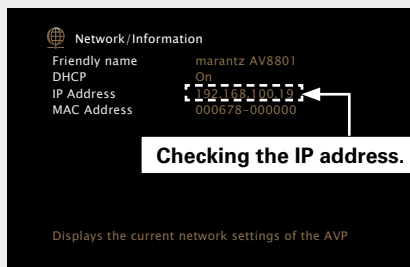

3 Start up the web browser.

4 Enter the IP address of this unit in browser’s address box.


For example, if the IP address of this unit is “192.168.100.19”, enter “http://192.168.100.19/”.

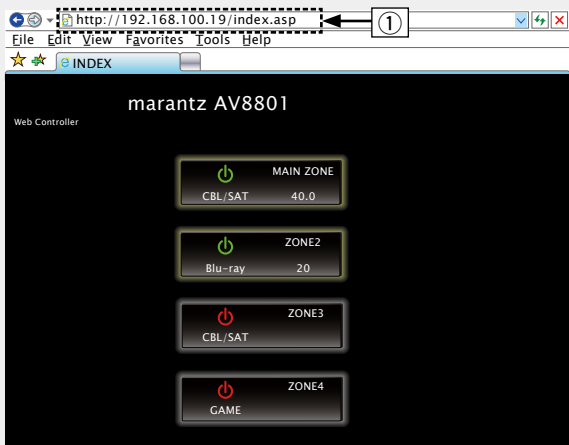

① Entering the IP address.

- By adding this unit’s IP address to the browser’s bookmark, you can display the web control screen using the bookmark function the next time you use the browser. If you are using a DHCP server and “Network” (page 142) is set to “Off In Standby”, turning the power on/off changes the IP address.

5 When the top menu is displayed, click on the menu item you want to operate.

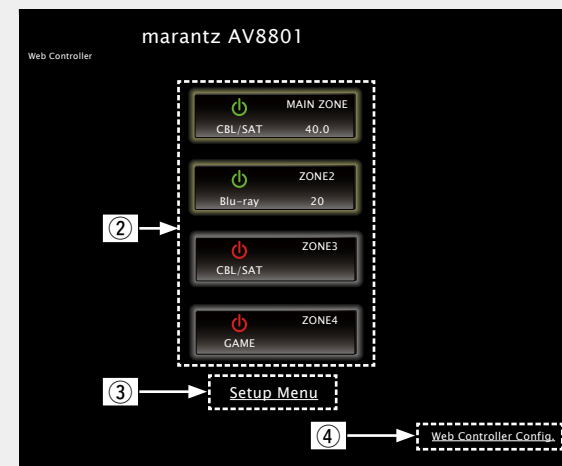


② Click when you select the zone to operate. (Example 1)

③ Click when you operate the setup menu. (Example 2)

④ Click to change the Web control screen setting. (Example 3)


6 Operate.

[Example 1] MAIN ZONE control screen

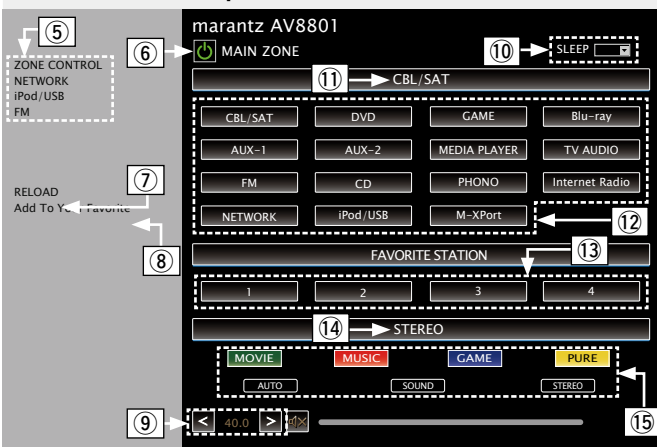


- ⑤ Click the menu item from which you want to make settings. The display on the right becomes the individual setting screens. (Example 4)
- ⑥ Click when you perform a power operation of the unit.
- ⑦ Click when you update to the latest information. Normally, there is a change to the latest information each time you operate. When operating from the main unit, click this or else the screen will not be updated.
- ⑧ Click to add a setting to "Favorites" in your browser. We recommend registering the setting screens for the different zones in the browser's favorites so as not to accidentally perform menu operations for zones you do not intend to operate.
- ⑨ To adjust the main volume, click "<", ">", or the volume display.
- ⑩ Click "v" to set the sleep timer function.
- ⑪ Displays the name of the selected input source.
- ⑫ Click a button to change the input source.
- ⑬ Register your favorite content.
- ⑭ Displays the sound mode.
- ⑮ The sound mode switches you click the button.

[Example 2] Setup menu screen

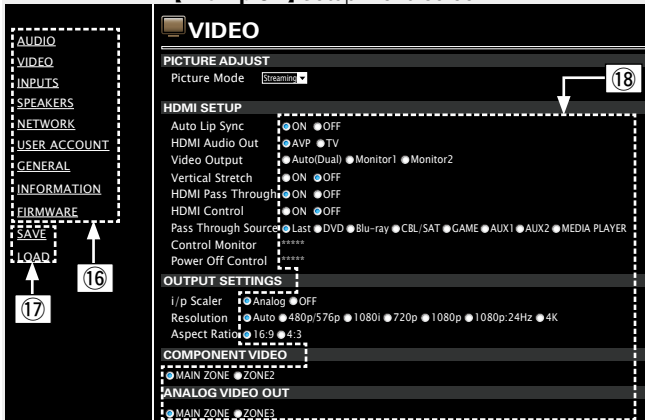


- ⑯ Click the menu item from which you want to make settings. The display on the right becomes the individual setting screens.
- ⑰ Click "SAVE" when you want to save settings, and click "LOAD" when you want to call settings.
- ⑱ Click an item to make a setting.

[Example 3] Web configuration screen

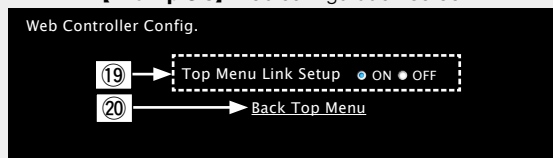

- ⑲ Click "ON" when performing Top Menu Link Setup. When set up, return to the top menu from each operation screen. (Default setting : "OFF")
- ⑳ Click this item to return to the top menu.


[Example 4] Network audio operating screen

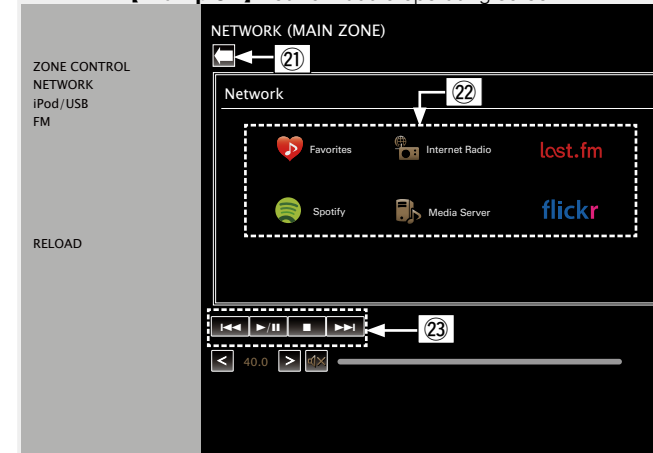

- ㉑ Click to return to the previous screen.
- ㉒ Click the content you want to operate.
- ㉓ Use to operate content.

Dual backup memory function

The unit stores settings information in nonvolatile memory even when the main power supply is turned off. Using the Dual Backup Memory function, you can write settings information to another memory area to back up saved settings for recovery anytime as needed. Remembering set details (Backup).

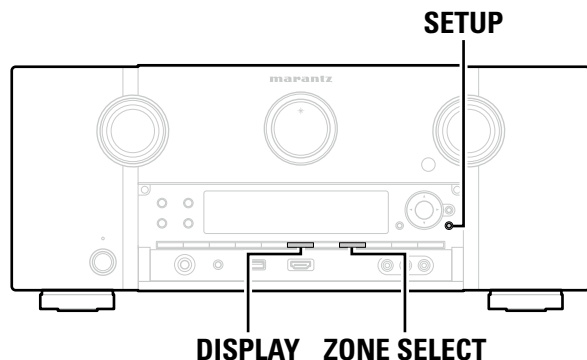

Remembering set details (Backup)

Set the unit in the state you want remembering, and press and hold **DISPLAY** and **ZONE SELECT** for at least 3 seconds.

"MEMORY SAVING" is shown in the display, and the setting details are remembered.

NOTE

- The volume is not remembered.
- If remembered details are overwritten, the previously remembered contents are deleted.

Recalling remembered details (Recovery)

Press and hold **SETUP** and **ZONE SELECT** together for at least 3 seconds.


"MEMORY LOAD" is shown in the display, and the remembered details are recalled.

NOTE

- If there is no remembered data, "NO BACKUP" is shown in the display, and no remembered details are recalled.
- As the volume cannot be recalled, it returns to the factory setting volume.

Panel lock function

To prevent accidental operation of this unit, you can disable operation of the buttons on the front panel.

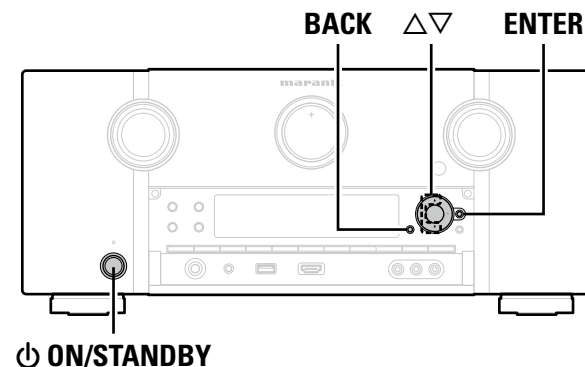

Disabling all key button operations

- 1 Press **ON/STANDBY** while you press and hold **BACK** and **ENTER** with the unit in standby mode.
- 2 Press **△▽** to select "FP/VOL LOCK On".
- 3 Press **ENTER** to enter the setting.
All button operations except **ON/STANDBY** are disabled.

Disabling all button operations except VOLUME

- 1 Press **ON/STANDBY** while you press and hold **BACK** and **ENTER** with the unit in standby mode.
- 2 Press **△▽** to select "FP LOCK On".
- 3 Press **ENTER** to enter the setting.
All button operations except **ON/STANDBY** and **VOLUME** are disabled.

❑ Canceling the Panel lock function


- 1** Press **⏻ ON/STANDBY** while you press and hold **BACK** and **ENTER** with the unit in standby mode.
- 2** Press **△▽** to select “FP LOCK *Off”.
(* The currently set mode.)
- 3** Press **ENTER** to enter the setting.
The Panel lock function is canceled.



Even when the Panel lock function is set, you can operate the unit using the remote control unit.

Remote lock function

- When not connecting an IR receiver, disable the Remote lock function. When the function is enabled, you can not perform operations with the remote control unit.
- By default, this function is disabled.

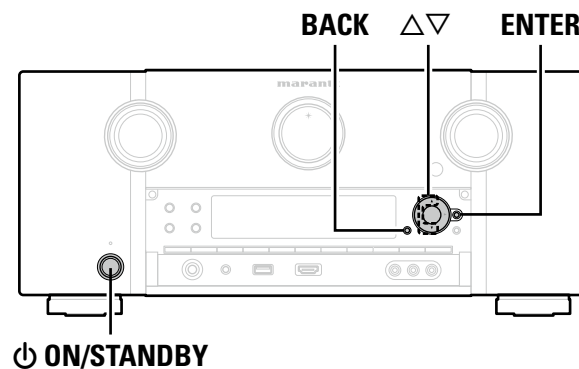

❑ Disabling the sensor function of the remote control unit


- 1** When the main unit is in standby mode, press **⏻ ON/STANDBY** while holding down **BACK** and **ENTER** on the main unit.
- 2** Press **△▽** to select “RC LOCK On”.
- 3** Press **ENTER** to enter the setting.
The infrared light receiving function is disabled.

❑ Enabling the remote sensor function

- 1** When the main unit is in standby mode, press **⏻ ON/STANDBY** while holding down **BACK** and **ENTER** on the main unit.
- 2** Press **△▽** to select “RC LOCK *Off”.
(* The currently set mode.)
- 3** Press **ENTER** to enter the setting.
The infrared light receiving function on the main unit is enabled.

Switches light illumination on/off

- You can switch the lighting around the main display on or off.
- The factory setting is "On".

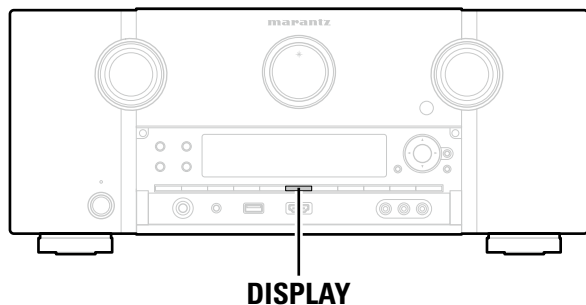

Press and hold DISPLAY on the main unit for 3 seconds.

- Carry out the same procedure if you want to change the settings again.

Various memory functions

Personal memory plus function

This function sets the settings (input mode, sound mode, HDMI output mode, MultEQ® XT 32, Dynamic EQ, audio delay etc.) last selected for the individual input sources.



The surround parameters, tone settings and the volumes of the different speakers are stored for the individual sound modes.

Last function memory

This function stores the settings which were made before going into the standby mode. When the power is turned back on, the settings are restored.

Playback in ZONE2/ZONE3/ZONE4 (Separate room)

- You can operate this unit so as to enjoy audio in a room (ZONE2, ZONE3 and ZONE4) other than the MAIN ZONE (room where the unit is located).
- You can simultaneously play back the same source in both the MAIN ZONE, ZONE2, ZONE3 and ZONE4. You can also play back separate sources in the MAIN ZONE, ZONE2, ZONE3 and ZONE4.
- When a TV is connected to the HDMI ZONE4 OUT connector, you can play back a video or audio from the device connected to the HDMI 1 – 6 IN connector in ZONE4 (**HDMI ZONE4 function**).



The source selected for ZONE2 is also output from the recording output connectors (MEDIA PLAYER).

NOTE

The following restrictions apply to the HDMI ZONE4 function.

- If you select a same input source for MAIN ZONE and ZONE4, audio playback may be restricted or video may be interrupted.
- Video may not be output depending on the resolution of the TV used for MAIN ZONE and ZONE4. In this case, use your player to set the resolution of the TV.
- When HDMI ZONE4 function is used, you cannot set the following.
 - Picture Adjust
 - Auto Lip Sync
 - Video Mode
 - Video Conversion
 - i/p Scaler
 - Progressive Mode
 - Aspect Ratio
 - Setup menu display

Audio output


It is possible to play 2-channel audio in rooms other than the MAIN ZONE where multi-channel playback is done. Choose one of the methods.

- Zone playback by audio output (PRE OUT)
Use an external amplifier.

Zone playback by audio output (PRE OUT)

Audio connections (ZONE2, ZONE3)

The audio signals of this unit's ZONE2 and ZONE3 audio output terminals are output to the ZONE2 and ZONE3 amplifiers and played on these amplifiers.

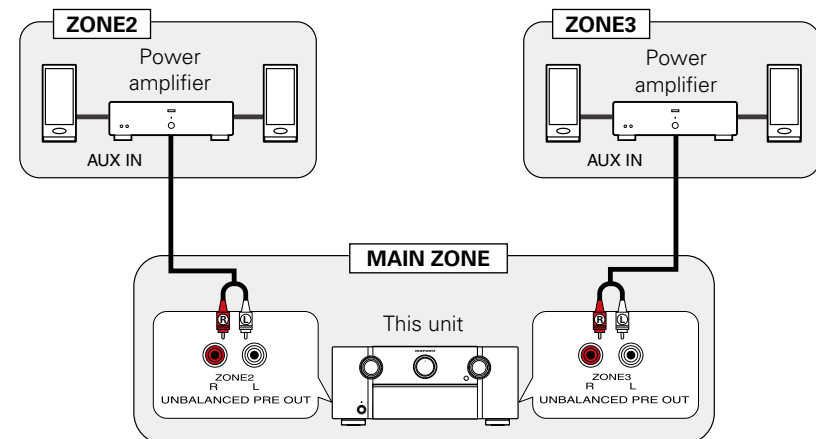

We recommend using high quality pin-plug cables for audio connections in order to prevent noise.


NOTE

In ZONE2 or ZONE3, the digital audio signals input from the HDMI, COAXIAL or OPTICAL connector cannot be played back. When playing back in ZONE2 or ZONE3, make an analog connection, network or iPod/USB.


Video output

Video Connection

The video signals of this unit's ZONE4 video output connector are played by the ZONE4 TV.

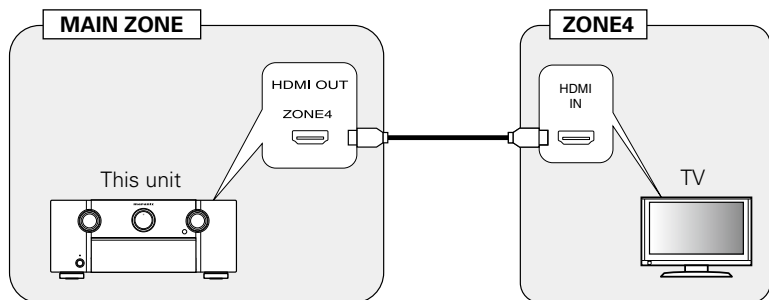

The video signals of this unit's ZONE2 video output connector are played by the ZONE2 TV.

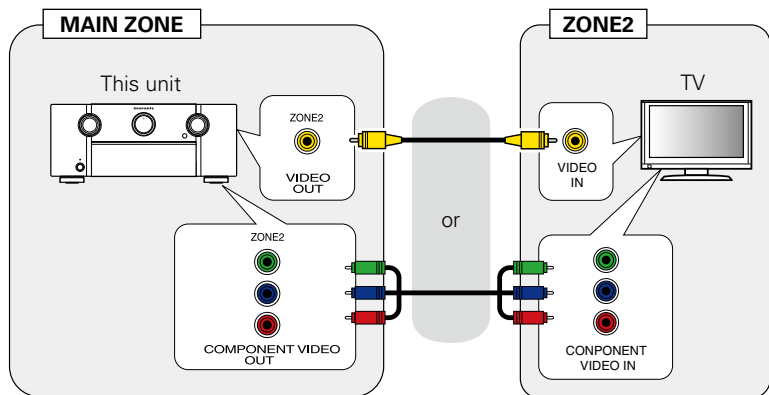


- When "Analog Video Out" ([page 130](#)) in the menu is set to "ZONE3", you can use the COMPONENT VIDEO OUT and the VIDEO MONITOR OUT connectors in MAIN ZONE for ZONE3.
- To enable the HDMI control for the ZONE4 HDMI monitor, set "Control Monitor" ([page 129](#)) to "ZONE4".

Playback

1 Press **ZONE SELECT** to switch “ZONE2”, “ZONE3” or “ZONE4”.

2 Press **ON/STANDBY** to turn on the ZONE2, ZONE3 or ZONE4 power.

- Also press input source select button when in standby mode, the power turns on.
- When **ON/STANDBY** is pressed, ZONE2, ZONE3 or ZONE4 turns off.
- Power in ZONE2, ZONE3 or ZONE4 can be turned on or off by pressing **ZONE2 ON/OFF**, **ZONE3 ON/OFF** or **ZONE4 ON/OFF** on the main unit.

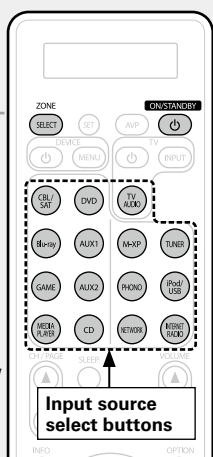

3 Press the input source select button to select the input source to be played.

The audio and video signal of the selected source is output to ZONE2, ZONE3 or ZONE4.

- Turn **INPUT SELECTOR** after pressing **ZONE SELECT** on the main unit to select an input source.



When power for both MAIN ZONE and ZONE2 (ZONE3 or ZONE4) is set to ON, power of the MAIN ZONE only can be turned off. Select MAIN ZONE in step 1 then press **ON/STANDBY**.

Adjusting the volume

Use **VOLUME** to adjust the volume.



[Adjustable range] 0 – 40 – 98

(When the “Scale” (page 123) setting is “0 – 98”)

[Adjustable range] --- –79dB – –40dB – 18dB

(When the “Scale” (page 123) setting is “–79.5dB – 18.0dB”)

- At time of purchase, “Volume Limit” (page 146) is set to “70 (–10dB)”.



Turn **VOLUME** after pressing **ZONE SELECT** on the main unit to adjust the sound volume.

NOTE

For ZONE4, you cannot use **VOLUME** to adjust the volume level.

Turning off the sound temporarily

Press **MUTE**.

The sound is reduced to the level set at “Mute Level” (page 146) in the menu.

- To cancel, either adjust the volume or press **MUTE** again.
- The setting can also be cancelled by adjusting the volume or turning off the ZONE2 or ZONE3 power.



You can adjust the tone and volume for ZONE2 or ZONE3 in “ZONE2 Setup” or “ZONE3 Setup” (page 146) in the menu.


- The All Zone Stereo function allows you to simultaneously enjoy in multi-zones (ZONE2/ZONE3) the music that is played back in MAIN ZONE during home party, etc. (page 82 “All Zone Stereo function”).

Sleep timer function


- This is convenient for viewing and listening while going to sleep in ZONE2, ZONE3 or ZONE4.
- The sleep timer function can be set by zone.

1 Press **ZONE SELECT** to switch “ZONE2”, “ZONE3” or “ZONE4”.

2 Press **SLEEP** and display the time you want to set.

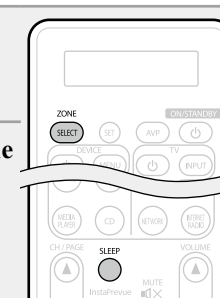

 - The time switches as shown below each time **SLEEP** is pressed.



- If **SLEEP** on the main unit is pressed, the same function as with the remote control unit can be obtained.

To confirm the countdown time before putting the unit to sleep

Press **SLEEP**.

“Z2 Sleep : *min”, “Z3 Sleep : *min” or “Z4 Sleep : *min” appears on the display.

* Countdown time

To cancel the sleep timer

Press **SLEEP** to set “Off”.



The sleep timer is also cancelled when this unit is set to the standby mode or the ZONE2, ZONE3 or ZONE4 power is turned off.

NOTE

The sleep timer function cannot turn off the power of devices connected to this unit. To turn off the power of those connected devices, set up sleep timers on the connected devices themselves.




How to make detailed settings




Menu map

For menu operation, connect a TV to this unit and display the menu on the TV screen. For menu operations, see the following page.

By default, this unit has recommended settings defined. You can customize this unit based on your existing system and your preferences.

| Setting items | Detailed items | Description | Page |
|--|---------------------------|---|---------------------|
|  Audio | Dialog Enhancer | Adjusts and enhances the frequency band corresponding to the human voice at the center channel to make the voice clearer. | 120 |
| | Subwoofer Level | This setting adjusts the volume level for the subwoofer. | 120 |
| | Surround Parameter | Adjusts surround sound parameters. | 120 |
| | Tone | Adjusts the tonal quality of the sound. | 122 |
| | M-DAX | Expands the low and high frequency components of compressed audio to enable richer audio playback. | 122 |
| | Audio Delay | Compensates for incorrect timing between video and audio. | 122 |
| | Volume | Set the MAIN ZONE (room where the unit is located) volume setting. | 123 |
| | Audyssey | Makes Audyssey MultEQ [®] XT 32, Audyssey Dynamic EQ [®] , Audyssey Dynamic Volume [®] , Audyssey LFC [™] and Audyssey DSX [®] settings. | 123 |
|  Video | Graphic EQ | Uses the graphic equalizer to adjust the tone of each speaker. | 125 |
| | Picture Adjust | Adjusts the video quality. | 127 |
| | HDMI Setup | Makes settings for HDMI video/audio output. | 127 |
| | Output Settings | Makes screen-related settings. | 129 |
| | Analog Video Out | Assigns the zone that uses the COMPONENT VIDEO MONITOR OUT and VIDEO MONITOR OUT connectors. | 130 |
| | On Screen Display | Select the on-screen display user interface preferences. | 131 |
| | TV Format | Set the video signal format to be output for the TV you are using. | 131 |

| Setting items | Detailed items | Description | Page |
|---|-----------------------------------|---|---|
|  Inputs | Input Assign | Changes input connector assignment. | 133 |
| | Source Rename | Changes the display name for this source. | 135 |
| | Hide Sources | Remove from the display input sources that are not used. | 135 |
| | Source Level | Adjusts the playback level of the audio input. | 135 |
| | Input Select | Sets the audio input mode and decode mode. | 136 |
|  Speakers | Video Source | Video of another input source is played back combined with the playing audio. | 136 |
| | Audyssey[®] Setup | The acoustic characteristics of the connected speakers and listening room are measured and the optimum settings are made automatically. | 35 , 98 |
|  Network | Manual Setup | Perform when setting the speakers manually or when changing settings made in Audyssey [®] Setup. | 138 |
| | Information | Display network information. | 142 |
| | Network | Enables network communication in standby power mode. | 142 |
| | Friendly Name | The Friendly Name is the name of this unit displayed on the network. You can change the Friendly Name according to your preferences. | 142 |
| | Settings | Make settings for wired LAN. | 143 |
| | Diagnostics | Used to check the network connection. | 144 |
| | Maintenance Mode | Use when receiving maintenance from a marantz service engineer or custom installer. | 144 |

| Setting items | Detailed items | Description | Page |
|---|--|--|---|
|  General | Language | Sets the language for display the menu on the TV screen. | 146 |
| | ZONE2 Setup | Makes settings for audio playback in a ZONE2 system. | 146 |
| | ZONE3 Setup | Makes settings for audio playback in a ZONE3 system. | 146 |
| | Zone Rename | Change the display title of each zone to one you prefer. | 147 |
| | Trigger Out 1 | Selects when to activate trigger out 1. | 147 |
| | Trigger Out 2 | Selects when to activate trigger out 2. | 147 |
| | Auto Standby | When you do not perform any operation on this unit with no audio or video input for a specified time, this unit automatically enters the standby mode. Before it enters the standby mode, "Auto Standby" is displayed on the display of this unit and the menu screen. | 147 |
| | Front Display | Makes settings related to the display on this unit. | 147 |
| | Information | Show information about receiver settings, input signals, etc. | 148 |
| | Firmware | Set whether or not to check for firmware update, update the firmware, and display update and upgrade notifications. | 149 |
| Setup Lock | Protect settings from inadvertent change. | 150 | |
|  Setup Assistant | Perform the installation, connection, and setup procedures to prepare the unit for operation following guidance. | |  7 |

Examples of menu screen displays

Typical examples are described below.



[Example 1]

Menu selection screen (Top menu)



- ① Currently selected setup item
- ② List of GUI menu setup items


Use Δ / ∇ to select "Audio" and then press \triangleright .
(Or press ENTER.)

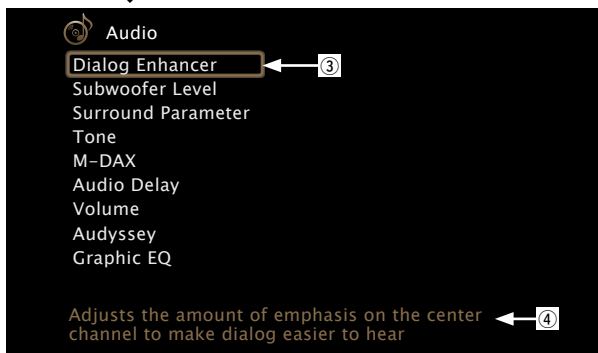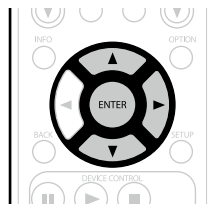

- ③ Selected setup item
- ④ Guide text for the currently selected setup item

[Example 2]

Audyssey® Setup screen (with illustration)

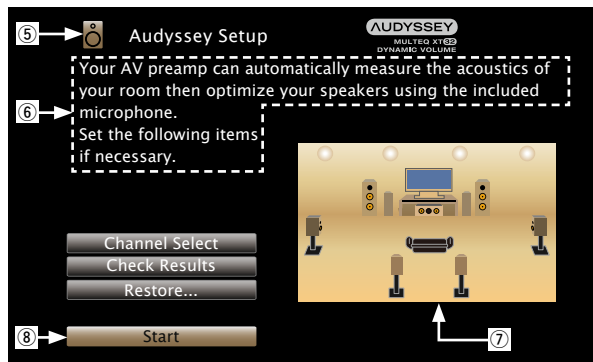



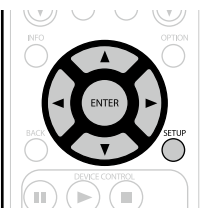
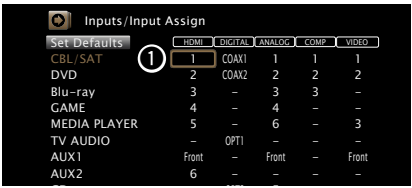
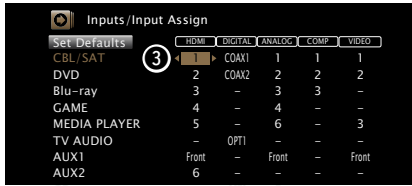





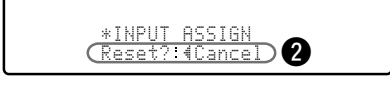
- ⑤ Currently selected setup icon
- ⑥ Operation guidance text
- ⑦ Illustration
- ⑧ Selected setup item

NOTE

When the menu is operated on a computer's resolution (e.g. VGA) or during playback of certain 3D video content, the playback image switches to the menu screen image.

Examples of menu and front display

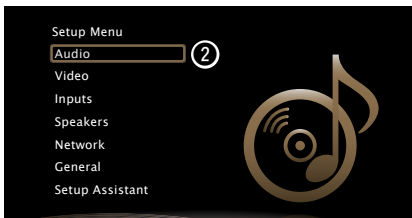Below we describe typical examples of displays on the TV screen and on the set's display window.
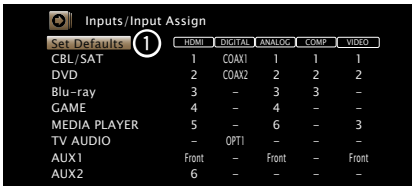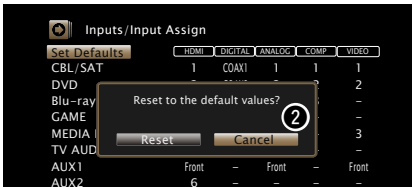
| | Menu display | Front display | Description |
|---|--|--|---|
| Top menu display |  <p>Setup Menu Audio ② Video Inputs Speakers Network General Setup Assistant</p> |  <p>*SETUP MENU Audio ②</p> | <ol style="list-style-type: none"> 1 Press SETUP to display the menu screen. 2 TV screen: Displays the selected line. Display: Displays the selected item. <ul style="list-style-type: none"> • Use Δ/∇ to move to the item you want to set.  |
| Display when changing settings |  <p>Inputs/Input Assign Set Defaults ① CBL/SAT 1 COAX1 1 1 1 DVD 2 COAX2 2 2 2 Blu-ray 3 - 3 3 - GAME 4 - 4 - - MEDIA PLAYER 5 - 6 - 3 TV AUDIO - OPT1 - - - AUX1 Front - Front - Front AUX2 6 - - - -</p> <p>Press ENTER.</p>  <p>Inputs/Input Assign Set Defaults ③ CBL/SAT 1 COAX1 1 1 1 DVD 2 COAX2 2 2 2 Blu-ray 3 - 3 3 - GAME 4 - 4 - - MEDIA PLAYER 5 - 6 - 3 TV AUDIO - OPT1 - - - AUX1 Front - Front - Front AUX2 6 - - - -</p> |  <p>*INPUT ASSIGN CBL/SAT <HDMI1 ①</p> <p>Press ENTER.</p>  <p>*INPUT ASSIGN CBL/SAT <HDMI1 ③</p> | <ol style="list-style-type: none"> 1 TV screen: Displays the selected line. Display: Displays the selected item. <ul style="list-style-type: none"> • Use Δ/∇ to move to the item you want to set. 2 Press ENTER to set to the mode in which the setting can be made. 3 \blacktriangleleft \blacktriangleright is displayed at the sides of items whose setting can be changed. Use \blacktriangleleft/\blacktriangleright to change to the desired setting. |
| Display when returning to the settings in effect at time of purchase |  <p>Inputs/Input Assign Set Defaults ① CBL/SAT 1 COAX1 1 1 1 DVD 2 COAX2 2 2 2 Blu-ray 3 - 3 3 - GAME 4 - 4 - - MEDIA PLAYER 5 - 6 - 3 TV AUDIO - OPT1 - - - AUX1 Front - Front - Front AUX2 6 - - - -</p> <p>Press ENTER.</p>  <p>Inputs/Input Assign Set Defaults CBL/SAT 1 COAX1 1 1 1 DVD 2 COAX2 2 2 2 Blu-ray 3 - 3 3 - GAME 4 - 4 - - MEDIA PLAYER 5 - 6 - 3 TV AUD. - OPT1 - - - AUX1 Front - Front - Front AUX2 6 - - - -</p> <p>Reset to the default values? ② Reset Cancel</p> |  <p>*INPUT ASSIGN Default ①</p> <p>Press ENTER.</p>  <p>*INPUT ASSIGN Reset? <Cancel ②</p> | <ol style="list-style-type: none"> 1 Press Δ to select "Set Defaults" or "Default", then press ENTER. 2 Press \blacktriangleleft to select "Reset", then press ENTER. |

Inputting characters

On this unit, you can change the name displayed on the following screens to the names that you prefer.


- Text Search (🔗 [page 78](#))
- Preset Name (🔗 [page 57](#))
- Source Rename (🔗 [page 135](#))
- Friendly Name (🔗 [page 142](#))
- Zone Rename (🔗 [page 147](#))
- Character input for the network functions (🔗 [page 63, 71, 74, 76, 143](#))



Keyboard screen

Select a character on the TV screen to input characters.

Input method

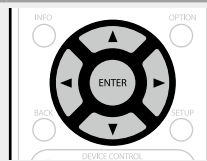- 1 Display the screen for inputting characters (🔗 [page 114](#) “Menu map”).



- 2 Select a character to be changed.
 - ① Use $\Delta \nabla \triangleleft \triangleright$ to select  or .
 - ② Press **ENTER** to place the cursor at the character to be changed.
Each time **ENTER** is pressed, the cursor moves by one character.

- 3 Select a character to be input with $\Delta \nabla \triangleleft \triangleright$ then press **ENTER**.

• The types of characters that can be input are as shown below.

[Upper case characters/Numbers/Symbols]
ABCDEFGHIJKLMNOPQRSTUVWXYZ
0123456789
! " # \$ % & ' () * + , ; < = >
[Lower case characters/Numbers/Symbols]
abcdefghijklmnopqrstuvwxyz
0123456789
. @ - _ / : ~ ? [\] ^ ' { | }

- 4 Repeat steps 2 and 3 to change the name.

- 5 Use $\Delta \nabla \triangleleft \triangleright$ to select , then press **ENTER**.



Make audio-related settings.

Menu operation

1 Press **ZONE SELECT** to switch “MAIN”.

2 Press **SETUP**.
The menu is displayed on the TV screen.

3 Use Δ / ∇ to select the menu to be set or operated.

4 Press **ENTER** or \blacktriangleright to enter the setting.

- To return to the previous item, press \blacktriangleleft or **BACK**.
- Exiting the Menu, press **SETUP** while the menu is displayed.
The menu display disappears.



Items that can be set with the “Audio” procedure

Dialog Enhancer ([page 120](#))

Subwoofer Level ([page 120](#))

Surround Parameter ([page 120](#))

Tone ([page 122](#))

M-DAX ([page 122](#))

Audio Delay ([page 122](#))

Volume ([page 123](#))

Audyssey ([page 123](#))

Graphic EQ ([page 125](#))

Dialog Enhancer

Default settings are underlined.

Adjusts and enhances the frequency band corresponding to the human voice at the center channel to make the voice clearer.

| Setting items | Setting details |
|-----------------|--|
| Enhancer | Low / Medium / High : Enhances the human voice. Off : Does not enhance the human voice. |

Subwoofer Level

Default settings are underlined.

This setting adjusts the volume level for the subwoofer.

| Setting items | Setting details |
|--|--|
| Subwoofer 1 Level This setting adjusts the volume level for the subwoofer 1. | -12dB – +12dB (0dB) |
| Subwoofer 2 Level This setting adjusts the volume level for the subwoofer 2. | -12dB – +12dB (0dB) |
| Subwoofer Turn subwoofer output on and off. | On : The subwoofer is used. Off : The subwoofer is not used. NOTE This can be set when the sound mode is "DIRECT" and "PURE DIRECT" (page 86) and the "Subwoofer Mode" (page 140) is "LFE+Main". |

Surround Parameter



Default settings are underlined.



You can adjust the surround audio sound field effects to match your preferences.




The items (parameters) that can be adjusted depend on the signal being input and the currently set sound mode. For details on the adjustable parameters, see "Sound modes and surround parameters" ([page 169](#)).

NOTE

- Some setting items cannot be set while playback is stopped. Make the settings during playback.
- When the sound mode is "PURE DIRECT", you cannot set the surround parameters.

| Setting items | Setting details |
|---|--|
| Home Theater EQ Softens the treble range of movie soundtracks for better understanding. | On : "Home Theater EQ" is used. Off : "Home Theater EQ" is not used. |
| Loudness Management This can be set in the Dolby TrueHD mode. This sets whether to output as specified in "Dynamic Compression" or output directly without compressing the dynamic range of audio recorded in the disc. | On : Outputs using the settings made in "Dynamic Compression" and "Dialogue normalization" (page 148) are enabled. Off : "Dynamic Compression" settings and "Dialogue normalization" are disabled, and the signals on the disc are output as is. |
| Dynamic Compression Compress dynamic range (difference between loud and soft sounds). | Auto : Automatic dynamic range compression on/off control according to source. Low / Medium / High : These set the compression level. Off : Dynamic range compression always off.  You can set "Auto" only for the Dolby TrueHD source. |
| Bass Sync For contents recorded in multi-channel such as Blu-ray discs, the recorded low frequency effects (LFE) may be out of synch and delayed. This function corrects such a delay of low frequency effects (LFE). | 0ms – 16ms  How low frequency effects (LFE) are delayed differ according to the disc. Set this to the desired value. |

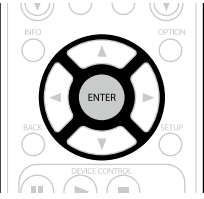


| Setting items | Setting details |
|---|--|
| Low Frequency Effects Adjust the low-frequency effects level (LFE). | <ul style="list-style-type: none"> ❑ When "Input Mode" (page 136) is set other than to "7.1CH IN" –10dB – 0dB ❑ When "Input Mode" (page 136) is set to "7.1CH IN" 0dB / 5dB / 10dB / 15dB <p> For proper playback of the different sources, we recommend setting to the values below.</p> <ul style="list-style-type: none"> • Dolby Digital sources : 0dB • DTS movie sources : 0dB • DTS music sources : -10dB |
| Center Gain Distributes the dialogue output from the center channel to the front left and right channels and widens the sound image in the front. You can set this when the sound mode is set to DTS NEO:X. | <p>0.0 – 1.0</p> |
| Panorama Assign front L/R signal also to surround channels for wider sound. You can set this when the sound mode is Dolby PLII in the "Music" mode. | <p>On : Set. Off : Do not set.</p> |
| Dimension Shift sound image center to front or rear to adjust playback balance. You can set this when the sound mode is Dolby PLII in the "Music" mode. | <p>0 – 6 (3)</p> <p> As you set a smaller number, the surround sound field shifts backward; as you set a larger number, the surround sound field shifts forward.</p> |

| Setting items | Setting details |
|---|---|
| Center Width Distributes the dialogue output from the center channel to left and right channels and widens the sound image in the front. You can set this when the sound mode is Dolby PLIIx in the "Music" mode. | <p>0 – 7 (3)</p> <p> The smaller the value, the more dialogue is concentrated on the center channel. The larger the value, the more dialogue is distributed to front left and right channels, and the more the sound image widens in the front.</p> |
| Height Gain Control the front height channel volume. | <p>Low : Reduce the front height channel volume. Normal : Front height channel sound is output with standard sound volume. High : Increase the front height channel volume.</p> <p>NOTE</p> <p>"Height Gain" is displayed for the following settings.</p> <ul style="list-style-type: none"> • When the "Speaker Config." – "Front Height" setting (page 138) is set other than to "None". • When sound mode is "PLIIz" or the PLIIz decoder is used. |
| Set Defaults The "Surround Parameter" settings are returned to the default settings. | <p>Reset : Reset to the defaults. Cancel : Do not reset to the defaults.</p> <p> When you select "Set Defaults" and press ENTER, the "Reset all surround parameters to the factory defaults?" prompt is displayed. Select either "Reset" or "Cancel", and press ENTER.</p>  |

Tone


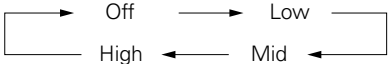
Default settings are underlined.

Adjust the tonal quality of the sound.

| Setting items | Setting details |
|---|--|
| Tone Control Set the tone control function to "On" and "Off". | On : Allow tone adjustment (bass, treble). Off : Playback without tone adjustment.  "Tone Control" can be set when "Dynamic EQ" (page 124) is set to "Off". <div style="background-color: #f08080; border-radius: 5px; padding: 2px; display: inline-block; margin: 5px 0;">NOTE</div> <ul style="list-style-type: none"> "Tone Control" settings are not reflected to ZONE2 and ZONE3. The tone cannot be adjusted in the "DIRECT" and "PURE DIRECT" mode. |
| Bass Adjust bass. | -6dB - +6dB (0dB)  "Bass" can be set when the menu "Tone Control" setting is "On". |
| Treble Adjust treble. | -6dB - +6dB (0dB)  "Treble" can be set when the menu "Tone Control" setting is "On". |

M-DAX


Compressed audio formats such as MP3, WMA (Windows Media Audio) and MPEG-4 AAC reduce the amount of data by eliminating signal components that are hard for the human ear to hear. The M-DAX function generates the signals eliminated upon compression, restoring the sound to conditions near those of the original sound before compression. It also corrects the sense of volume of the bass to obtain richer sound with compressed audio signals.

| Setting items | Setting details |
|--|--|
| Mode Set the mode for M-DAX. | Off : Do not use M-DAX. Low : Optimized mode for compressed sources with normal highs. Mid : Apply suitable bass and treble boost for all compressed sources. High : Optimized mode for compressed sources with very weak highs.  <ul style="list-style-type: none"> This item can be set with analog signals or PCM signal (Sample rate = 44.1/48 kHz) is input. "M-DAX" settings are stored for each input source. When set to "Off", the M-DAX indicator on the front panel switches off. This cannot be set when the surround mode is set to "DIRECT" or "PURE DIRECT". This can also be set by pressing M-DAX on the main unit. Each time M-DAX is pressed, the setting is changed as shown below. <div style="text-align: center; margin-top: 10px;">  <pre> graph TD Off --> Low Low --> Mid Mid --> High High --> Off </pre> </div> |

Audio Delay

Default settings are underlined.


While viewing video, manually adjust the time to delay audio output.

| Setting details |
|--|
| 0ms - 200ms  <ul style="list-style-type: none"> This item can be set within the range of 0 to 100 ms when "Auto Lip Sync" (page 127) is set to "On" and when a TV compatible with Auto Lip Sync is connected. Store "Audio Delay" for each input source. Audio Delay for game mode can be set when "Video Mode" (page 129) is set to "Auto" or "Game". |

Volume

Default settings are underlined.

Set the MAIN ZONE (room where the unit is located) volume setting.

| Setting items | Setting details |
|--|---|
| Scale Set how volume is displayed. | <u>0 – 98</u> : Display in the range 0 (Min) to 98. <u>-79.5dB – 18.0dB</u> : Display –dB (Min), in the range –79.5 dB to 18.0 dB.  <ul style="list-style-type: none"> The “Scale” setting is applied also to the “Limit” and “Power On Level” display method. The “Scale” setting applies to all zones. |
| Limit Make a setting for maximum volume. | <u>60 (-20dB) / 70 (-10dB) / 80 (0dB)</u> <u>Off</u> : Do not set a maximum volume. |
| Power On Level Define the volume setting that is active when the power is turned on. | <u>Last</u> : Use the memorized setting from the last session. <u>Mute</u> : Always use the muting on condition when power is turned on. <u>1 – 98 (-79dB – 18dB)</u> : The volume is adjusted to the set level. |
| Mute Level Set the amount of attenuation when muting is on. | <u>Full</u> : The sound is muted entirely. <u>-40dB</u> : The sound is attenuated by 40 dB down. <u>-20dB</u> : The sound is attenuated by 20 dB down. |


Audyssey

Default settings are underlined.

Set Audyssey MultEQ® XT 32, Audyssey Dynamic EQ®, Audyssey Dynamic Volume®, Audyssey LFC™ and Audyssey DSX®. These can be selected after Audyssey® Setup has been performed. For additional information on Audyssey technology, please see [page 178](#).



NOTE


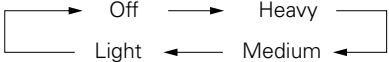

If you have not performed Audyssey® Setup, or if you change the speaker settings after performing Audyssey® Setup, you may not be able to select Dynamic EQ/Dynamic Volume. In this case, either perform Audyssey® Setup over again or perform “Restore...” ([page 42](#)) to return to the settings after Audyssey® Setup was run.


| Setting items | Setting details |
|--|--|
| MultEQ® XT 32 MultEQ® XT 32 compensates for both time and frequency characteristics of the listening area based on Audyssey® Setup measurement results. Selection is done from three types of compensation curves. We recommend the “Audyssey” setting. MultEQ® XT 32 is the prerequisite function for Dynamic EQ, Dynamic Volume and Audyssey LFC™. | <u>Audyssey</u> : Optimize the frequency response of all speakers. <u>Audyssey Byp. L/R</u> : Optimize frequency response of speakers except front L and R speakers. <u>Audyssey Flat</u> : Optimize frequency response of all speakers to flat response. <u>Graphic EQ</u> : Apply frequency response set with “Graphic EQ” (page 125). <u>Off</u> : Turn “MultEQ® XT 32” equalizer off.  <ul style="list-style-type: none"> “Audyssey”, “Audyssey Byp. L/R” and “Audyssey Flat” can be selected after Audyssey® Setup has been performed. “Audyssey” is automatically selected after performing Audyssey® Setup. When “Audyssey”, “Audyssey Byp. L/R” or “Audyssey Flat” is selected, AUDYSSEY illuminates. After running Audyssey® Setup, if the Speaker Configuration, Distance, Channel Level, and Crossover Frequency have changed without increasing the number of speakers measured, only AUDYSSEY illuminates. |
| | NOTE When using headphones, “MultEQ® XT 32” is automatically set to “Off”. |



“MultEQ® XT 32”, “Dynamic EQ” and “Dynamic Volume” settings are stored for each input source.

| Setting items | Setting details |
|---|--|
| <p>Dynamic EQ Solve the problem of deteriorating sound quality as volume is decreased by taking into account human perception and room acoustics. Works with MultEQ® XT 32.</p> | <p>On : Use Dynamic EQ. Off : Do not use Dynamic EQ.</p> <p></p> <ul style="list-style-type: none"> • AUDYSSEY is displayed when set to "On". • This can also be set by pressing DYNAMIC EQ on the main unit. Each time DYNAMIC EQ is pressed, the setting is changed as shown below. <p style="text-align: center;">On ← → Off</p> <p>NOTE</p> <p>When the menu "Dynamic EQ" setting is "On", it is not possible to do "Tone Control" (page 122) adjustment.</p> |
| <p>Reference Level Offset Audyssey Dynamic EQ® is referenced to the standard film mix level. It makes adjustments to maintain the reference response and surround envelopment when the volume is turned down from 0 dB. However, film reference level is not always used in music or other non-film content. Dynamic EQ Reference Level Offset provides three offsets from the film level reference (5 dB, 10 dB, and 15 dB) that can be selected when the mix level of the content is not within the standard. Recommended setting levels are shown at right.</p> | <p>0dB (Film Ref) : This is the default setting and should be used when listening to movies. 5dB : Select this setting for content that has a very wide dynamic range, such as classical music. 10dB : Select this setting for jazz or other music that has a wider dynamic range. This setting should also be selected for TV content as that is usually mixed at 10 dB below film reference. 15dB : Select this setting for pop/rock music or other program material that is mixed at very high listening levels and has a compressed dynamic range.</p> <p> Setting is enabled when "Dynamic EQ" is "On" (page 124).</p> |



| Setting items | Setting details |
|---|--|
| <p>Dynamic Volume Solve the problem of large variations in volume level between TV, movies and other content (between quiet passages and loud passages, etc.) by automatically adjusting to the user's preferred volume setting.</p> | <p>Heavy : Most adjustment to softest and loudest sounds. Medium : Medium adjustment to loudest and softest sound. Light : Least adjustment to loudest and softest sounds. Off : Do not use "Dynamic Volume".</p> <p></p> <ul style="list-style-type: none"> • AUDYSSEY is displayed when set to "Heavy", "Medium" or "Light". • If "Dynamic Volume" is set to "Yes" in "Audyssey® Setup" (page 39), the setting is automatically changed to "Medium". • This can also be set by pressing DYNAMIC VOL on the main unit. Each time DYNAMIC VOL is pressed, the setting is changed as shown below. <p style="text-align: center;">  </p> |
| <p>Audyssey LFC™ Adjusts the low frequency band to prevent bass and vibration from being conveyed to neighboring rooms.</p> | <p>On : Use "Audyssey LFC™". Off : Do not use "Audyssey LFC™".</p> <p> "Audyssey LFC™" cannot be set up if "Audyssey® Setup" is not completed.</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p style="text-align: center;">About Audyssey LFC™ (Low Frequency Containment)</p> <p>Audyssey LFC™ solves the problem of low frequency sounds disturbing people in neighboring rooms or apartments. Audyssey LFC™ dynamically monitors the audio content and removes the low frequencies that pass through walls, floors and ceilings. It then applies psychoacoustic processing to restore the perception of low bass for listeners in the room. The result is great sound that no longer disturbs the neighbors.</p> </div> |
| <p>Containment Amount Adjusts the amount of low frequency containment. Use higher settings if you have close neighbors.</p> | <p>1 – 7 (4)</p> |


| Setting items | Setting details |
|--|---|
| Audyssey DSX® Provides more immersive surround sound by adding the new channels. | Wides/Heights : Turns on Audyssey DSX® processing for wide and height expansion. Wides : Turn on Audyssey DSX® processing for wide expansion. Heights : Turn on Audyssey DSX® processing for height expansion. Off : Do not set Audyssey DSX®. <div style="border: 1px solid black; border-radius: 10px; padding: 2px; display: inline-block; color: white; background-color: #c00000;">NOTE</div> "Audyssey DSX®" cannot be configured if the HD Audio source being played includes Front height and Front wide channels. In this case, the respective channels are played back using the input signals. |
| Stage Width Adjust sound stage width when using front wide speakers. | -10 – +10 (0) |
| Stage Height Adjust sound stage height when using front height speakers. | -10 – +10 (0)  <ul style="list-style-type: none"> • "Audyssey DSX®" can be set when you are using front height speakers or front wide speakers. • "Audyssey DSX®" is only valid when using a center speaker. • "Audyssey DSX®" is valid when surround mode is DOLBY listening mode or DTS listening mode other than PLIIz Height. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>About Audyssey Dynamic Surround Expansion (A-DSX)</p> <p>Audyssey DSX® is a scalable system that adds new speakers to improve surround impression. Starting with a 5.1 system Audyssey DSX® first adds Wide channels for the biggest impact on envelopment. Research in human hearing has proven that information from the Wide channels is much more critical in the presentation of a realistic soundstage than the Back Surround channels found in traditional 7.1 systems. Audyssey DSX® then creates a pair of Height channels to reproduce the next most important acoustical and perceptual cues. In addition to these new Wide and Height channels, Audyssey DSX® applies Surround Envelopment Processing to enhance the blend between the front and surround channels.</p> </div> |

Graphic EQ

Default settings are underlined.

Use the graphic equalizer to adjust the tone of each speaker.
 "Graphic EQ" can be set when "MultEQ® XT 32" setting ([page 123](#)) is "Graphic EQ".

| Setting items | Setting details |
|---|---|
| Speaker Selection Select whether to adjust tones for individual speakers or for all speakers. | All : Adjust the tone of all speakers together. Left/Right : Adjust the tone of left and right speakers together. Each : Adjust the tone of each speaker. |
| Adjust EQ Adjust tones for each frequency band. Adjust the speaker selected in "Speaker Selection". | <ol style="list-style-type: none"> ① Select the speaker. ② Select the adjustment frequency band. 63Hz / 125Hz / 250Hz / 500Hz / 1kHz / 2kHz / 4kHz / 8kHz / 16kHz <ul style="list-style-type: none"> • Select the speakers you want to adjust when "Left/Right" or "Each" is selected. ③ Adjust the level. -20.0dB – +6.0dB (0.0dB) |
| Curve Copy Copy "Audyssey Flat" (page 123) curve from MultEQ® XT 32. | Yes : Copy. No : Do not copy.  <ul style="list-style-type: none"> • "Curve Copy" is displayed after Audyssey® Setup has been performed. • When you select "Curve Copy" and press ENTER, the "Copy "Audyssey Flat"?" prompt is displayed. Select either "Yes" or "No", and press ENTER. |
| Set Defaults The "Graphic EQ" settings are returned to the default settings. | Reset : Reset to the defaults. Cancel : Do not reset to the defaults.  When you select "Set Defaults" and press ENTER , the "Reset to the default values?" prompt is displayed. Select either "Reset" or "Cancel", and press ENTER . |

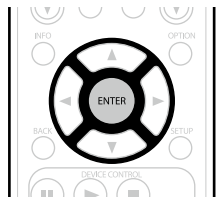



Make video-related settings.

NOTE

When HDMI ZONE4 function is used, these settings are not available (except for “HDMI Control” and “Control Monitor”).

Menu operation

1 Press **ZONE SELECT** to switch “MAIN”.

2 Press **SETUP**.
The menu is displayed on the TV screen.

3 Use Δ ∇ to select the menu to be set or operated.

4 Press **ENTER** or \blacktriangleright to enter the setting.

- To return to the previous item, press \blacktriangleleft or **BACK**.
- Exiting the Menu, press **SETUP** while the menu is displayed.
The menu display disappears.



Items that can be set with the “Video” procedure

Picture Adjust ([page 127](#))

HDMI Setup ([page 127](#))

Output Settings ([page 129](#))

Analog Video Out ([page 130](#))

On Screen Display ([page 131](#))

TV Format ([page 131](#))






Picture Adjust



Default settings are underlined.

Picture quality can be adjusted.

We recommend leaving the settings unchanged from the default settings. First adjust the display image quality on your TV, and use this menu only when you want to make fine adjustments.

- This item can be set when the input source is **CBL/SAT** **DVD** **Blu-ray** **GAME** **AUX1** **AUX2** **MEDIA PLAYER** **iPod/USB** **NETWORK**.
- With input sources other than the ones above, this item can be set when "Video Select" is selected. In this case, the original input source settings are called out.
- Can be set when the "Video Conversion" setting ([page 129](#)) is "On".
- "TV AUDIO" or "CD" can be set when "HDMI", "COMP" or "VIDEO" ([page 133, 134](#)) has been assigned.

| Setting items | Setting details |
|---|---|
| Picture Mode Select the desired picture mode according to the video signals and your viewing environment. | Standard : The standard mode suited for most living room viewing environments. Movie : A mode suited for watching movies in a dark room such as a theater room. Vivid : A mode that makes graphic images for games, etc. brighter and more vivid. Streaming : A mode suited for low bit rate video sources. Custom : Adjusts the picture quality manually. Off : No picture quality adjustment is done with this unit.  <ul style="list-style-type: none"> • You can also press OPTION to make these settings from "Picture Mode" (page 82) in the option menu. • The default settings are as follows. <ul style="list-style-type: none"> • For "Network" and "iPod/USB" input sources : Streaming • For input sources other than "Network" and "iPod/USB" : Off |
| Contrast Adjust picture contrast. | -6 - +6 (0)  "Contrast" can be set when "Picture mode" is set to "Custom". |
| Brightness Adjust picture brightness. | 0 - +12  "Brightness" can be set when "Picture mode" is set to "Custom". |
| Saturation Adjust picture chroma level (saturation). | -6 - +6 (0)  "Saturation" can be set when "Picture mode" is set to "Custom". |
| Hue Adjust green and red balance. | -6 - +6 (0)  "Hue" can be set when "Picture mode" is set to "Custom". |

| Setting items | Setting details |
|---|--|
| Noise Reduction Reduce overall video noise. | Low / Medium / High / Off  "Noise Reduction" can be set when "Picture mode" is set to "Custom". |
| Enhancer Emphasize picture contours. | 0 - +12  "Enhancer" can be set when "Picture mode" is set to "Custom". |







- "Picture Adjust" can not be set when 4K signals are input.
- When TVs are simultaneously connected to HDMI MONITOR OUT 1, HDMI MONITOR OUT 2, COMPONENT VIDEO OUT and VIDEO MONITOR OUT connector for inputting video or component video signals, the "Picture Mode" - "Streaming", "Noise Reduction" and "Enhancer" settings are only valid for the TV that is connected via HDMI.



HDMI Setup



Default settings are underlined.

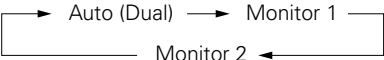Make settings for HDMI video/audio output.

| Setting items | Setting details |
|---|---|
| Auto Lip Sync Make automatic compensation for timing shift in audio and video output. | On : Compensated. Off : Not compensated. |
| HDMI Audio Out Select HDMI audio output device. | AVP : Play back through speakers connected to Power Amplifier. (Audio is output from the PRE OUT terminal on this unit.) TV : Play back through TV connected to the unit.  <ul style="list-style-type: none"> • The audio signal input from the HDMI input connector can be output as an output signal from the HDMI output connector by setting the HDMI audio output destination to TV. Audio signals input via the Analog/Coaxial/Optical/7.1CH IN input connectors cannot be output from the HDMI output connector. • When the HDMI control function is activated, priority is given to the TV audio setting (page 102 "HDMI control function"). |

| Setting items | Setting details |
|--|---|
| Video Output Make settings for HDMI monitor output. | <p>Auto(Dual) : The presence of a TV connected to the HDMI MONITOR 1 or HDMI MONITOR 2 connector is detected automatically, and that TV connection is used.</p> <p>Monitor 1 : A TV connected to the HDMI MONITOR 1 connector is always used. Video is not output from the TV connected to the HDMI MONITOR 2 connector.</p> <p>Monitor 2 : A TV connected to the HDMI MONITOR 2 connector is always used. Video is not output from the TV connected to the HDMI MONITOR 1 connector.</p> <p></p> <ul style="list-style-type: none"> • If both the HDMI MONITOR 1 and HDMI MONITOR 2 connectors are connected and "Resolution" (page 130) is set to "Auto", the signals are output with a resolution compatible with both TV. • With "Resolution" (page 130) not set to "Auto", check whether the TV you are using is compatible with the resolution under "Video" – "HDMI Monitor 1" or "HDMI Monitor 2" (page 148). • This can also be set by pressing HDMI OUT on the main unit. Each time HDMI OUT is pressed, the setting is changed as shown below. <div style="text-align: center;">  <pre> graph LR A[Auto (Dual)] --> B[Monitor 1] B --> C[Monitor 2] C --> A </pre> </div> <p>NOTE</p> <p>Depending on the monitor you have connected, the display may not be correct when you set to "Auto(Dual)". In such a case, set to either "Monitor 1" or "Monitor 2".</p> |
| Vertical Stretch Sets whether video signals are vertically stretched or not. | <p>On : Stretches video signals vertically.</p> <p>Off : Does not stretch video signals vertically.</p> <p> "Vertical Stretch" can be set when "i/p Scaler" is set to anything other than "Off".</p> |

| Setting items | Setting details |
|--|--|
| HDMI Pass Through Selects how the AVP will pass HDMI signals to the HDMI output in standby power mode. | <p>On : Passes the selected HDMI input through the AV pre tuner's HDMI output when the AV pre tuner is in standby power mode.</p> <p>Off : No HDMI signals are passed through the AV pre tuner's HDMI output in standby power mode.</p> <p>NOTE</p> <p>When "HDMI Pass Through" is set to "On", it consumes more standby power. If you are not using this unit for an extended period, it is recommended that you unplug the power cord from the power outlet.</p> |
| HDMI Control You can link operations with devices connected to HDMI and compatible with HDMI Control. | <p>On : Use HDMI control function.</p> <p>Off : Do not use HDMI control function.</p> <p></p> <ul style="list-style-type: none"> • When a device that is not compatible with the HDMI control function is connected, set "HDMI Control" to "Off". • Please consult the operating instructions for each connected device to check the settings. • Refer to "HDMI control function" (page 102) for more information about the HDMI control function. <p>NOTE</p> <ul style="list-style-type: none"> • When "HDMI Control" is set to "On", it consumes more standby power. If you are not using this unit for an extended period, it is recommended that you unplug the power cord from the power outlet. • The HDMI control function controls operations of a TV that is compatible with the HDMI control function. Make sure that the TV and HDMI are connected when you perform HDMI control. • If the "HDMI Control" settings have been changed, always reset the power to connected devices after the change. |
| Pass Through Source This unit will "pass through" the sources HDMI video signal when in standby. | <p>Last : Choose this option to "pass through" the last used HDMI input video source.</p> <p>CBL/SAT / DVD / Blu-ray / GAME / AUX1 / AUX2 / MEDIA PLAYER / CD : Choose one of these HDMI sources to be passed through when this unit is in standby.</p> <p> "Pass Through Source" can be set when "HDMI Control" is set to "On" or "HDMI Pass Through" is set to "On".</p> |

| Setting items | Setting details |
|--|---|
| Control Monitor Selects the HDMI monitor for which you want to enable the HDMI control function. | Monitor 1 : Uses the HDMI Monitor 1 for HDMI control. Monitor 2 : Uses the HDMI Monitor 2 for HDMI control. ZONE4 : Uses the HDMI monitor in ZONE4 for HDMI control.  <ul style="list-style-type: none"> • “Control Monitor” can be set when “HDMI Control” is set to “On”. • The ARC function only works for either the HDMI Monitor 1 or HDMI Monitor 2 connector that is specified in “Control Monitor”. |
| Power Off Control Links the power standby of this unit to external devices. | All : If power to a connected TV is turned off independently of the input source, power to this unit is automatically set to standby. Video : When the TV is turned off with one of “HDMI”, “COMP” or “VIDEO” (page 133, 134) assigned for the CBL/SAT / DVD / Blu-ray / GAME / AUX1 / AUX2 / MEDIA PLAYER / CD / TV AUDIO input source on this unit, power to this unit is automatically set to standby. Off : This unit does not link with power to a TV.  “Power Off Control” can be set when “HDMI Control” is set to “On”. <div style="background-color: #e91e63; color: white; padding: 2px; border-radius: 5px; display: inline-block;">NOTE</div> “Power Off Control” cannot be set when “Control Monitor” is set to “ZONE4”. |

Output Settings


Default settings are underlined.



Makes screen-related settings.



* “CBL/SAT”, “DVD”, “Blu-ray”, “GAME”, “AUX1”, “AUX2”, “MEDIA PLAYER”, “CD” or “TV AUDIO” can be set when “HDMI”, “COMP” or “VIDEO” ([page 133, 134](#)) has been assigned.




“Output Settings” can not be set when 4K signals are input.

| Setting items | Setting details | | | | | | | | | | |
|--|-----------------|-------|-----------|--------|--------|--------|----------------|--|------|------------|---|
| Video Mode Make settings for video processing. <table border="1" style="margin-top: 10px;"> <tr> <td>CBL/SAT *</td> <td>DVD *</td> </tr> <tr> <td>Blu-ray *</td> <td>GAME *</td> </tr> <tr> <td>AUX1 *</td> <td>AUX2 *</td> </tr> <tr> <td colspan="2" style="text-align: center;">MEDIA PLAYER *</td> </tr> <tr> <td>CD *</td> <td>TV AUDIO *</td> </tr> </table> | CBL/SAT * | DVD * | Blu-ray * | GAME * | AUX1 * | AUX2 * | MEDIA PLAYER * | | CD * | TV AUDIO * | Auto : Process video automatically based on the HDMI content information. Game : Always process video for game content. Movie : Always process video for movie content.  <ul style="list-style-type: none"> • If “Video Mode” is set to “Auto”, the mode is switched according to the input contents. • If a source is played in both MAIN ZONE (audio and video) and ZONE2 (audio only) modes in the same room, audio in MAIN ZONE and ZONE2 modes may sound out of synchronization, but this is not malfunction. In this case, setting to “Game” mode may improve audio synchronization. |
| CBL/SAT * | DVD * | | | | | | | | | | |
| Blu-ray * | GAME * | | | | | | | | | | |
| AUX1 * | AUX2 * | | | | | | | | | | |
| MEDIA PLAYER * | | | | | | | | | | | |
| CD * | TV AUDIO * | | | | | | | | | | |

| Setting items | Setting details | | | | | | | | | | | | |
|--|-----------------|-------|-----------|--------|--------|--------|----------------|--|------------|------------|--|------------|---|
| Video Conversion The input video signal is converted automatically in conjunction with the connected TV (page 7 “Converting input video signals for output (Video conversion function)”). <table border="1" style="margin-top: 10px;"> <tr> <td>CBL/SAT *</td> <td>DVD *</td> </tr> <tr> <td>Blu-ray *</td> <td>GAME *</td> </tr> <tr> <td>AUX1 *</td> <td>AUX2 *</td> </tr> <tr> <td colspan="2" style="text-align: center;">MEDIA PLAYER *</td> </tr> <tr> <td>CD *</td> <td>TV AUDIO *</td> </tr> </table> | CBL/SAT * | DVD * | Blu-ray * | GAME * | AUX1 * | AUX2 * | MEDIA PLAYER * | | CD * | TV AUDIO * | On : The input video signal is converted. Off : The input video signal is not converted.  <ul style="list-style-type: none"> • When a non-standard video signal from a game machine or some other source is input, the video conversion function might not operate. In this case set “Video Conversion” to “Off”. • When “Video Conversion” is set to “Off”, the video conversion function does not work. In this case, connect this unit and TV with the same type of cable. | | |
| CBL/SAT * | DVD * | | | | | | | | | | | | |
| Blu-ray * | GAME * | | | | | | | | | | | | |
| AUX1 * | AUX2 * | | | | | | | | | | | | |
| MEDIA PLAYER * | | | | | | | | | | | | | |
| CD * | TV AUDIO * | | | | | | | | | | | | |
| i/p Scaler Convert the input source resolution to the resolution set. <table border="1" style="margin-top: 10px;"> <tr> <td>CBL/SAT *</td> <td>DVD *</td> </tr> <tr> <td>Blu-ray *</td> <td>GAME *</td> </tr> <tr> <td>AUX1 *</td> <td>AUX2 *</td> </tr> <tr> <td colspan="2" style="text-align: center;">MEDIA PLAYER *</td> </tr> <tr> <td>iPod/USB *</td> <td>CD *</td> </tr> <tr> <td>NETWORK *</td> <td>TV AUDIO *</td> </tr> </table> | CBL/SAT * | DVD * | Blu-ray * | GAME * | AUX1 * | AUX2 * | MEDIA PLAYER * | | iPod/USB * | CD * | NETWORK * | TV AUDIO * | Analog : Use i/p scaler function for analog video signal. Analog & HDMI : Use i/p scaler function for analog and HDMI video signal. HDMI : Use i/p scaler function for HDMI video signal. Off : Do not use i/p scaler function.  <ul style="list-style-type: none"> • “Analog & HDMI” can be set for input sources for which an HDMI input connector is assigned. • Which items can be set depend on the input source assigned to each input connector. • This function is not effective when the input signal is “x.v.Color”, 3D, sYCC 601 color, Adobe RGB color, Adobe YCC 601 color or computer resolution. |
| CBL/SAT * | DVD * | | | | | | | | | | | | |
| Blu-ray * | GAME * | | | | | | | | | | | | |
| AUX1 * | AUX2 * | | | | | | | | | | | | |
| MEDIA PLAYER * | | | | | | | | | | | | | |
| iPod/USB * | CD * | | | | | | | | | | | | |
| NETWORK * | TV AUDIO * | | | | | | | | | | | | |

| Setting items | Setting details | | | | | | | | | | | | | | | | | | | | | | | | |
|--|-----------------|----------|-----|---|---------|---|------|---|------|---|------|---|--------------|--|--|--|----------|---|----------|---|---|--|----------|---|--|
| <p>Resolution Set the output resolution. You can set "Resolution" separately for HDMI output of the analog video input and HDMI input.</p> <table border="1"> <tr><td>CBL/SAT</td><td>*</td><td>DVD</td><td>*</td></tr> <tr><td>Blu-ray</td><td>*</td><td>GAME</td><td>*</td></tr> <tr><td>AUX1</td><td>*</td><td>AUX2</td><td>*</td></tr> <tr><td colspan="4">MEDIA PLAYER</td></tr> <tr><td>iPod/USB</td><td></td><td>CD</td><td>*</td></tr> <tr><td>NETWORK</td><td></td><td>TV AUDIO</td><td>*</td></tr> </table> | CBL/SAT | * | DVD | * | Blu-ray | * | GAME | * | AUX1 | * | AUX2 | * | MEDIA PLAYER | | | | iPod/USB | | CD | * | NETWORK | | TV AUDIO | * | <p>Auto : The number of pixels the TV connected to the HDMI MONITOR OUT connector supports is detected automatically and the appropriate output resolution is set. 480p/576p / 1080i / 720p / 1080p / 1080p:24Hz / 4K : Set the output resolution.</p> <p> This item can be set when "i/p Scaler" is set to anything other than "Off".</p> <ul style="list-style-type: none"> When "i/p Scaler" is set to "Analog & HDMI", the resolution of both the analog video input signal and HDMI input signal can be set. To watch 1080p/24Hz pictures, use a TV that supports 1080p/24Hz video signals. When set to "1080p:24Hz", you can enjoy film-like pictures for film sources (in 24 Hz). For video sources and mixed sources, we recommend setting the resolution to "1080p". It is not possible to convert a 50 Hz signal into 1080p/24Hz. It is output at a resolution of 1080p/50Hz. |
| CBL/SAT | * | DVD | * | | | | | | | | | | | | | | | | | | | | | | |
| Blu-ray | * | GAME | * | | | | | | | | | | | | | | | | | | | | | | |
| AUX1 | * | AUX2 | * | | | | | | | | | | | | | | | | | | | | | | |
| MEDIA PLAYER | | | | | | | | | | | | | | | | | | | | | | | | | |
| iPod/USB | | CD | * | | | | | | | | | | | | | | | | | | | | | | |
| NETWORK | | TV AUDIO | * | | | | | | | | | | | | | | | | | | | | | | |
| <p>Progressive Mode Set an appropriate progressive conversion mode for the source video signal.</p> <table border="1"> <tr><td>CBL/SAT</td><td>*</td><td>DVD</td><td>*</td></tr> <tr><td>Blu-ray</td><td>*</td><td>GAME</td><td>*</td></tr> <tr><td>AUX1</td><td>*</td><td>AUX2</td><td>*</td></tr> <tr><td colspan="4">MEDIA PLAYER</td></tr> <tr><td>CD</td><td>*</td><td>TV AUDIO</td><td>*</td></tr> </table> | CBL/SAT | * | DVD | * | Blu-ray | * | GAME | * | AUX1 | * | AUX2 | * | MEDIA PLAYER | | | | CD | * | TV AUDIO | * | <p>Auto : The video signal is automatically detected and the appropriate mode is set. Video : Select mode suitable for video playback. Video and Film : Select mode suitable for video and 30-frame film material playback.</p> <p> This item can be set when "i/p Scaler" is set to anything other than "Off".</p> | | | | |
| CBL/SAT | * | DVD | * | | | | | | | | | | | | | | | | | | | | | | |
| Blu-ray | * | GAME | * | | | | | | | | | | | | | | | | | | | | | | |
| AUX1 | * | AUX2 | * | | | | | | | | | | | | | | | | | | | | | | |
| MEDIA PLAYER | | | | | | | | | | | | | | | | | | | | | | | | | |
| CD | * | TV AUDIO | * | | | | | | | | | | | | | | | | | | | | | | |

| Setting items | Setting details | | | | | | | | | | | | | | | | | | | | | | | | |
|--|-----------------|----------|-----|---|---------|---|------|---|------|---|------|---|--------------|--|--|--|----------|--|----|---|---------|--|----------|---|---|
| <p>Aspect Ratio Set the aspect ratio for the video signals output to the HDMI.</p> <table border="1"> <tr><td>CBL/SAT</td><td>*</td><td>DVD</td><td>*</td></tr> <tr><td>Blu-ray</td><td>*</td><td>GAME</td><td>*</td></tr> <tr><td>AUX1</td><td>*</td><td>AUX2</td><td>*</td></tr> <tr><td colspan="4">MEDIA PLAYER</td></tr> <tr><td>iPod/USB</td><td></td><td>CD</td><td>*</td></tr> <tr><td>NETWORK</td><td></td><td>TV AUDIO</td><td>*</td></tr> </table> | CBL/SAT | * | DVD | * | Blu-ray | * | GAME | * | AUX1 | * | AUX2 | * | MEDIA PLAYER | | | | iPod/USB | | CD | * | NETWORK | | TV AUDIO | * | <p>16:9 : Output at 16:9 aspect ratio. 4:3 : Output at 4:3 aspect ratio with black bars on the sides of a 16:9 TV screen (except for 480p/576p output).</p> <p> "Aspect Ratio" can be set when "i/p Scaler" is set to anything other than "Off".</p> |
| CBL/SAT | * | DVD | * | | | | | | | | | | | | | | | | | | | | | | |
| Blu-ray | * | GAME | * | | | | | | | | | | | | | | | | | | | | | | |
| AUX1 | * | AUX2 | * | | | | | | | | | | | | | | | | | | | | | | |
| MEDIA PLAYER | | | | | | | | | | | | | | | | | | | | | | | | | |
| iPod/USB | | CD | * | | | | | | | | | | | | | | | | | | | | | | |
| NETWORK | | TV AUDIO | * | | | | | | | | | | | | | | | | | | | | | | |
| <p>* "CBL/SAT", "DVD", "Blu-ray", "GAME", "AUX1", "AUX2", "MEDIA PLAYER", "CD" or "TV AUDIO" can be set when "HDMI", "COMP" or "VIDEO" (page 133, 134) has been assigned.</p> | | | | | | | | | | | | | | | | | | | | | | | | | |

Analog Video Out

Default settings are underlined.


Assigns the zone that uses the COMPONENT VIDEO MONITOR OUT and VIDEO MONITOR OUT connectors.

| Setting items | Setting details |
|---------------|--|
| ZONE | <p>MAIN ZONE : Uses the COMPONENT VIDEO MONITOR OUT and the VIDEO MONITOR OUT connectors for MAIN ZONE. ZONE3 : Uses the COMPONENT VIDEO MONITOR OUT and the VIDEO MONITOR OUT connectors for ZONE3.</p> |

On Screen Display

Default settings are underlined.


Select the on-screen display user interface preferences.

| Setting items | Setting details |
|--|---|
| Volume Sets where to display the master volume level. | <u>Bottom</u> : Display at the bottom. <u>Top</u> : Display at the top. <u>Off</u> : Turn display off.  When the master volume display is hard to see when superimposed on movie subtitles, set to "Top". |
| Info Displays status of operation temporarily when the sound mode is changed, or input source is switched. You can set whether or not to show each of these status displays. | <u>On</u> : Turn display on. <u>Off</u> : Turn display off. |
| Now Playing Sets how long each menu is displayed when the input source is "NETWORK", "iPod/USB", or "FM". | <u>Always On</u> : Show display continuously. <u>Auto Off</u> : Show display for 30 seconds after operation. |

TV Format

Default settings are underlined.

Set the video signal format to be output for the TV you are using.

| Setting items | Setting details |
|---------------|---|
| Format | <u>NTSC</u> : Select NTSC output. <u>PAL</u> : Select PAL output.  "Format" can also be set by the following procedure. However, the menu screen is not displayed. <ol style="list-style-type: none"> 1. Press and hold the main unit's ◀ and ZONE SELECT for at least 3 seconds. "*Video Format < PAL >" appears on the display. 2. Use the main unit's ◀▶ and set the video signal format. 3. Press the main unit's ENTER to complete the setting. <div style="background-color: #e91e63; color: white; padding: 5px; border-radius: 10px; text-align: center; margin: 10px 0;">NOTE</div> When a format other than the video format of the connected TV is set, the picture will not be displayed properly. |



Perform settings related to input source playback.

- You do not have to change the settings to use the unit. Make settings when needed.

Menu operation

1 Press **ZONE SELECT** to switch “MAIN”.

2 Press **SETUP**.
The menu is displayed on the TV screen.

3 Use Δ / ∇ to select the menu to be set or operated.

4 Press **ENTER** or \triangleright to enter the setting.

- To return to the previous item, press \triangleleft or **BACK**.
- Exiting the Menu, press **SETUP** while the menu is displayed.
The menu display disappears.



Items that can be set with the “Inputs” procedure

Input Assign ([page 133](#))

Source Rename ([page 135](#))

Hide Sources ([page 135](#))

Source Level ([page 135](#))

 
Input Select ([page 136](#))

Video Source ([page 136](#))

Important information

□ About the display of input sources

In this section, the configurable input sources for each item are shown as follows.



NOTE

Input sources that have been set to “Hide” at “Hide Sources” ([page 135](#)) cannot be selected.


Input Assign

This unit has certain input sources such as “CBL/SAT” assigned to audio and video connectors by default. By making the default connections, you can simply press an input source select button to play back audio or video from the connected device with ease.

When making connections other than the default settings, you must change settings in this section.

Examples of “Input Assign” menu screen displays

This screen appears when the “Inputs” – “each input source” – “Input Assign” menu is selected. Use the “Input Assign” menu to change the ② HDMI input connectors, ③ Digital input connectors, ④ Analog input connectors, ⑤ Component input connectors, and ⑥ Video input connectors that are assigned to the ① input sources in default settings.

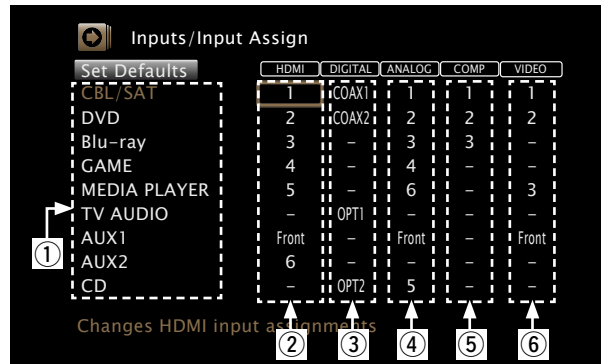


Input assignments menu operations


1 Use Δ ∇ \triangleleft \triangleright to move the cursor to the item you want to set, and then press **ENTER**.

2 Use \triangleleft \triangleright to select the input connector to be assigned.

3 Press **ENTER** to register the setting.

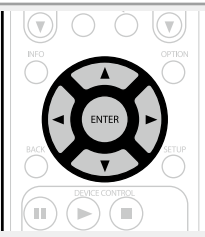


| Setting items | Setting details | | | | | |
|--|--|----------------|---------------------|----------------|-----------------|--------------|
| HDMI Set this to change the HDMI input connectors assigned to the input sources. | 1 / 2 / 3 / 4 / 5 / 6 / Front : Assign an HDMI input connector to the selected input source. - : Do not assign an HDMI input connector to the selected input source. | | | | | |
| CBL/SAT | DVD | | | | | |
| Blu-ray | GAME | | | | | |
| AUX1 | AUX2 | | | | | |
| MEDIA PLAYER | CD | | | | | |
| TV AUDIO | | | | | | |
| | Input source | CBL/SAT | DVD | Blu-ray | GAME | AUX1 |
| | Default setting | 1 | 2 | 3 | 4 | Front |
| | Input source | AUX2 | MEDIA PLAYER | CD | TV AUDIO | |
| | Default setting | 6 | 5 | - | - | |

 To play the video signal assigned at “HDMI” combined with the audio signal assigned at “Input Assign” – “DIGITAL”, select “Digital” at “Input Mode” ([page 136](#)).

• Audio signals input from analog and digital connectors cannot be output to a TV that is connected via HDMI.

• When “HDMI Control” ([page 128](#)) is set to “On”, HDMI input connector cannot be assigned to “TV AUDIO”.

| Setting items | Setting details | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|-----------------|--------------|---------|----------|-------|------|--------------|----|----------|--|---|--------------|---------|-----|---------|------|------|-----------------|--------|--------|---|---|-------|--------------|------|--------------|----|----------|-----------------|---|---|-------|-------|
| DIGITAL Set this to change the digital input connectors assigned to the input sources. <table border="1" style="margin-top: 10px;"> <tr><td>CBL/SAT</td><td>DVD</td></tr> <tr><td>Blu-ray</td><td>GAME</td></tr> <tr><td>AUX1</td><td>AUX2</td></tr> <tr><td>MEDIA PLAYER</td><td>CD</td></tr> <tr><td>TV AUDIO</td><td></td></tr> </table> | CBL/SAT | DVD | Blu-ray | GAME | AUX1 | AUX2 | MEDIA PLAYER | CD | TV AUDIO | | COAX 1 / COAX 2 / OPT 1 / OPT 2 : Assign a digital input connector to the selected input source. – : Do not assign a digital input connector to the selected input source. <ul style="list-style-type: none"> At time of purchase, the settings of the different input sources are as shown below. <table border="1" style="margin-top: 10px;"> <thead> <tr> <th>Input source</th> <th>CBL/SAT</th> <th>DVD</th> <th>Blu-ray</th> <th>GAME</th> <th>AUX1</th> </tr> </thead> <tbody> <tr> <td>Default setting</td> <td>COAX 1</td> <td>COAX 2</td> <td>–</td> <td>–</td> <td>–</td> </tr> </tbody> </table> <table border="1" style="margin-top: 10px;"> <thead> <tr> <th>Input source</th> <th>AUX2</th> <th>MEDIA PLAYER</th> <th>CD</th> <th>TV AUDIO</th> </tr> </thead> <tbody> <tr> <td>Default setting</td> <td>–</td> <td>–</td> <td>OPT 2</td> <td>OPT 1</td> </tr> </tbody> </table> | Input source | CBL/SAT | DVD | Blu-ray | GAME | AUX1 | Default setting | COAX 1 | COAX 2 | – | – | – | Input source | AUX2 | MEDIA PLAYER | CD | TV AUDIO | Default setting | – | – | OPT 2 | OPT 1 |
| CBL/SAT | DVD | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Blu-ray | GAME | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| AUX1 | AUX2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| MEDIA PLAYER | CD | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TV AUDIO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Input source | CBL/SAT | DVD | Blu-ray | GAME | AUX1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Default setting | COAX 1 | COAX 2 | – | – | – | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Input source | AUX2 | MEDIA PLAYER | CD | TV AUDIO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Default setting | – | – | OPT 2 | OPT 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| ANALOG Set this to change the analog audio input connectors assigned to the input sources. <table border="1" style="margin-top: 10px;"> <tr><td>CBL/SAT</td><td>DVD</td></tr> <tr><td>Blu-ray</td><td>GAME</td></tr> <tr><td>AUX1</td><td>AUX2</td></tr> <tr><td>MEDIA PLAYER</td><td>CD</td></tr> <tr><td>TV AUDIO</td><td></td></tr> </table> | CBL/SAT | DVD | Blu-ray | GAME | AUX1 | AUX2 | MEDIA PLAYER | CD | TV AUDIO | | 1 / 2 / 3 / 4 / 5 / 6 / Front / XLR : Assign a analog input connector to the selected input source. – : Do not assign a analog input connector to the selected input source. <ul style="list-style-type: none"> At time of purchase, the settings of the different input sources are as shown below. <table border="1" style="margin-top: 10px;"> <thead> <tr> <th>Input source</th> <th>CBL/SAT</th> <th>DVD</th> <th>Blu-ray</th> <th>GAME</th> <th>AUX1</th> </tr> </thead> <tbody> <tr> <td>Default setting</td> <td>1</td> <td>2</td> <td>3</td> <td>4</td> <td>Front</td> </tr> </tbody> </table> <table border="1" style="margin-top: 10px;"> <thead> <tr> <th>Input source</th> <th>AUX2</th> <th>MEDIA PLAYER</th> <th>CD</th> <th>TV AUDIO</th> </tr> </thead> <tbody> <tr> <td>Default setting</td> <td>–</td> <td>6</td> <td>5</td> <td>–</td> </tr> </tbody> </table> | Input source | CBL/SAT | DVD | Blu-ray | GAME | AUX1 | Default setting | 1 | 2 | 3 | 4 | Front | Input source | AUX2 | MEDIA PLAYER | CD | TV AUDIO | Default setting | – | 6 | 5 | – |
| CBL/SAT | DVD | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Blu-ray | GAME | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| AUX1 | AUX2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| MEDIA PLAYER | CD | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TV AUDIO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Input source | CBL/SAT | DVD | Blu-ray | GAME | AUX1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Default setting | 1 | 2 | 3 | 4 | Front | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Input source | AUX2 | MEDIA PLAYER | CD | TV AUDIO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Default setting | – | 6 | 5 | – | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
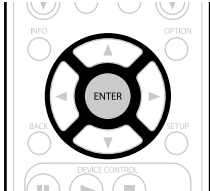
| Setting items | Setting details | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|--------------|---------|----------|-------|------|--------------|----|----------|--|---|--------------|---------|-----|---------|------|------|-----------------|---|---|---|---|-------|--------------|------|--------------|----|----------|-----------------|---|---|---|---|
| COMP (Component video) Set this to change the component video input connectors assigned to the input sources. <table border="1" style="margin-top: 10px;"> <tr><td>CBL/SAT</td><td>DVD</td></tr> <tr><td>Blu-ray</td><td>GAME</td></tr> <tr><td>AUX1</td><td>AUX2</td></tr> <tr><td>MEDIA PLAYER</td><td>CD</td></tr> <tr><td>TV AUDIO</td><td></td></tr> </table> | CBL/SAT | DVD | Blu-ray | GAME | AUX1 | AUX2 | MEDIA PLAYER | CD | TV AUDIO | | 1 / 2 / 3 : Assign the component video input connector to the selected input source. – : Do not assign a component video input connector to the selected input source. <ul style="list-style-type: none"> At time of purchase, the settings of the different input sources are as shown below. <table border="1" style="margin-top: 10px;"> <thead> <tr> <th>Input source</th> <th>CBL/SAT</th> <th>DVD</th> <th>Blu-ray</th> <th>GAME</th> <th>AUX1</th> </tr> </thead> <tbody> <tr> <td>Default setting</td> <td>1</td> <td>2</td> <td>3</td> <td>–</td> <td>–</td> </tr> </tbody> </table> <table border="1" style="margin-top: 10px;"> <thead> <tr> <th>Input source</th> <th>AUX2</th> <th>MEDIA PLAYER</th> <th>CD</th> <th>TV AUDIO</th> </tr> </thead> <tbody> <tr> <td>Default setting</td> <td>–</td> <td>–</td> <td>–</td> <td>–</td> </tr> </tbody> </table> | Input source | CBL/SAT | DVD | Blu-ray | GAME | AUX1 | Default setting | 1 | 2 | 3 | – | – | Input source | AUX2 | MEDIA PLAYER | CD | TV AUDIO | Default setting | – | – | – | – |
| CBL/SAT | DVD | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Blu-ray | GAME | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| AUX1 | AUX2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| MEDIA PLAYER | CD | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TV AUDIO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Input source | CBL/SAT | DVD | Blu-ray | GAME | AUX1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Default setting | 1 | 2 | 3 | – | – | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Input source | AUX2 | MEDIA PLAYER | CD | TV AUDIO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Default setting | – | – | – | – | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| VIDEO Set this to change the composite video input connectors assigned to the input sources. <table border="1" style="margin-top: 10px;"> <tr><td>CBL/SAT</td><td>DVD</td></tr> <tr><td>Blu-ray</td><td>GAME</td></tr> <tr><td>AUX1</td><td>AUX2</td></tr> <tr><td>MEDIA PLAYER</td><td>CD</td></tr> <tr><td>TV AUDIO</td><td></td></tr> </table> | CBL/SAT | DVD | Blu-ray | GAME | AUX1 | AUX2 | MEDIA PLAYER | CD | TV AUDIO | | 1 / 2 / 3 / Front : Assign the video input connector to the selected input source. – : Do not assign a video input connector to the selected input source. <ul style="list-style-type: none"> At time of purchase, the settings of the different input sources are as shown below. <table border="1" style="margin-top: 10px;"> <thead> <tr> <th>Input source</th> <th>CBL/SAT</th> <th>DVD</th> <th>Blu-ray</th> <th>GAME</th> <th>AUX1</th> </tr> </thead> <tbody> <tr> <td>Default setting</td> <td>1</td> <td>2</td> <td>–</td> <td>–</td> <td>Front</td> </tr> </tbody> </table> <table border="1" style="margin-top: 10px;"> <thead> <tr> <th>Input source</th> <th>AUX2</th> <th>MEDIA PLAYER</th> <th>CD</th> <th>TV AUDIO</th> </tr> </thead> <tbody> <tr> <td>Default setting</td> <td>–</td> <td>3</td> <td>–</td> <td>–</td> </tr> </tbody> </table> | Input source | CBL/SAT | DVD | Blu-ray | GAME | AUX1 | Default setting | 1 | 2 | – | – | Front | Input source | AUX2 | MEDIA PLAYER | CD | TV AUDIO | Default setting | – | 3 | – | – |
| CBL/SAT | DVD | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Blu-ray | GAME | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| AUX1 | AUX2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| MEDIA PLAYER | CD | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TV AUDIO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Input source | CBL/SAT | DVD | Blu-ray | GAME | AUX1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Default setting | 1 | 2 | – | – | Front | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Input source | AUX2 | MEDIA PLAYER | CD | TV AUDIO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Default setting | – | 3 | – | – | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Set Defaults The “Input Assign” settings are returned to the default settings. | Reset : Reset to the defaults. Cancel : Do not reset to the defaults. <ul style="list-style-type: none"> If you select “Set Defaults” and press ENTER, the message “Reset to the default values?” is displayed. Select “Reset” or “Cancel”, and then press ENTER.  | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

Source Rename

Change the display name of the selected input source.

This is convenient when the input source name of your device and the input source name of this unit are different. You can change the name to suit your needs. When the renaming is completed, the name is displayed on this unit's display and on the menu screen.


Setting details


CBL/SAT / DVD / Blu-ray / GAME / AUX1 / AUX2 / MEDIA PLAYER / CD / TV AUDIO / M-XPort / PHONO : Change the display name of the selected input source.

- Up to 12 characters can be input.
- For character input, see [page 118](#).

Set Defaults : The "Source Rename" settings are returned to the default settings.

- **Reset** : Reset to the defaults.
- **Cancel** : Do not reset to the defaults.

 If you select "Set Defaults" and press **ENTER**, the message "Reset all source names to the factory defaults?" is displayed. Select "Reset" or "Cancel", and then press **ENTER**.

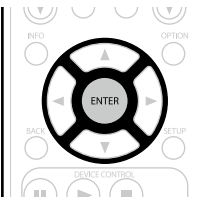

Hide Sources

Default settings are underlined.

Remove from the display input sources that are not used.

Setting details

CBL/SAT / DVD / Blu-ray / GAME / AUX1 / AUX2 / MEDIA PLAYER / iPod/USB / CD / FM / Favorites / Internet Radio / Last.fm / Spotify / Flickr / TV AUDIO / M-XPort / PHONO : Select input source that is not used.

- **Show** : Use this source.
- **Hide** : Do not use this source.



NOTE

- Input sources being used in the various zones cannot be deleted.
- Input sources set to "Hide" cannot be selected using the input source select button.

Source Level

Default settings are underlined.



- This function corrects the playback level of the selected input source's audio input.
- Make this setting if there are differences in the input volume levels between the different sources.

| Setting items | Setting details |
|--|--|
| Source Level iPod/USB FM NETWORK | -12dB – +12dB (0dB) |
| Analog Inputs CBL/SAT DVD Blu-ray GAME AUX1 AUX2 MEDIA PLAYER CD TV AUDIO PHONO | -12dB – +12dB (0dB)  The analog input level can be adjusted independently for input sources for which "ANALOG" is assigned at "Input Assign" (page 134). |
| Digital Inputs CBL/SAT DVD Blu-ray GAME AUX1 AUX2 MEDIA PLAYER CD TV AUDIO | -12dB – +12dB (0dB)  The digital input level can be adjusted independently for input sources for which "DIGITAL" is assigned at "Input Assign" (page 134). |

Input Select

Default settings are underlined.


Set the audio input mode and decode mode of each input source.
The input modes available for selection may vary depending on the input source.

| Setting items | Setting details |
|--|---|
| Input Mode Set the audio input modes for the different input sources. It is normally recommended to set the audio input mode to "Auto". | <p>Auto : Automatically detect input signal and perform playback.</p> <p>HDMI : Play only signals from HDMI input.</p> <p>Digital : Play only signals from digital input.</p> <p>Analog : Play only signals from analog input.</p> <p>7.1CH IN : Only signals input from the 7.1CH IN connector will be played back.</p> <p></p> <ul style="list-style-type: none"> • "Digital" can be set for input sources for which "DIGITAL" is assigned at "Input Assign" (page 134). • "AUX2" or "TV AUDIO" can be selected only when "Analog" is assigned to the input source. • When digital signals are properly input, the DIG. indicator lights on the display. If the DIG. indicator does not light, check "Input Assign" (page 134) and the connections. • If "HDMI Control" is set to "On" and a TV compatible with the ARC is connected via the HDMI MONITOR connectors, the input mode whose input source is "TV AUDIO" is fixed to ARC. • The surround mode cannot be set if the input mode is set to "7.1CH IN". |
| Decode Mode Set the audio decode mode for input source. | <p>Auto : Detect type of digital input signal and decode and play automatically.</p> <p>PCM : Decode and play only PCM input signals.</p> <p>DTS : Decode and play only DTS input signals.</p> <p></p> <ul style="list-style-type: none"> • This item can be set for input sources for which "DIGITAL" is assigned at "Input Assign" (page 134). • Normally set this mode to "Auto". Set "PCM" and "DTS" when inputting the corresponding input signal. |

Video Source

Default settings are underlined.

Video of another input source is played back combined with the playing audio.

| Setting items | Setting details |
|---------------------|---|
| Video Select | <p>Default : Play the picture and sound of the input source.</p> <p>CBL/SAT / DVD / Blu-ray / GAME / AUX1 / AUX2 / MEDIA PLAYER / CD / TV AUDIO : Select video input source to view. The video of the selected input source is played along with the audio currently being played. This can be set for individual input sources.</p> <p> "CBL/SAT", "DVD", "Blu-ray", "GAME", "AUX1", "AUX2", "MEDIA PLAYER", "CD" or "TV AUDIO" can be selected only when "COMP" or "VIDEO" is assigned to the input source.</p> <p>NOTE</p> <ul style="list-style-type: none"> • It is not possible to select HDMI input signals. • Input sources for which "Hide" is selected at "Hide Sources" (page 135) cannot be selected. |



Set when changing Audyssey® Setup settings.

- If you change the speaker settings after performing Audyssey® Setup, it will not be possible to set Audyssey MultEQ® XT 32, Audyssey Dynamic EQ® and Audyssey Dynamic Volume® (page 123, 124).
- Can be used without changing the settings. Please set if necessary.

Menu operation

1 Press **ZONE SELECT** to switch “MAIN”.

2 Press **SETUP**.
The menu is displayed on the TV screen.

3 Use Δ / ∇ to select the menu to be set or operated.

4 Press **ENTER** or \triangleright to enter the setting.

- To return to the previous item, press \triangleleft or **BACK**.
- Exiting the Menu, press **SETUP** while the menu is displayed.
The menu display disappears.



Items that can be set with the “Speakers” procedure

Audyssey® Setup (page 35, 98)




Manual Setup (page 138)


Manual Setup


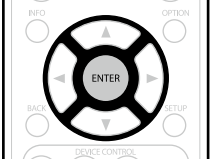

Default settings are underlined.




Perform when setting the speakers manually or when changing settings made in Audyssey® Setup.


- If you change the speaker settings after performing Audyssey® Setup, it will not be possible to select Audyssey MultEQ® XT 32, Audyssey Dynamic EQ® and Audyssey Dynamic Volume® (🔗 [page 123, 124](#)).
- “Manual Setup” can be used without changing the settings. Please set if necessary.


| Setting items | Setting details |
|---|---|
| Speaker Config. Indicate speaker presence and select speaker size categories based on bass reproduction capability. | Front : Set the front speaker size. <ul style="list-style-type: none"> • Large : Use a large speaker that can adequately play back low frequencies. • Small : Use a small speaker that has inadequate playback capacity for low frequencies.  <ul style="list-style-type: none"> • When “Subwoofer” is set to “None”, “Front” is automatically set to “Large”. • When “Front” is set to “Small”, “Center”, “Surround”, “Surr. Back”, “Front Height” and “Front Wide” can not be set to “Large”. |
| NOTE Do not use the outward shape of the speaker to determine selection of a “Large” or “Small” speaker. Instead, use the frequencies set in “Crossovers” (🔗 page 140) as the standard for determining bass reproduction capability. | Center : Set the presence and size of the center speaker. <ul style="list-style-type: none"> • Large : Use a large speaker that can adequately play back low frequencies. • Small : Use a small speaker that has inadequate playback capacity for low frequencies. • None : Select when a center speaker is not connected.  “Large” is not displayed when “Front” is set to “Small”. |
| | Subwoofer : Set the presence of a subwoofer. <ul style="list-style-type: none"> • 2spkrs : Use two subwoofer. • 1spkr : Use only one subwoofer. • None : Select when a subwoofer is not connected.  When “Front” is set to “Small”, “Subwoofer” is automatically set to “1spkr”. |

| Setting items | Setting details |
|---------------------------------------|--|
| Speaker Config. (Continued) | Surround : Set the presence and size of the surround speakers. <ul style="list-style-type: none"> • Large : Use a large speaker that can adequately play back low frequencies. • Small : Use a small speaker that has inadequate playback capacity for low frequencies. • None : Select when the surround speakers are not connected.  <ul style="list-style-type: none"> • When “Surround” is set to “Large”, “Surr. Back”, “Front Height” and “Front Wide” can be set to “Large”. • When “Surround” is set to “None”, “Surr. Back”, “Front Height” and “Front Wide” are automatically set to “None”. |
| | Surr. Back : Set the presence, size and number of surround back speakers. <ul style="list-style-type: none"> • Large : Use a large speaker that can adequately play back low frequencies. • Small : Use a small speaker that has inadequate playback capacity for low frequencies. • None : Select when the surround back speakers are not connected. <ul style="list-style-type: none"> • 2spkrs : Use two surround back speakers. • 1spkr : Use only one surround back speaker. When you select this setting, connect the surround back speaker to the left (L) channel. |
| | Front Height : Set the presence and size of the front height speakers. <ul style="list-style-type: none"> • Large : Use a large speaker that can adequately play back low frequencies. • Small : Use a small speaker that has inadequate playback capacity for low frequencies. • None : Select when the front height speakers are not connected. |
| | Front Wide : Set the presence and size of the front wide speakers. <ul style="list-style-type: none"> • Large : Use a large speaker that can adequately play back low frequencies. • Small : Use a small speaker that has inadequate playback capacity for low frequencies. • None : Select when the front height speakers are not connected. |

| Setting items | Setting details |
|---|---|
| Distances Set distance from listening position to speakers. Measure beforehand the distance from the listening position to each speaker. | <p>Unit : Set the unit of distance.</p> <ul style="list-style-type: none"> • Meters / Feet <p>Step : Set the minimum variable width of the distance.</p> <ul style="list-style-type: none"> • 0.1m / 0.01m • 1ft / 0.1ft <p>Set Defaults : The "Distances" settings are returned to the default settings.</p> <ul style="list-style-type: none"> • Reset : Reset to the defaults. • Cancel : Do not reset to the defaults. <p> When you select "Set Defaults" and press ENTER, the "Resets all of the distance settings to the factory defaults?" prompt is displayed. Select either "Reset" or "Cancel", and press ENTER.</p>  |
| | <p>Front L / Front R / F. Height L / F. Height R / F. Wide L / F. Wide R / Center / Subwoofer 1*1 / Subwoofer 2*1 / Surround L / Surround R / Surr. Back L*2 / Surr. Back R*2 : Select speaker for distance setting.</p> <p>*1 When the "Speaker Config." – "Subwoofer" setting (page 138) is set to "1spkr", "Subwoofer" is displayed.</p> <p>*2 When the "Speaker Config." – "Surr. Back" setting (page 138) is set to "1spkr", "Surr. Back" is displayed.</p> <ul style="list-style-type: none"> • 0.00m – 18.00m / 0.0ft – 60.0ft : Set the distance. <p></p> <ul style="list-style-type: none"> • The speakers that can be selected differ depending on the "Speaker Config." (page 138) settings. • Default settings : Front L / Front R / F. Height L / F. Height R / Front Wide L / Front Wide R / Center / Subwoofer 1 / Subwoofer 2 : 3.60 m (12.0 ft) Surround L / Surround R / Surr. Back L / Surr. Back R : 3.00 m (10.0 ft) • Set the difference in the distance between the speakers to less than 6.00 m (20.0 ft). <p>NOTE</p> <p>Speakers set to "None" in "Speaker Config." (page 138) are not displayed.</p> |
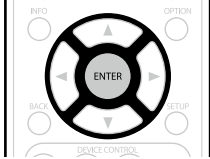
| Setting items | Setting details |
|--|---|
| Levels Set the volume of the test tone to be the same when it is output from each speaker. | <p>Test Tone Start : Output test tone.</p> <ul style="list-style-type: none"> • Front L / F. Height L / Center / F. Height R / Front R / F. Wide R / Surround R / Surr. Back R*1 / Surr. Back L*1 / Surround L / F. Wide L / Subwoofer 1*2 / Subwoofer 2*2 / Subwoofer 1+2*3 : A test tone is output from the selected speaker. While listening to the test tone, adjust the volume output from the selected speaker. <p>*1 When the "Speaker Config." – "Surr. Back" setting (page 138) is set to "1spkr", "Surr. Back" is displayed.</p> <p>*2 When the "Speaker Config." – "Subwoofer" setting (page 138) is set to "1spkr", "Subwoofer" is displayed.</p> <p>*3 When "Subwoofer 1+2" is selected, you can adjust the volume of Subwoofer 1 and Subwoofer 2 at the same time.</p> <ul style="list-style-type: none"> • -12.0dB – +12.0dB (0.0dB) : Adjust the volume. <p> When "Levels" is adjusted, the adjusted values are set for all the sound modes.</p> <p>NOTE</p> <ul style="list-style-type: none"> • Speakers set to "None" in the "Speaker Config." (page 138) settings are not displayed. • When a headphones jack is inserted in the PHONES jack of this unit, the "Levels" is not displayed. <p>Set Defaults : The "Levels" settings are returned to the default settings.</p> <ul style="list-style-type: none"> • Reset : Reset to the defaults. • Cancel : Do not reset to the defaults. <p> When you select "Set Defaults" and press ENTER, the "Reset all of the channel level settings to the factory defaults?" prompt is displayed. Select either "Reset" or "Cancel", and press ENTER.</p>  |

| Setting items | Setting details |
|--|--|
| Crossovers Set the maximum frequency of the bass signal output from each channel to the subwoofer. Set the Crossover Frequency to suit the bass reproduction capability of the speaker being used. | <p>Speaker Selection : Selects how to set the crossover frequency. See the speaker manual for information concerning speaker crossover frequency.</p> <ul style="list-style-type: none"> • All : Selects the crossover point of all speakers at the same time. • Individual : Selects the crossover points for each speaker individually. <p>The following settings can be set when the "Speaker Selection" setting is set to "Individual".</p> <ul style="list-style-type: none"> • All / Front / Center / Subwoofer / Surround / Surr. Back / Front Height / Front Wide : Select speaker for setting of crossover frequency. • 40Hz / 60Hz / 80Hz / 90Hz / 100Hz / 110Hz / 120Hz / 150Hz / 200Hz / 250Hz : Set the crossover frequency. <p></p> <ul style="list-style-type: none"> • "Crossovers" can be set when the "Bass" – "Subwoofer Mode" (page 140) setting is "LFE+Main", or when you have a speaker that is set to "Small". • Always set the crossover frequency to "80Hz". When using small speakers, however, we recommend setting the crossover frequency to a higher frequency. • For speakers set to "Small", sound below the crossover frequency is cut from the sound output. The cut bass sound is output from the subwoofer or front speakers. • The speakers that can be set when "Individual" is selected differ depending on to the "Subwoofer Mode" setting (page 140). <ul style="list-style-type: none"> • When "LFE" is selected, speakers set to "Small" at "Speaker Config." can be set. If the speakers are set to "Large", "Full Band" is displayed and the setting cannot be made. • If set to "LFE+Main", this setting can be made regardless of the speaker size. |

| Setting items | Setting details |
|---|--|
| Bass Set subwoofer and LFE signal range playback. | <p>Subwoofer Mode : Select low range signals to be reproduced by subwoofer.</p> <ul style="list-style-type: none"> • LFE : The low range signal of the channel set to "Small" speaker size is added to the LFE signal output from the subwoofer. • LFE+Main : The low range signal of all channels is added to the LFE signal output from the subwoofer. <p></p> <ul style="list-style-type: none"> • "Subwoofer Mode" can be set when "Speaker Config." – "Subwoofer" (page 138) is set to other than "None". • Play music or a movie source and select the mode offering the strongest bass. • Select "LFE+Main" if you want the bass signals to always be produced from the subwoofer. <p>NOTE</p> <p>If "Front" and "Center" for "Speaker Config." are set to "Large", and "Subwoofer Mode" is set to "LFE", no sound may be output from the subwoofers, depending on the input signal or selected sound mode.</p> <p>LPF for LFE : Set LFE signal playback range. Set this when you want to change the playback frequency of the subwoofer.</p> <ul style="list-style-type: none"> • 80Hz / 90Hz / 100Hz / 110Hz / 120Hz / 150Hz / 200Hz / 250Hz |



To use this unit by connecting it to a home network (LAN), you must configure network settings. If you set up your home network (LAN) via DHCP, set "DHCP" to "On" (use the default setting). This allows this unit to use your home network (LAN).

If you assign an IP address for each device, you must use the "IP Address" setting to assign an IP address to this unit and enter the information about your home network (LAN) such as the gateway address and subnet mask.

Menu operation

- 1** Press **ZONE SELECT** to switch "MAIN".
- 2** Press **SETUP**.
The menu is displayed on the TV screen.
- 3** Use Δ / ∇ to select the menu to be set or operated.
- 4** Press **ENTER** or \blacktriangleright to enter the setting.
 - To return to the previous item, press \blacktriangleleft or **BACK**.
 - Exiting the Menu, press **SETUP** while the menu is displayed.
The menu display disappears.



Items that can be set with the "Network" procedure

Information (👉 page 142)

Network (👉 page 142)

Friendly Name (👉 page 142)

Settings (👉 page 143)

Diagnostics (👉 page 144)


Maintenance Mode (👉 page 144)

Information

Display network information.

Setting details

Friendly Name / DHCP On or Off / IP Address / MAC Address

 MAC Address is required to make a vTuner account.

Network

Default settings are underlined.

Enables network communication in standby power mode.

Setting details

Off In Standby : Suspend network function during standby.

Always On : Network is on during standby. Main unit operable with a network compatible controller.



- Set to "Always On" when using the web control function.
- With the "Always On" setting, you can use each NETWORK connector as the hub even while power to this unit is set to standby.

NOTE

When "Network" is set to "Always On", it consumes more standby power.

Friendly Name

The Friendly Name is the name of this unit displayed on the network. You can change the Friendly Name according to your preferences.

Setting items

Edit Name

Edits Friendly Name.

Set Defaults


Restores Friendly Name, which you had changed, to the default setting.


Setting details

- The default Friendly Name on first use is "marantz AV8801".
- Up to 63 characters can be input.
- For character input, see [page 118](#).

Reset : Reset to the defaults.

Cancel : Do not reset to the defaults.

 When you select "Set Defaults" and press **ENTER**, the "Reset the friendly name back to the factory default?" prompt is displayed. Select either "Reset" or "Cancel", and press **ENTER**.

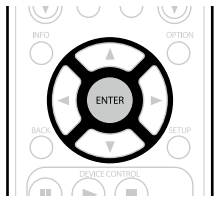


Settings

Default settings are underlined.

Make settings for wired LAN.

Only set "Settings" when connecting to a network without a DHCP function.

Setting details

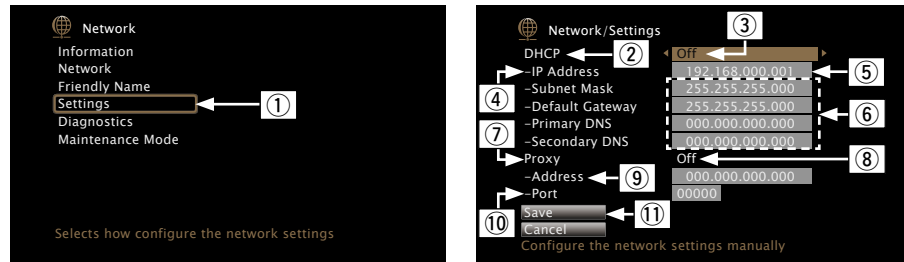

① On the menu, select "Network" – "Settings" and press **ENTER**.

② Use $\Delta \nabla$ to select "DHCP", then press **ENTER**.

③ Use $\triangleleft \triangleright$ to select "Off", then press **ENTER**.

④ Use $\Delta \nabla$ to select "IP Address", then press **ENTER**.

• **IP Address** : Set the IP address within the ranges shown below.

The Network Audio function cannot be used if other IP addresses are set.

CLASS A: 10.0.0.1 – 10.255.255.254

CLASS B: 172.16.0.1 – 172.31.255.254

CLASS C: 192.168.0.1 – 192.168.255.254


⑤ Use $\Delta \nabla \triangleleft \triangleright$ to input the address and press **ENTER**.

⑥ Use $\Delta \nabla$ to select setting item, then press **ENTER**.

• **Subnet Mask** : When connecting an xDSL modem or terminal adapter directly to this unit, input the subnet mask indicated in the documentation supplied by your provider. Normally input 255.255.255.0.

• **Default Gateway** : When connected to a gateway (router), input its IP address.

• **Primary DNS, Secondary DNS** : If there is only one DNS address indicated in the documentation supplied by your provider, input it at "Primary DNS". If two or more DNS are provided by your provider, enter both "Primary DNS" and "Secondary DNS".

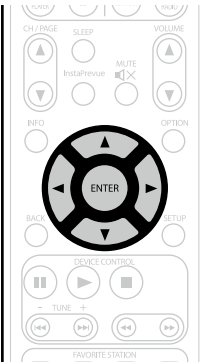

Setting details

⑦ Use $\Delta \nabla$ to select "Proxy" and press **ENTER**.

• **Proxy** : Make this setting when connecting to the Internet via a proxy server.

Make the proxy settings only when you connect to the Internet via a proxy server that is on your internal network or provided by your provider, etc.

⑧ Use $\triangleleft \triangleright$ to select "On(Address)" or "On(Name)", and then press **ENTER**.

On(Address) : Select when inputting by address.

On(Name) : Select when inputting by domain name. Up to 38 characters can be input.

⑨ Press ∇ to select "Address" or "Name", then press **ENTER**.

When "Address" is selected in step ⑧ : Use $\Delta \nabla \triangleleft \triangleright$ to enter the proxy server address, and press **ENTER**.

When "Name" is selected in step ⑧ : Use the software keyboard ([page 118](#)) to enter the domain name, and select **OK**.

• For character input, see [page 118](#).

⑩ Press ∇ to select "Port", then press **ENTER**. Use $\Delta \nabla \triangleleft \triangleright$ to input the proxy server port number and press **ENTER**.

Setup is complete.

⑪ Press ∇ to select "Save", then press **ENTER**.

The display returns to the original screen.



• If you are using a broadband router (DHCP function), there is no need to make the settings at "IP Address" and "Proxy", since the DHCP function is set to "On" in this unit's default settings.

• If this unit is being used connected to a network without the DHCP function, the network settings must be made. In this case, some knowledge of networks is required. For details, consult a network administrator.

• If you cannot connect to the Internet, recheck the connections and settings ([page 33](#)).

• If you do not understand about Internet connection, contact your ISP (Internet Service Provider) or the store from which you purchased your computer.

• When you want to cancel the setting during IP address input, select "Cancel", then press **ENTER**.

Diagnostics

Used to check the network connection.

| Setting items | Setting details |
|--|---|
| Physical Connection Checks the physical LAN port connection. | OK : Connected. Error : The Ethernet cable is not connected. Check the connection. |
| Router Access Checks the connection from this unit to the router. | OK : Accessed. Error : Failed to communicate with the router. Check the router settings. |
| Internet Access Checks whether this unit has access to the Internet (WAN). | OK : Connected. Error : Failed to connect to the Internet. Check the Internet connection environment or router settings. |

Maintenance Mode

Use when receiving maintenance from a marantz service engineer or custom installer.

Setting details

NOTE

Only use this function if so instructed by a marantz serviceperson or installer.



Make various other settings.

Menu operation

- 1** Press **ZONE SELECT** to switch “MAIN”.
- 2** Press **SETUP**.
The menu is displayed on the TV screen.
- 3** Use Δ / ∇ to select the menu to be set or operated.
- 4** Press **ENTER** or \triangleright to enter the setting.
 - To return to the previous item, press \triangleleft or **BACK**.
 - Exiting the Menu, press **SETUP** while the menu is displayed.
The menu display disappears.



Items that can be set with the “General” procedure

Language ([page 146](#))

ZONE2 Setup / ZONE3 Setup ([page 146](#))

Zone Rename ([page 147](#))

Trigger Out 1 / Trigger Out 2 ([page 147](#))

Auto Standby ([page 147](#))

Front Display ([page 147](#))

Information ([page 148](#))

Firmware ([page 149](#))

Setup Lock ([page 150](#))

Language

Default settings are underlined.

Set the language for display on the menu screen.

Setting details

English / Deutsch / Français / Italiano / Español / Nederlands / Svenska / Русский / Polski



"Language" can also be set by the following procedure. However, the menu screen is not displayed. Following the display content to make the setting.

1. Press and hold the main unit's \triangleleft and **ZONE SELECT** for at least 3 seconds.
" *Video Format < PAL > " appears on the display.
2. Press the main unit's ∇ and set " *GUI Language < ENGLISH > ".
3. Use the main unit's $\triangleleft \triangleright$ and set the language.
4. Press the main unit's **ENTER** to complete the setting.

ZONE2 Setup / ZONE3 Setup

Default settings are underlined.

Set the audio to play back with multi-zone (ZONE2, ZONE3).

| Setting items | Setting details |
|--|---|
| Bass Adjust bass tones. | -10dB – +10dB (0dB) |
| Treble Adjust treble tones. | -10dB – +10dB (0dB) |
| High Pass Filter Make settings for cutting the low range to reduce distortion in the bass. | On : The low range is attenuated. Off : The low range is not attenuated. |
| Lch Level Adjust the left channel output level. | -12dB – +12dB (0dB) |
| Rch Level Adjust the right channel output level. | -12dB – +12dB (0dB) |

| Setting items | Setting details |
|---|---|
| Channel Set the signal output from multi-zone. | Stereo : Select stereo output. Mono : Select monaural output. |
| Volume Level Set the volume output level. | Variable : Volume adjustment is enabled by main unit and remote control unit. 40 (-40dB) : Fix volume at 40 (-40 dB). Set when adjusting volume by external amplifier. 80 (0dB) : Fix volume at 80 (0 dB). Set when adjusting volume by external amplifier. |
| Volume Limit Make a setting for maximum volume. | 60 (-20dB) / 70 (-10dB) / 80 (0dB) Off : Do not set a maximum volume. This is displayed from -79 dB to 18 dB when "Scale" (page 123) is set to "-79.5dB – 18.0dB". |
| Power On Volume Define the volume setting that is active when the power is turned on. | Last : Use the memorized setting from the last session. Mute : Always mute when power is turned on. 1 – 98 (-79dB – 18dB) : The volume is adjusted to the set level. This is displayed from -79 dB to 18 dB when "Scale" (page 123) is set to "-79.5dB – 18.0dB". |
| Mute Level Set the amount of attenuation when muting is on. | Full : The sound is muted entirely. -40dB : The sound is attenuated by 40 dB down. -20dB : The sound is attenuated by 20 dB down. |

Zone Rename

Change the display title of each zone to one you prefer.

Setting details


MAIN ZONE / ZONE2 / ZONE3 / ZONE4

- Up to 10 characters can be input.
- For character input, see [page 118](#).

Set Defaults : The input source name is returned to the default setting.

- **Reset** : Reset to the defaults.
- **Cancel** : Do not reset to the defaults.

- ✎ If you select “Set Defaults” and press **ENTER**, the message “Reset to the default values?” is displayed. Select “Reset” or “Cancel”, and then press **ENTER**.

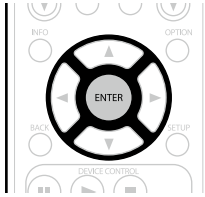

Trigger Out 1 / Trigger Out 2

Selects when to activate trigger out.

For details about how to connect the DC OUT jacks, see “DC OUT jacks” ([page 101](#)).

Setting details

When setting for zone (MAIN ZONE / ZONE2 / ZONE3 / ZONE4)

Trigger out is activated through linkage to the power of the zone set to “On”.

When setting for input source

Activate trigger out when the input source set to “On” is selected.

- ✎ Active for the zone set to “On” with “When setting for zone”.

When setting for HDMI monitor

Activate trigger out when the HDMI monitor set to “On” is selected.

- ✎ Activate trigger out when the HDMI monitor set to “On” is selected. Active when the “MAIN ZONE” set to “On” with “When setting for zone” is selected, and when the input source set to “On” with “When setting for input source” is selected.

- **On** : Activate trigger on this mode.
- **---** : Do not activate trigger on this mode.

Auto Standby

Default settings are underlined.

When you do not perform any operation on this unit with no audio or video input for a specified time, this unit automatically enters the standby mode. Before it enters the standby mode, “Auto Standby” is displayed on the display of this unit and the menu screen.

Setting details

60min : The unit goes into standby after 60 minutes.

30min : The unit goes into standby after 30 minutes.

Off : The unit does not go into standby automatically.

Front Display

Default settings are underlined.

Makes settings related to the display on this unit.




| Setting items | Setting details |
|---------------------------|---|
| Display | <p>On : Display is always on.</p> <p>Auto Off : Display is off except when showing the status display.</p> <p>Off : Display is always off.</p> <p>✎ This can also be set by pressing DISPLAY on the main unit. Each time DISPLAY is pressed, the setting is changed as shown below.</p> <div style="text-align: center;"> <pre> graph LR On --> AutoOff[Auto Off] AutoOff --> Off Off --> On </pre> </div> <p>NOTE</p> <p>When “Display” is set to “Off”, the display turns off and appears as if there is no electricity.</p> |
| Channel Indicators | <p>Input : Uses the input signal display for the channel indication on the display.</p> <p>Output : Uses the output signal display for the channel indication on the display.</p> |

Information

Show information about receiver settings, input signals, etc.

NOTE

This item is not compatible with the HDMI ZONE4 function.

| Items | Setting details | | | | |
|--|--|---------------------------------|--|---|--|
| Audio Show information about audio input signals. | <p>Sound Mode : The currently set surround mode. Input Signal : The input signal type. Format : The number of input signal channels (presence of front, surround, LFE). Sample Rate : The input signal's sampling frequency. Offset : The dialogue normalization correction value. Flag : This is displayed when inputting signals including a surround back channel. "MATRIX" is displayed with Dolby Digital EX and DTS-ES Matrix signals, "DISCRETE" with DTS-ES Discrete signals.</p> <table border="1"> <thead> <tr> <th>Dialogue normalization function</th> </tr> </thead> <tbody> <tr> <td> This function is automatically activated when playing Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS and DTS-HD sources. It automatically corrects the standard signal level for individual program sources. The correction value can be checked using the STATUS on the main unit. </td> </tr> <tr> <td style="text-align: center;">  </td> </tr> <tr> <td> The figure is the corrected value. This cannot be changed. </td> </tr> </tbody> </table> | Dialogue normalization function | This function is automatically activated when playing Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS and DTS-HD sources. It automatically corrects the standard signal level for individual program sources. The correction value can be checked using the STATUS on the main unit. |  | The figure is the corrected value. This cannot be changed. |
| Dialogue normalization function | | | | | |
| This function is automatically activated when playing Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS and DTS-HD sources. It automatically corrects the standard signal level for individual program sources. The correction value can be checked using the STATUS on the main unit. | | | | | |
|  | | | | | |
| The figure is the corrected value. This cannot be changed. | | | | | |
| Video Show information about HDMI input/output signals and HDMI monitors. | <p>HDMI Signal Info.</p> <ul style="list-style-type: none"> • Resolution / Color Space / Pixel Depth <p>HDMI Monitor 1 / HDMI Monitor 2</p> <ul style="list-style-type: none"> • Interface / Resolutions | | | | |

| Items | Setting details |
|---|---|
| ZONE Show information about current settings. | <p>MAIN ZONE : This item shows information about settings for MAIN ZONE. The information displayed differs according to the input source.</p> <ul style="list-style-type: none"> • ZONE Name / Select Source / Name / Sound Mode / Input Mode / Decode Mode / HDMI / Digital / Analog / Component / Video / Video Select / Video Mode / Content Type / Video Conversion / i/p Scaler / Resolution / Progressive Mode / Aspect Ratio etc. <p>ZONE2/3/4 : This item shows information about settings for ZONE2, ZONE3 or ZONE4.</p> <ul style="list-style-type: none"> • ZONE Name / Power / Select Source / Volume Level <p>NOTE For ZONE4, "Volume Level" is not displayed.</p> |
| Firmware | <p>Version : Displays information for the current firmware.</p> |



Press **INFO** to display current source name, volume, sound mode name, and other information at the bottom of the screen.



Examples of screen display

- Status display screen

When the input source is switched.



When the volume is adjusted.

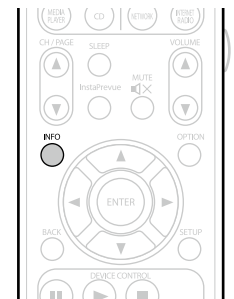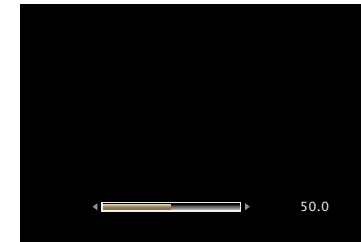

Status display: The operating status appears briefly on the screen when the input source is switched or the volume is changed.

NOTE



The status display screen cannot be displayed at a computer's resolution (e.g. VGA) or while certain 3D video contents is being played.


Firmware

Default settings are underlined.

Set whether or not to check for firmware update, update the firmware, and display update and upgrade notifications.

| Setting items | Setting details | | | | | | | | | | | | |
|--|---|---------|-------------|----------------------|------------------|---------------------|-----------------------------|-----------------------|--|------------------------|----------------------------------|----------------------|---|
| <p>Update Update the firmware of the receiver.</p> <p>NOTE In cases where it is not possible to connect to the network after doing a firmware update, connect to the network again using "Network" (page 141).</p> | <p>Check for Update : Check for firmware updates. You can also check approximately how long it will take to complete an update. Update Start : Execute the update process. When updating starts, the power indicator becomes red and the menu screen is shut down. The amount of update time which has elapsed is displayed.</p> <ul style="list-style-type: none"> If updating fails, the set automatically retries, but if updating is still not possible, one of the messages shown below is displayed. If the display reads as shown below, check the settings and network environment, then update again. <table border="1"> <thead> <tr> <th>Display</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Updating fail</td> <td>Updating failed.</td> </tr> <tr> <td>Login failed</td> <td>Failure to log into server.</td> </tr> <tr> <td>Server is busy</td> <td>Server is busy. Wait a while then try again.</td> </tr> <tr> <td>Connection fail</td> <td>Failure in connecting to server.</td> </tr> <tr> <td>Download fail</td> <td>Downloading of the firmware has failed.</td> </tr> </tbody> </table> | Display | Description | Updating fail | Updating failed. | Login failed | Failure to log into server. | Server is busy | Server is busy. Wait a while then try again. | Connection fail | Failure in connecting to server. | Download fail | Downloading of the firmware has failed. |
| Display | Description | | | | | | | | | | | | |
| Updating fail | Updating failed. | | | | | | | | | | | | |
| Login failed | Failure to log into server. | | | | | | | | | | | | |
| Server is busy | Server is busy. Wait a while then try again. | | | | | | | | | | | | |
| Connection fail | Failure in connecting to server. | | | | | | | | | | | | |
| Download fail | Downloading of the firmware has failed. | | | | | | | | | | | | |
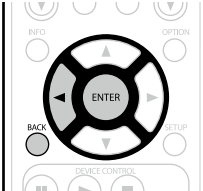
| Setting items | Setting details |
|---|---|
| <p>Notifications Displays a notification message on this unit's menu screen when the latest firmware is released with "Update". Display a notification message on this unit's menu screen when downloadable firmware is released with "Add New Feature".</p> | <p>Update : The notification message is displayed for about 20 seconds when the power is turned on. Connect to broadband Internet (page 33) when using this function.</p> <ul style="list-style-type: none"> On : Display update message. Off : Do not display update message.  <p>• Select "Go Update" while the notification message is displayed and press ENTER to display the "Check for Update" screen (Refer to page 149 for more information on "Update").</p> <p>• To close the notification message, select "Close" and press ENTER.</p> <p>Upgrade : The notification message is displayed for about 20 seconds when the power is turned on. Connect to broadband Internet (page 33) when using this function.</p> <ul style="list-style-type: none"> On : Display upgrade message. Off : Do not display upgrade message.  <p>• Select "Go Upgrade" while the notification message is displayed and press ENTER to display the "Add New Feature" screen (Refer to page 150 for more information on "Add New Feature").</p> <p>• To close the notification message, select "Close" and press ENTER.</p> |

| Setting items | Setting details |
|---|--|
| <p>Add New Feature Display new features that can be downloaded to this unit and perform an upgrade.</p> <p>NOTE In cases where it is not possible to connect to the network after adding a new function, connect to the network again using "Network" (🔗 page 141).</p> | <p>Upgrade Package : Display the items to be upgraded. Upgrade Status : Display a list of the additional functions provided by the upgrade. Upgrade Start : Execute the upgrade process. When the upgrade starts, the power indicator becomes red and the menu screen is shut down. During the upgrade, the amount of upgrade time which has elapsed is displayed.</p> <ul style="list-style-type: none"> • If the upgrade is not successful, an error message identical to those in "Update" will appear on the display. Check the settings and network environment and then perform the upgrade again. <p> See the marantz website for details about upgrades. When the procedure is complete, "Registered" is displayed in this menu and upgrades can be carried out. If the procedure has not been carried out, "Not Registered" is displayed. The ID number shown on this screen is needed when carrying out the procedure. The ID number can also be displayed by pressing and holding the main unit's ◀ and SETUP for at least 3 seconds.</p> |

Notes concerning use of "Update" and "Add New Feature"

- In order to use these functions, you must have the correct system requirements and settings for a broadband Internet connection (🔗 page 33).
- Do not turn off the power until updating or upgrading is completed.
- Even with a broadband connection to the Internet, approximately 1 hour is required for the updating/upgrading procedure to be completed.
- Once updating/upgrade starts, normal operations on this unit cannot be performed until updating/upgrading is completed. Furthermore, there may be cases where backup data is reset for the parameters, etc., set on this unit.
- If the update or upgrade fails, press and hold the **ON/STANDBY** on the main unit for more than 5 seconds, or remove and re-insert the power cord. "Update retry" appears on the display and update restarts from the point at which update failed. If the error continues despite this, check the network environment.




- Information regarding the "Update" function and "Add New Feature" will be announced on the marantz web site each time related plans are defined.
- When usable new firmware is released with "Update" or "Add New Feature", a notification message is displayed on the menu screen. When you do not want to be notified, set "Notifications" – "Update" (🔗 page 149) and "Notifications" – "Upgrade" (🔗 page 149) to "Off".

Setup Lock

Default settings are underlined.

Protect settings from inadvertent change.

| Setting items | Setting details |
|---------------|--|
| Lock | <p>On : Turn protection on. Off : Turn protection off.</p> <p> When canceling the setting, set "Lock" to "Off".</p> <p>NOTE When "Lock" is set to "On", the settings listed below can no longer be changed. Also, "Setup Locked!" is displayed if you attempt to operate related settings.</p> <ul style="list-style-type: none"> • Setup menu operations |

Operating external devices with the remote control

By registering preset codes for external devices to the provided remote control, you can operate your TV and playback devices (such as Blu-ray Disc player and DVD player) with the remote control.

Registering preset codes

When preset codes are registered in the included remote control unit, it can then be used to operate any devices you have, such as DVD players or TVs made by different manufacturers.

Buttons used for operating the devices

- ① **DEVICE** For switching power of each device on or off.
- ② **△▽◀▶, ENTER, BACK** For menu operation of each device.
- ③ **MENU, INFO, OPTION, SETUP** For displaying the menu of each device.
- ④ **II, ▶, ■, I◀◀, ▶▶I, ◀◀, ▶▶**
- ⑤ Number button (**0 – 9, +10**)
- ⑥ **CH/PAGE ▲▼**
- ⑦ **TV , TV INPUT** For operating a TV
This button is enabled in any mode.

For details on operation with the remote control unit, see pages [48](#), [51](#), [62](#), [65](#), [69](#), [73](#), [75](#), [77](#), [155](#), [156](#).

NOTE

The preset code cannot be registered to **M-XP, TUNER, PHONO, iPod/USB, NETWORK** and **INTERNET RADIO**.

Registering preset codes

The following two methods can be used for registering the reset code.

- ① Entering a 4-digit code
- ② Scanning the code table

Entering a 4-digit code

See the preset code list table for the code to be input.

- 1 Press and hold the input source select buttons for the appliance to control, and press SET until the indicator blinks twice.**
The back light flashes.


NOTE

Note that the group numbers that can be registered are predefined for each input source select button ([page 153](#)).

- 2 Press the 4-digit code for the appliance using 0 – 9 (code table at the end of this manual).**
When the settings are complete, "OK" is shown in the remote control display.

NOTE

If "NG" is displayed in the remote control display, repeat steps 1 and 2, and enter the same code again.

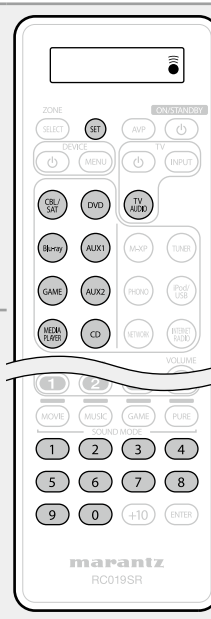

Scanning the code table

- 1 Switch the power on of the device for which you want to set the preset code.**
- 2 Press and hold the input source select buttons for the appliance to control, and press SET until the indicator blinks twice.**
The back light flashes.
- 3 Aim the remote control at the appliance and slowly alternate between pressing CH/PAGE ▲ and DEVICE for the appliance.**
The preset code is shown in the remote control display.
- 4 Stop when the appliance turns off.**
- 5 Press ENTER once to lock in the code.**



- Some manufacturers use more than one type of remote control code. Preset codes to change the number and verify correct operation.
- If the AV device is not a marantz device, or if the device does not operate even when the preset code is registered, use the learning function. Remote codes for different devices can be remembered for use by the marantz remote control included with this device.

NOTE

Depending on the model and year of manufacture of your device, some buttons may not operate.

Check the registered preset code

1 Press and hold the input source select buttons for the appliance to control, and press SET until the indicator blinks twice.
The back light flashes.

2 Press INFO.
The indicator blinks twice, after which the set code is shown for 3 seconds in the remote control display.



Remote control operation modes



By default, the input source select buttons on the remote control perform only the input source select operation. To operate an external device with this remote control, set the preset code in "List of preset codes" (page 190) for the device you want to register to each input source select button.

For how to set preset codes to buttons, see "Registering preset codes" (page 151).

If you register preset codes on this remote control, the input source select buttons on the remote control can perform the following two functions.

- ① The function to switch input sources on this unit (AVP operation mode)
- ② The function to make this remote control switch to the mode in which you can operate the device registered to the button (External device operation mode)

How to switch operation modes

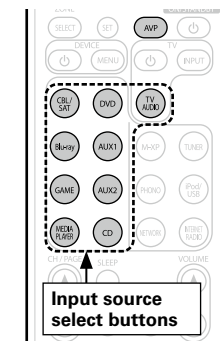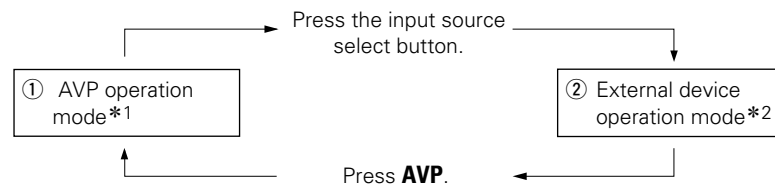









*1 The mode in which you can operate this unit.


*2 If you press one of these buttons, the input source on this unit changes and the remote control switches to the mode in which you can operate the external device registered to that button.

❑ Devices that can be registered to input source select buttons on the remote control

The types of devices that can be registered to each input source select button on this remote control are assigned as shown in the following table. Register the preset code under the desired device name in "List of preset codes" (page 190).


Preset codes that can be registered to CBL/SAT, Blu-ray, GAME, MEDIA PLAYER, DVD, AUX1, AUX2, and CD buttons


| Button | Default preset mode | Available change to preset |
|---|---------------------|--|
|  | AVP | CBL/SAT group |
|  | | BD group DVD group |
|  | | CBL/SAT group BD group DVD group CD group |
|  | | CBL/SAT group |
|  | | BD group DVD group |
|  | | CBL/SAT group BD group DVD group CD group |
|  | | CBL/SAT group BD group DVD group CD group |
|  | | CD group |



- To unregister the device from a button and reset to the default setting, set the AVP code "0000" to the button.

Preset codes that can be registered to TV buttons

| Button | Default preset mode | Available change to preset |
|---|---------------------|----------------------------|
|  | AVP | TV group |

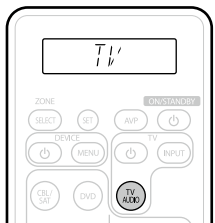

- When you press TV AUDIO that has a preset code registered to it, the "TV" indication on the remote control lights.




To perform menu operations of this unit, press **AVP** to have the remote control enter the AVP operation mode.

Operating external devices

Press the input source select button (🔍 page 43).

- The operation mode of the remote control unit is switched as shown in the table.

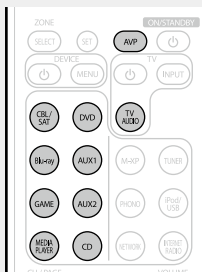

| Input source select button | Input source of this unit | Operation mode |
|----------------------------|---------------------------|---|
| | | Devices controllable with the remote control unit |
| | – | This unit (AVP-operation) *2 |
| *1 | CBL/SAT | Device registered on the CBL/SAT button |
| *1 | Blu-ray | Device registered on the Blu-ray button |
| *1 | GAME | Device registered on the GAME button |
| *1 | MEDIA PLAYER | Device registered on the MEDIA PLAYER button |
| *1 | DVD | Device registered on the DVD button |
| *1 | AUX1 | Device registered on the AUX1 button |
| *1 | AUX2 | Device registered on the AUX2 button |
| *1 | CD | Device registered on the CD button |
| *1 | TV AUDIO | Device registered on the TV AUDIO button |

*1 If a preset code is registered for this button, the remote control unit of this unit can control another devices.

*2 With this mode, you can operate: FM, iPod, USB memory device, turn table and network function.



When the **FAVORITE STATION** and **InstaPrevue** are pressed, the AVP-operation mode starts automatically.

NOTE

If the mode of the remote control unit is set to other than AVP-operation mode, press **AVP** to switch the remote control unit to the AVP-operation mode to perform the following operations:

- For menu operation by pressing **SETUP**.


Operating devices

The supplied remote control unit can control a device other than this unit.


1 Press the input source select button to which the preset code for the device you want to operate has been registered (page 154).

2 Operate the device.

• For details, refer to the device's operating instructions.

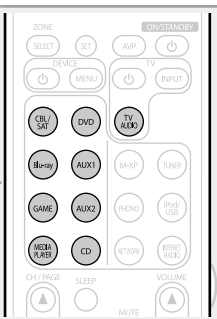


TV group (1****) (TV) operation

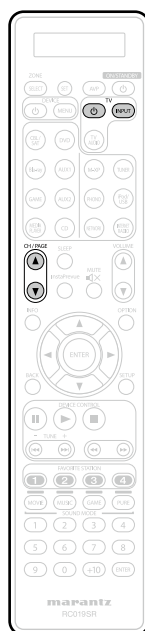


| Operation buttons | Function |
|-------------------|---------------------------|
| TV | TV power on/standby |
| TV INPUT | Switch TV input |
| CH/PAGE | Switch channels (up/down) |

DVD group (2****) (DVD player / DVD recorder) operation

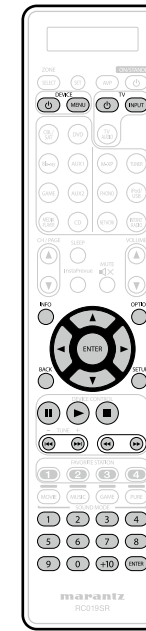


| Operation buttons | Function |
|--------------------|--|
| DEVICE | Power on/standby |
| DEVICE MENU | Menu |
| TV | TV power on/standby |
| TV INPUT | Switch TV input |
| INFO | Information |
| OPTION | Top menu |
| | Cursor operation |
| ENTER | Enter |
| BACK | Return |
| SETUP | Setup |
| | Pause |
| | Playback |
| | Stop |
| | Auto search (cue) |
| | Manual search (fast-reverse/fast-forward) |
| 0 - 9, +10 | Select title, chapter or channel selection |

❑ **CD group (3***)**
(CD player / CD recorder) operation

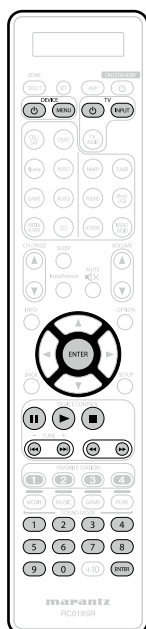

| Operation buttons | Function |
|--------------------|--|
| DEVICE ⏻ | Power on/off |
| DEVICE MENU | Menu |
| TV ⏻ | TV power on/standby |
| TV INPUT | Switch TV input |
| ENTER | Enter |
| ⏸ | Pause |
| ▶ | Playback |
| ■ | Stop |
| ⏮ ⏭ | Auto search (cue) |
| ⏪ ⏩ | Manual search (fast-reverse/fast-forward) |
| 0 - 9 | Track selection |

❑ **CBL/SAT group (4***)**
**(Set top box for satellite (SAT) / cable (CBL) /
 Media player) operation**

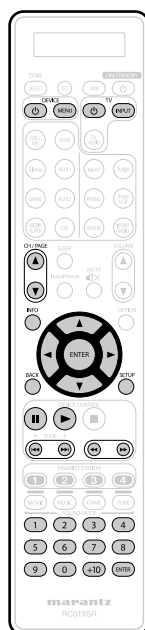

| Operation buttons | Function |
|--------------------|--|
| DEVICE ⏻ | Power on/standby |
| DEVICE MENU | Menu |
| TV ⏻ | TV power on/standby |
| TV INPUT | Switch TV input |
| CH/PAGE ▲▼ | Switch channels (up/down) |
| INFO | Information |
| △▽◀▶ | Cursor operation |
| ENTER | Enter |
| BACK | Return |
| SETUP | Setup |
| ⏸ | Pause |
| ▶ | Playback |
| ⏮ ⏭ | Auto search (cue) |
| ⏪ ⏩ | Manual search (fast-reverse/fast-forward) |
| 0 - 9, +10 | Channel selection |

❑ **BD group (5***)**
(Blu-ray Disc player) operation




| Operation buttons | Function |
|--------------------|---|
| DEVICE ⏻ | Power on/standby |
| DEVICE MENU | (Popup) Menu |
| TV ⏻ | TV power on/standby |
| TV INPUT | Switch TV input |
| INFO | Information |
| OPTION | Top menu |
| △▽◀▶ | Cursor operation |
| ENTER | Enter |
| BACK | Return |
| SETUP | Setup |
| ⏸ | Pause |
| ▶ | Playback |
| ■ | Stop |
| ⏮ ⏭ | Auto search (cue) |
| ⏪ ⏩ | Manual search (fast-reverse/fast-forward) |
| 0 - 9, +10 | Select title, chapter or channel selection |

Operating learning function

- If the AV device is not a marantz device, or if the device does not operate even when the preset code is registered, use the learning function. Remote codes for different devices can be remembered for use by the marantz remote control included with this device.
- This remote control unit is capable of learning around 160 codes.

Remembering remote control codes from other devices

- 1 Place the marantz remote control and remote control from the other device approximately 5 cm apart, with the remote control signal transmission sections facing each other.**

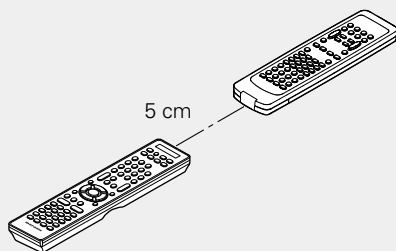

- 2 Press and hold SET until the LEARN indicator blinks.**

- 3 Press input source select buttons to select the input source.**

The input source is shown in the remote control display.

NOTE

Before using the learning function, register a preset code (page 151 "Registering preset codes") for a mode other than AVP preset (page 153) to each input source switch button.

- 4 Select the button to be learned.**
LEARN indicator lights up.



- 5 Press and hold the button that you want to register on the other remote control until "OK" is displayed on the marantz remote control display.**

- If "NG" is shown on the remote control display, perform step 5 again. If "NG" is shown again on the remote control display, the remote control may not be able to learn the code correctly. In this case, use the specialized remote control for the device.
- If the remote control memory becomes full, "FULL" is shown on the remote control display. If you want to learn the code, you should erase other learned button.

- 6 Repeat steps 4 and 5 to learn other buttons for the same input source.**

- 7 Repeat steps 3 to 6 to learn other input sources.**

- 8 When programming of the remote control unit is completed, press SET.**

The LEARN indicator turns off, and the remote control unit exits learn mode.



- There are some remote control units that cannot be programmed, or even if they can be programmed, they may not operate correctly. If this happens, use the remote control unit supplied with the AV equipment to operate it.
- The operations of the programmed buttons override the preset memory. If you do not require the programmed buttons, erase the stored remote control codes to return to the initial settings (page 158 "Delete saved remote control codes").
- The number of buttons that can be stored varies depending on the remote control unit used. If you have stored the maximum number of buttons allowed for the remote control unit, "FULL" appears on its display.

NOTE

- The learning function is unavailable for all **ZONE SELECT**, **SET**, **AVP**, **ON/STANDBY**, **VOLUME**, **FAVORITE STATION**, **SOUND MODE** and input source select buttons in any mode.
- While in the AVP operation mode, the learning function is unavailable.
- The learning procedure does not operate correctly if the batteries have become worn.
- If no buttons are pressed for approximately 1 minutes while in the LEARN mode, the remote control unit automatically exits from the LEARN mode.

Delete saved remote control codes

Codes can be erased in three ways: by buttons, sources, and by all memory contents.

Delete remote control codes for each button

1 Press and hold **SET** until the **LEARN** indicator blinks.

2 Press input source select buttons to select the input source you want to delete.

The input source is shown in the remote control display.

3 Press and hold **ON/STANDBY** and press the learned button to be erased twice.

"ERASE" is shown in the remote control display, and the mode returns to LEARN mode.

- To return the normal mode, press **SET**.



Delete remote control codes for each input source


1 Press and hold **SET** until the **LEARN** indicator blinks.

2 Press and hold **ON/STANDBY** and press the learned input source select buttons to be erased twice.

"ERASE" is shown in the remote control display.

3 Press **ENTER** to continue erasing. The indicator blinks twice and the mode returns to LEARN mode.

- To cancel the erasing operation, do not press **ENTER**, and simply press any other button.
- To return the normal mode, press **SET**.

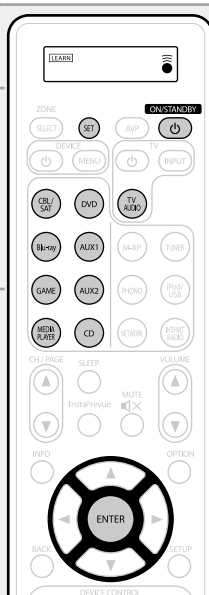

Delete remote control codes for all input sources

1 Press and hold **SET** until the **LEARN** indicator blinks.

2 Press and hold **ON/STANDBY** and press **AMP**. **LEARN** indicator lights.

3 Press **ENTER** to continue erasing. "ERASE" is shown in the remote control display, and the mode returns to LEARN mode.

- To cancel the erasing operation, do not press **ENTER**, and simply press any other button.
- To return the normal mode, press **SET**.




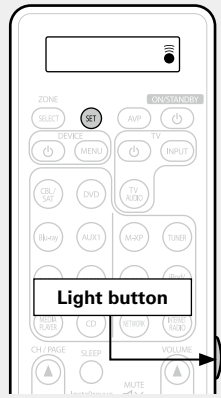
Setting the back light

Press the Light button on the side of the remote control, and the buttons on the remote control light for 2 seconds. If the Light button is pressed while the buttons are lit, the buttons remain lit for another 2 seconds.

- Backlight is set on in the factory settings.

Disabling the backlight

Press and hold both **SET** and **Light** button until  indicator flashes twice.



Turning the backlight on

Press and hold both **SET** and **Light** button until  indicator flashes twice.



Specifying the zone used with the remote control unit

When the **ZONE SELECT** button is pressed, only the set zone can be operated with the remote control unit.


- The factory setting is "M234".

1 Press and hold **ZONE SELECT** and **SET** for at least 3 seconds.

2 Use Δ / ∇ to set the zone to be used and press **ENTER**.



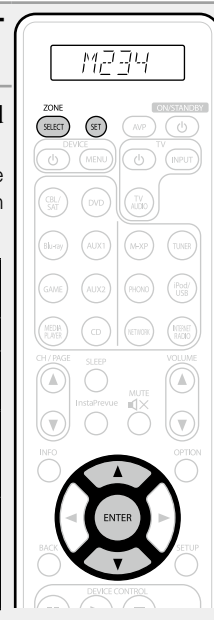


"SET" flashes four times on the remote control unit and the normal operation mode is restored.

| Remote control unit display | Zone to be used |
|-----------------------------|-----------------------------------|
| M | MAIN ZONE only |
| M2 | MAIN ZONE / ZONE2 |
| M23 | MAIN ZONE / ZONE2 / ZONE3 |
| M234 | MAIN ZONE / ZONE2 / ZONE3 / ZONE4 |



Informations


Here, we list various information related to this unit.
Please refer to this information as needed.

- Part names and functions  [page 161](#)
- Other information  [page 168](#)
- Troubleshooting  [page 181](#)
- Specifications  [page 187](#)
- Index  [page 188](#)

Part names and functions


Front panel

For buttons not explained here, see the page indicated in parentheses ().

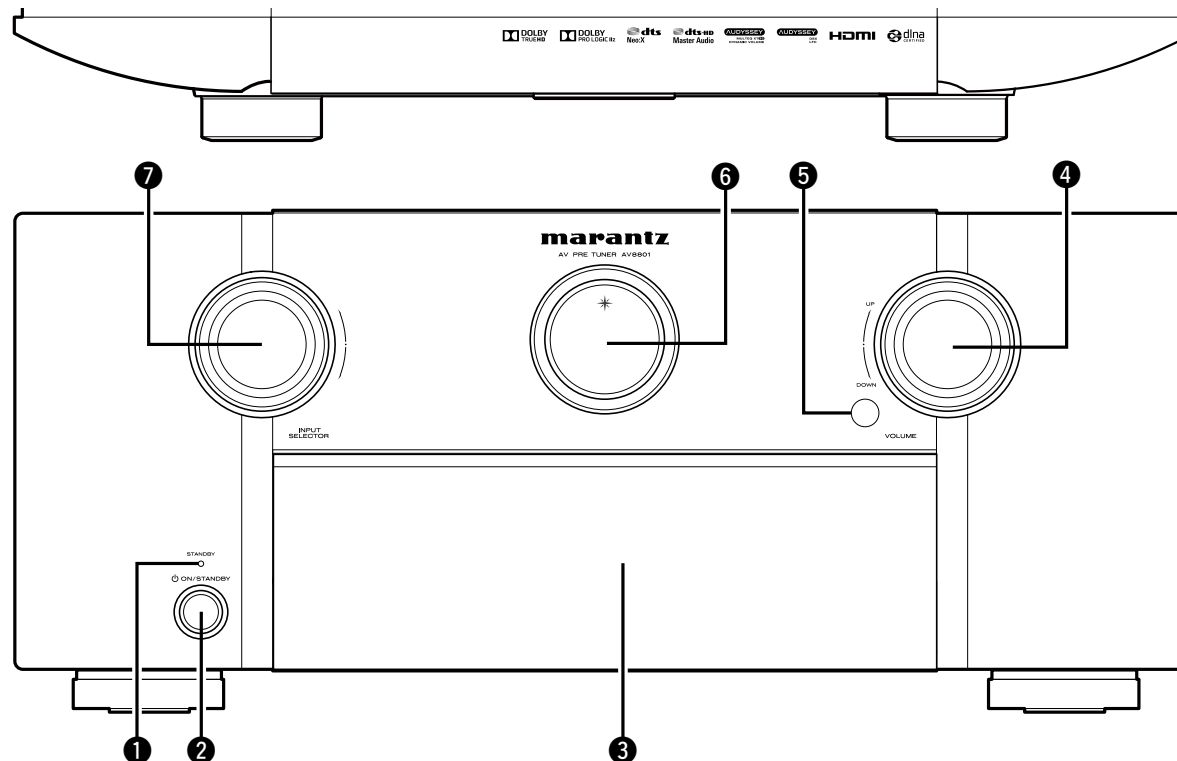

- 1 STANDBY indicator** (43)
[STANDBY indicator status]
 - Power on : Off
 - Normal standby : Red
 - When "HDMI Pass Through" or "HDMI Control" ([page 128](#)) is set to "On" : Orange
 - When "Network" ([page 142](#)) is set to "Always On" : Orange
 - When a mobile device that supports MHL is being charged : Orange
- 2 Power operation button (ON/STANDBY)** (43)
 Turns power to this unit on and off (standby).


- 3 Door**
 When you are using buttons and/or connectors behind the door, press the bottom of the door to open it. When not using buttons and/or connectors behind the door, close it. Be careful not to catch your fingers when closing the door.

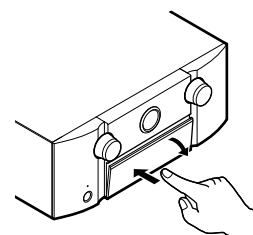

- 4 VOLUME knob** (44, 113)
- 5 Remote control sensor** (167)
- 6 Main display** (163)
- 7 INPUT SELECTOR knob** (43, 113)

With the door open

For buttons not explained here, see the page indicated in parentheses ().

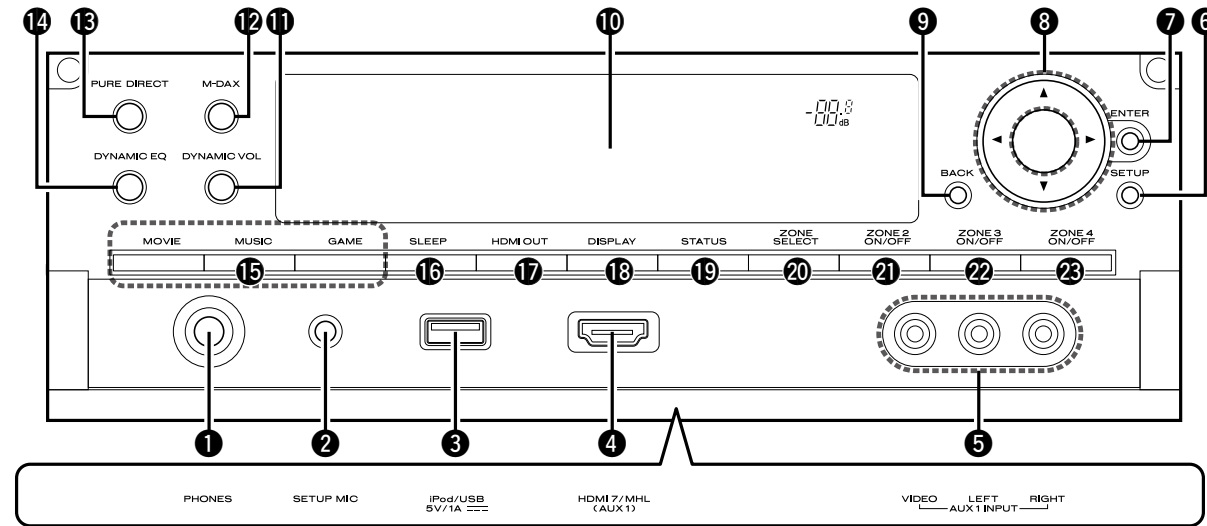

1 Headphones jack (PHONES)

When the headphones are plugged into this jack, audio will no longer be output from the PRE OUT terminals.

NOTE

To prevent hearing loss, do not raise the volume level excessively when using headphones.

- 2 SETUP MIC jack (36, 98)
- 3 iPod/USB port (24)
- 4 HDMI 7/MHL (AUX1) connector (12)
- 5 AUX1 INPUT connectors (22)


- 6 SETUP button (117, 119, 126, 132, 137, 141, 145)
- 7 ENTER button (117, 119, 126, 132, 137, 141, 145)
- 8 Cursor buttons
($\Delta \nabla \triangleleft \triangleright$) (117, 119, 126, 132, 137, 141, 145)
- 9 BACK button (50, 64, 68, 72, 74, 77, 186)
- 10 Sub display (164)
- 11 Dynamic Volume button (DYNAMIC VOL) (124)
- 12 M-DAX button/indicator (122)
- 13 PURE DIRECT button/indicator (86)
- 14 DYNAMIC EQ button (124)
- 15 SOUND MODE buttons (86)
 - MOVIE button
 - MUSIC button
 - GAME button

- 16 SLEEP button (105, 113)
- 17 HDMI OUT button (128)
- 18 DISPLAY button (147)
- 19 STATUS button (47, 64, 68, 72, 77, 148)
- 20 ZONE SELECT button (36, 82, 98, 113, 159)
- 21 ZONE2 ON/OFF button (113)
- 22 ZONE3 ON/OFF button (113)
- 23 ZONE4 ON/OFF button (113)

Main Display


The input source name, surround mode, setting values and other information are displayed here.

Standard display

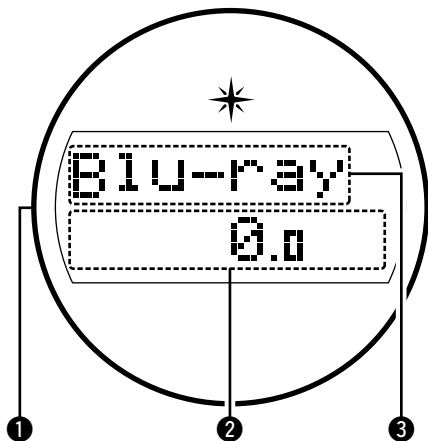

- 1 Light illumination**
When the power to this device is switched on, the surrounding area is lit blue. The settings can be changed so the light does not switch on ([page 110](#) "Switches light illumination on/off").
- 2 Master volume indicator**
- 3 Input source indicator**
The currently selected input source name is displayed.
If the input source name has been changed using "Source Rename" ([page 135](#)) in the menu, the input source name after the change is displayed.


Sleep timer display

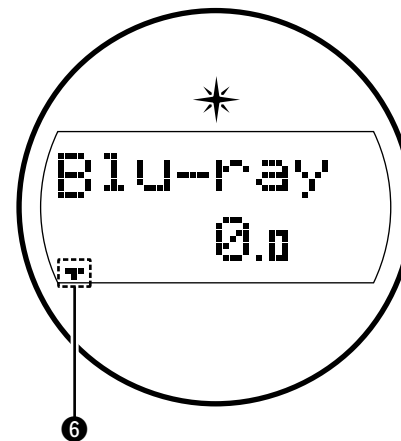

- 6** This lights when the sleep mode is selected ([page 105](#)).


Tuner display

These light according to the reception conditions when the input source is set to "FM".

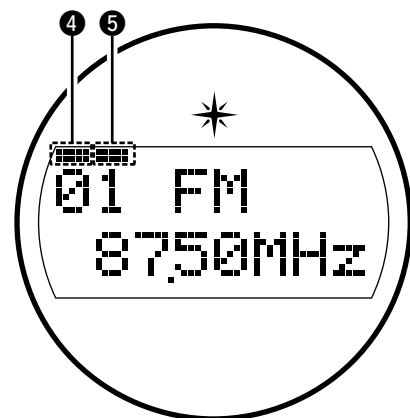


- 4** Lights up when the broadcast is properly turned in.
- 5** In the FM mode, this lights up when receiving stereo broadcasts.

ZONE2/ZONE3/ZONE4 power on display

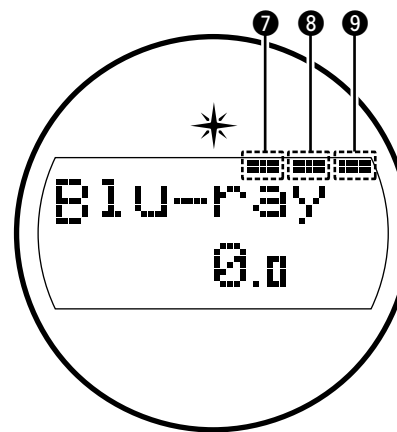

- 7** This lights up when ZONE2 (separate room) power is turned on ([page 113](#)).
- 8** This lights up when ZONE3 (separate room) power is turned on ([page 113](#)).
- 9** This lights up when ZONE4 (separate room) power is turned on ([page 113](#)).

Sub Display

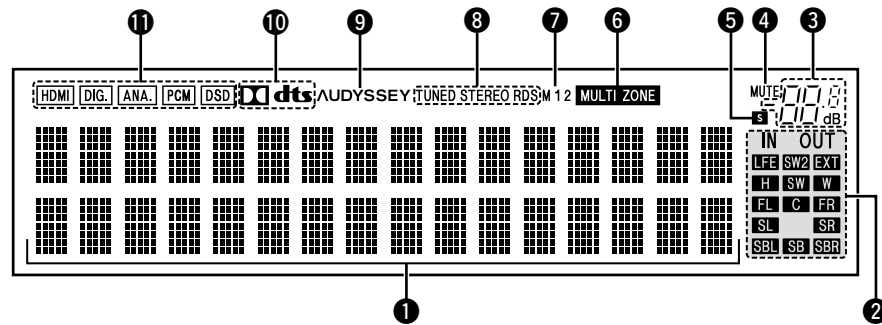

1 Information display

The input source name, sound mode, setting values and other information are displayed here.

2 Input/output signal channel indicators

The channel for input/output signals is displayed according to the setting configured for "Channel Indicators" ([page 147](#)).

- When "Channel Indicators" is set to "Output" (Default)
These light when audio signals are being output from the speakers.
- When "Channel Indicators" is set to "Input"
These light when digital signals are input.
When playing HD Audio sources, the **EXT** indicator lights when a signal from an extension channel (a channel other than the front, center, surround, surround back, front height, front wide or LFE channel) is input.

3 Master volume indicator

4 MUTE indicator

This lights when the mute mode is selected ([page 44](#)).

5 Sleep timer indicator

This lights when the sleep mode is selected ([page 105](#)).

6 MULTI ZONE indicators

This lights up when ZONE2, ZONE3 or ZONE4 (separate room) power is turned on ([page 113](#)).

7 Monitor output indicator

These light according to the HDMI monitor output setting. When set to "Auto(Dual)", the indicators light according to connection status.

8 Tuner reception mode indicators

These light according to the reception conditions when the input source is set to "FM".

STEREO : In FM mode, this lights up when receiving stereo broadcasts.

TUNED : Lights up when the broadcast is properly tuned in.

RDS : Lights up when receiving RDS broadcasts.

9 Audyssey® indicator

This indicator lights when the "MultEQ® XT 32" ([page 123](#)), "Dynamic EQ" ([page 124](#)), "Dynamic Volume" ([page 124](#)), "Audyssey DSX®" ([page 125](#)) or "Audyssey LFC™" ([page 124](#)) setting is set to other than "Off".

10 Decoder indicator


These light when Dolby or DTS signals are input or when the Dolby or DTS decoder is running.

11 Input mode indicators

Set the audio input modes for the different input sources ([page 136](#)).

Rear panel

See the page indicated in parentheses ().

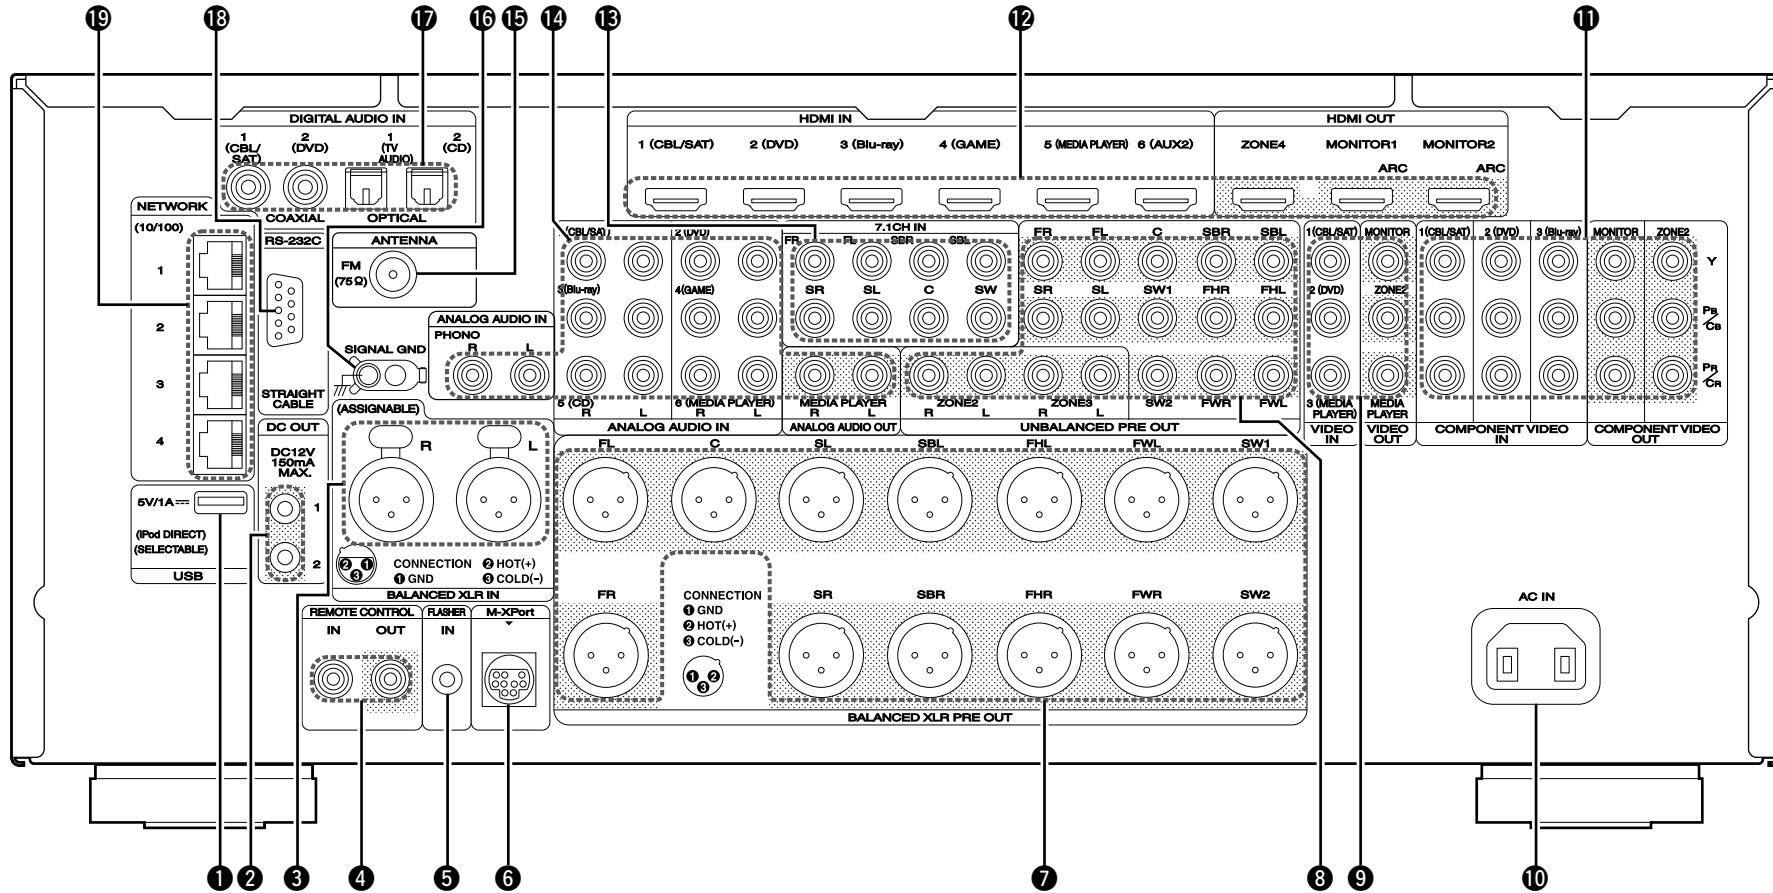


- ① USB port (24)
- ② DC OUT jacks (101)
- ③ BALANCED XLR IN terminals (17, 18, 19, 20, 21, 22, 23, 26)
- ④ REMOTE CONTROL jacks (100)
- ⑤ FLASHER IN jack
Used when using a control BOX or other such control devices to control this unit.
- ⑥ M-XPport connector (29)
- ⑦ BALANCED XLR PRE OUT terminals (32)
- ⑧ UNBALANCED RCA PRE OUT terminals (31, 95, 96, 97)
- ⑨ Video connectors (VIDEO) (17, 18, 19, 23, 112)
- ⑩ AC inlet (AC IN) (34)
- ⑪ Component video connectors (COMPONENT VIDEO) (17, 18, 19, 20, 112)
- ⑫ HDMI connectors (11, 12, 112)
- ⑬ 7.1ch input connectors (7.1CH IN) (30)
- ⑭ Analog audio connectors (ANALOG AUDIO) (18, 19, 20, 21, 23, 26, 27)
- ⑮ FM antenna terminals (ANTENNA) (28)
- ⑯ SIGNAL GND terminal (27)
- ⑰ Digital audio connectors (DIGITAL AUDIO IN) (17, 18, 19, 26)
- ⑱ RS-232C connector (101)
- ⑲ Network connectors (NETWORK) (33)

NOTE

Do not touch the inner pins of the connectors on the rear panel. Electrostatic discharge may cause permanent damage to the unit.

Remote control unit



For buttons not explained here, see the page indicated in parentheses ().

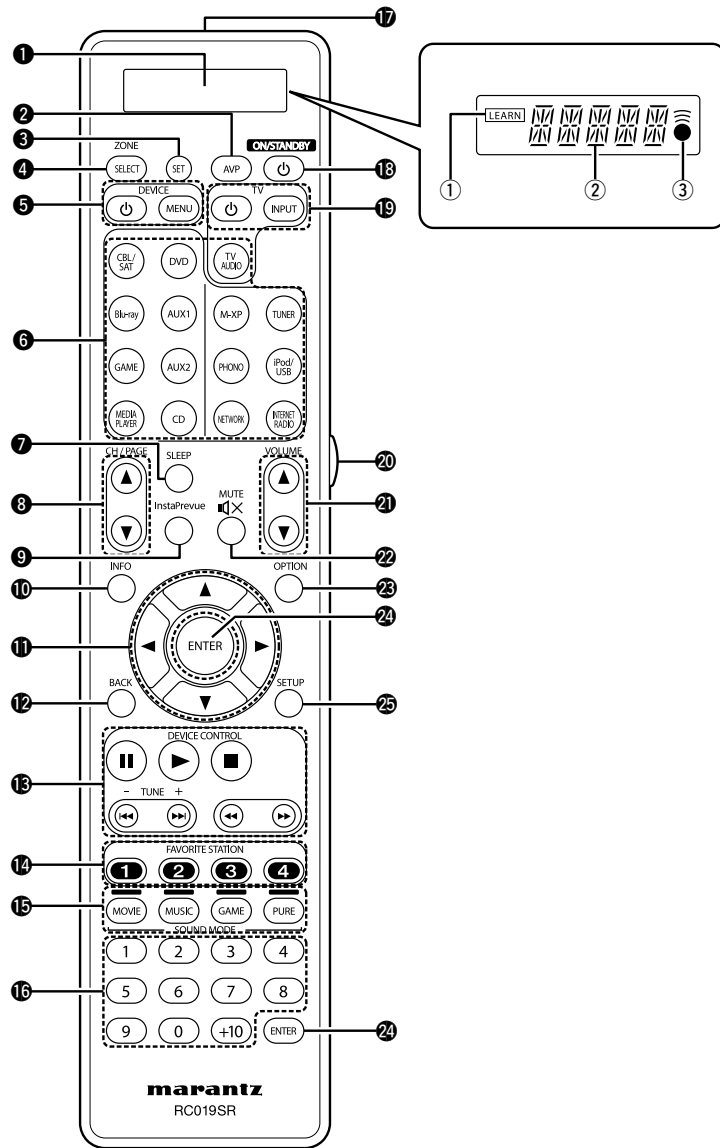

- 1 Display**
 - ① LEARN indicator
 - ② Information display
 - ③ ● indicator
- 2 AVP button** (152, 154)
- 3 SET button** (151, 157, 159)
- 4 ZONE SELECT button** (36, 82, 98, 113, 159)
- 5 Device operation buttons (DEVICE ON / DEVICE MENU)** (155, 156)
- 6 Input source select buttons** (43, 113)
- 7 SLEEP button** (105, 113)
- 8 Channel/page search buttons (CH/PAGE ▲▼)** (48, 51, 56, 62, 65, 69, 73, 75, 77, 155, 156)
- 9 InstaPrevue button** (104)
- 10 Information button (INFO)** (148)
- 11 Cursor buttons (▲▼◀▶)** (117, 119, 126, 132, 137, 141, 145)
- 12 BACK button** (50, 64, 68, 73, 74, 77)
- 13 DEVICES CONTROL buttons** (48, 51, 65, 69, 73, 75, 77, 155, 156)
 - Pause button (⏸)
 - Play button (▶)
 - Stop button (■)
 - Skip buttons (⏮, ⏭)
 - Search buttons (⏪, ⏩)
- Tuning up / Tuning down buttons (TUNE +, -)** (52, 53)
- 14 FAVORITE STATION buttons (1 - 4)** (80)
- 15 SOUND MODE buttons** (86)
 - MOVIE button
 - MUSIC button
 - GAME button
 - PURE button
- 16 Number buttons** (54, 56, 155, 156)
- 17 Remote control signal transmitter** (167)
- 18 ON/STANDBY button (⏻)** (43)
- 19 TV operation buttons (TV ON / INPUT)** (65, 69, 75, 155, 156)
- 20 Light button** (159)
- 21 VOLUME buttons (▲▼)** (44, 113)
- 22 MUTE button (⏸)** (44, 113)
- 23 OPTION button** (46, 50, 52, 64, 69, 74, 77, 104)
- 24 ENTER button** (117, 119, 126, 132, 137, 141, 145)
- 25 SETUP button** (117, 119, 126, 132, 137, 141, 145)

Inserting the batteries

- ① Slide the rear cover off the remote control unit in the arrow direction.
- ② Load the two batteries properly as indicated by the marks in the battery compartment.

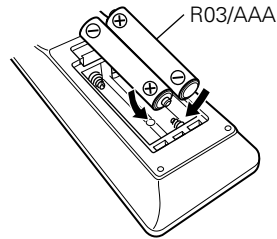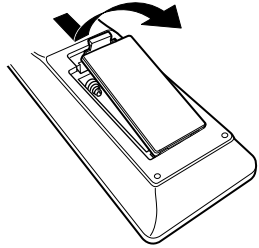


- ③ Put the rear cover back on.

NOTE

- Insert the specified batteries in the remote control unit.
- Replace the batteries with new ones if the set does not operate even when the remote control unit is operated close to the unit. (The supplied batteries are only for verifying operation. Replace them with new batteries at an early date.)
- When inserting the batteries, be sure to do so in the proper direction, following the ⊕ and ⊖ marks in the battery compartment.
- To prevent damage or leakage of battery fluid:
 - Do not use a new battery together with an old one.
 - Do not use two different types of batteries.
 - Do not attempt to charge dry batteries.
 - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
 - Do not keep the battery in a place exposed to direct sunlight or in places with extremely high temperatures, such as near a heater.
- If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.
- Remove the batteries from the remote control unit if it will not be in use for long periods.
- Used batteries should be disposed of in accordance with the local regulations regarding battery disposal.
- The remote control unit may function improperly if rechargeable batteries are used.

Operating range of the remote control unit

Point the remote control unit at the remote sensor when operating it.

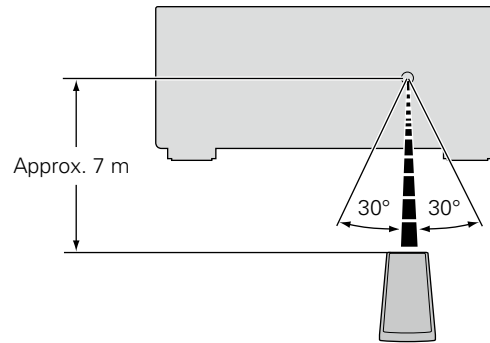

NOTE





- The set may function improperly or the remote control unit may not operate if the remote control sensor is exposed to direct sunlight, strong artificial light from an inverter type fluorescent lamp or infrared light.
- When using 3D video devices that transmit radio communication signals (such as infrared signals etc) between the various units (such as the monitor, 3D glasses, 3D transmitter unit etc), the remote control unit may not operate due to interference from those radio communication signals. If this occurs, adjust the direction and distance of the 3D communication for each unit, and check that the remote control unit operation is not affected by these signals.



Other information

- ❑ **Trademark information** ([page 168](#))
- ❑ **Surround** ([page 169](#))
- ❑ **Relationship between video signals and monitor output** ([page 175](#))
- ❑ **Explanation of terms** ([page 178](#))

Trademark information

This product uses the following technologies (Random order):

| | |
|--|---|
|  |  |
| <p>Manufactured under license from Audyssey Laboratories™. U.S. and foreign patents pending. Audyssey MultEQ® XT 32, Audyssey Dynamic EQ®, Audyssey Dynamic Volume® and Audyssey DSX® are registered trademarks of Audyssey Laboratories. Audyssey LFC™ is a trademark of Audyssey Laboratories.</p> | |
|  |  |
| <p>Manufactured under license from Dolby Laboratories. “Dolby”, “Pro Logic” and the double-D symbol are trademarks of Dolby Laboratories.</p> | |

| | |
|--|---|
|  |  |
| <p>Manufactured under license under U.S. Patent No’s:5,956,674;5,974,380;5,978,762;6,487,535;6,226,616;7,212,872;7,003,467;7,272,567;7,668,723;7,392,195;7,930,184;7,333,929;7,548,853;7,283,634 & other U.S. and worldwide patents issued and pending. DTS-HD, the Symbol, & DTS-HD and the Symbol together are registered trademarks & DTS -HD Master Audio is a trademark of DTS, Inc. Product includes software. ©DTS, Inc. All Rights Reserved.</p> | |
|  | |
| <p>The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.</p> | |
|  | |
| <p>InstaPrevue and the InstaPrevue logo are trademarks or registered trademarks of Silicon Image, Inc. in the United States and other countries.</p> | |

| | |
|--|---|
|  |  |
| <p>“Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, or iPhone, may affect wireless performance. AirPlay, the AirPlay logo, iPad, iPhone, iPod, iPod classic, iPod nano, iPod shuffle and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.</p> <ul style="list-style-type: none"> • Individual users are permitted to use iPhone, iPod, iPod classic, iPod nano, iPod shuffle, and iPod touch for private copy and playback of non-copyrighted contents and contents whose copy and playback is permitted by law. Copyright infringement is prohibited by law. | |
|  | |
| <p>MHL, the MHL Logo, and Mobile High-Definition Link are trademark or registered trademarks of MHL LLC in the United States and other countries.</p> | |
|  | |
| <p>Windows Media and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.</p> | |
| <p>This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.</p> | |

Surround

This unit is equipped with a digital signal processing circuit that lets you play program sources in the sound mode to achieve the same sense of presence as in a movie theater.

Sound modes and surround parameters

This table shows the speakers that can be used in each sound mode and the surround parameters adjustable in each sound mode.

Symbols in the table

- This indicates the audio output channels or surround parameters that can be set.
- ⊙ This indicates the audio output channels. The output channels depend on the settings of "Speaker Config." ([page 138](#)).

| Sound Mode (page 86) | Channel output | | | | | | | Dialog Enhancer (page 120) | Subwoofer Level (page 120) |
|--|----------------|--------|--------------|-------------------|------------------|----------------|-----------|---|---|
| | Front L/R | Center | Surround L/R | Surround back L/R | Front height L/R | Front wide L/R | Subwoofer | | |
| DIRECT/PURE DIRECT (2 channel)*1 | ○ | | | | | | ⊙*6 | | ○*6 |
| DIRECT/PURE DIRECT (Multi-channel)*1 | ○ | ⊙ | ⊙ | ⊙*2 | ⊙*2 | ⊙*2 | ⊙ | | ○ |
| DSD DIRECT (2 channel)*1 | ○ | | | | | | ⊙*6 | | ○*6 |
| DSD DIRECT (Multi-channel)*1 | ○ | ⊙ | ⊙ | | | | ⊙ | | ○ |
| 7.1CH IN | ○ | ⊙ | ⊙ | ⊙ | | | ⊙ | | ○ |
| STEREO | ○ | | | | | | ⊙ | ○ | ○ |
| MULTI CH IN | ○ | ⊙ | ⊙ | ⊙ | ⊙*3 | | ⊙ | ○ | ○ |
| DOLBY PRO LOGIC IIz | ○ | ⊙ | ⊙ | ⊙ | ⊙ | | ⊙ | ○ | ○ |
| DOLBY PRO LOGIC IIx | ○ | ⊙ | ⊙ | ⊙ | | | ⊙ | ○ | ○ |
| DOLBY PRO LOGIC II | ○ | ⊙ | ⊙ | | | | ⊙ | ○ | ○ |
| DOLBY PRO LOGIC IIx A-DSX | ○ | ⊙ | ⊙ | ⊙ | ⊙*4 | ⊙*5 | ⊙ | ○ | ○ |
| DOLBY PRO LOGIC II A-DSX | ○ | ⊙ | ⊙ | | ⊙*4 | ⊙*5 | ⊙ | ○ | ○ |
| DTS NEO:X | ○ | ⊙ | ⊙ | ⊙ | ⊙ | ⊙ | ⊙ | ○ | ○ |
| Audyssey DSX® | ○ | ⊙ | ⊙ | ⊙ | ⊙*4 | ⊙*5 | ⊙ | ○ | ○ |
| DOLBY DIGITAL | ○ | ⊙ | ⊙ | ⊙ | ⊙*3 | | ⊙ | ○ | ○ |
| DOLBY DIGITAL Plus | ○ | ⊙ | ⊙ | ⊙*2 | ⊙*2 | ⊙*2 | ⊙ | ○ | ○ |
| DOLBY TrueHD | ○ | ⊙ | ⊙ | ⊙*2 | ⊙*2 | ⊙*2 | ⊙ | ○ | ○ |
| DTS SURROUND | ○ | ⊙ | ⊙ | ⊙ | ⊙*3 | | ⊙ | ○ | ○ |
| DTS 96/24 | ○ | ⊙ | ⊙ | ⊙ | ⊙*3 | | ⊙ | ○ | ○ |
| DTS-HD | ○ | ⊙ | ⊙ | ⊙*2 | ⊙*2 | ⊙*2 | ⊙ | ○ | ○ |
| DTS Express | ○ | ⊙ | ⊙ | ⊙ | ⊙*3 | | ⊙ | ○ | ○ |
| MULTI CH STEREO | ○ | ⊙ | ⊙ | ⊙ | ⊙ | ⊙ | ⊙ | ○ | ○ |
| VIRTUAL | ○ | | | | | | ⊙*6 | ○ | ○ |

- *1 During playback in PURE DIRECT mode, the surround parameters are the same as in DIRECT mode.
- *2 A signal for each channel contained in an input signal is output as audio.
- *3 Audio is output from the front height speaker when the set sound mode name contains "+PLIIz". For information on how to check the sound mode, see [page 86](#).
- *4 Audio is output from the front height speaker when "Audyssey DSX®" ([page 125](#)) in the menu is set to "Wides/Heights" or "Heights".
- *5 Audio is output from the front wide speaker when "Audyssey DSX®" ([page 125](#)) in the menu is set to "Wides/Heights" or "Wides".
- *6 Only when "Subwoofer Mode" is set to "LFE+Main" ([page 140](#)), sound is output from the subwoofer.

| Sound Mode (page 86) | Surround Parameter (page 120) | | | | | | | | | |
|--------------------------------------|---|---|--|--|--|--|-------------------------------------|--------------------------------------|---|--|
| | Home Theater EQ (page 120) | Loudness Management *9 (page 120) | Dynamic Compression *10 (page 120) | Bass Sync *11 (page 120) | Low Frequency Effects *11 (page 121) | Height Gain *12 (page 121) | PRO LOGIC II/IIx Music mode only | | | NEO:X mode only (page 121) |
| | | | | | | | Panorama (page 121) | Dimension (page 121) | Center Width (page 121) | |
| DIRECT/PURE DIRECT (2 channel)*1 | | <input type="radio"/> | <input type="radio"/> | | | | | | | |
| DIRECT/PURE DIRECT (Multi-channel)*1 | | <input type="radio"/> | <input type="radio"/> | | <input type="radio"/> | | | | | |
| DSD DIRECT (2 channel)*1 | | | | | | | | | | |
| DSD DIRECT (Multi-channel)*1 | | | | | <input type="radio"/> | | | | | |
| 7.1CH IN | | | | | <input type="radio"/> | | | | | |
| STEREO | | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | | | | | |
| MULTI CH IN | <input type="radio"/> *7 | | | <input type="radio"/> | <input type="radio"/> | | | | | |
| DOLBY PRO LOGIC IIz | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | | | <input type="radio"/> | | | | |
| DOLBY PRO LOGIC IIx | <input type="radio"/> *8 | <input type="radio"/> | <input type="radio"/> | | | | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | |
| DOLBY PRO LOGIC II | <input type="radio"/> *8 | <input type="radio"/> | <input type="radio"/> | | | | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | |
| DOLBY PRO LOGIC IIx A-DSX | <input type="radio"/> *8 | <input type="radio"/> | <input type="radio"/> | | | | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | |
| DOLBY PRO LOGIC II A-DSX | <input type="radio"/> *8 | <input type="radio"/> | <input type="radio"/> | | | | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | |
| DTS NEO:X | <input type="radio"/> *8 | <input type="radio"/> | <input type="radio"/> | | | | | | <input type="radio"/> | |
| Audyssey DSX® | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | | | | | |
| DOLBY DIGITAL | <input type="radio"/> *7 | | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | | | | |
| DOLBY DIGITAL Plus | <input type="radio"/> *7 | | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | | | | |
| DOLBY TrueHD | <input type="radio"/> *7 | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | | | | |
| DTS SURROUND | <input type="radio"/> *7 | | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | | | | |
| DTS 96/24 | <input type="radio"/> *7 | | | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | | | | |
| DTS-HD | <input type="radio"/> *7 | | | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | | | | |
| DTS Express | <input type="radio"/> *7 | | | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | | | | |
| MULTI CH STEREO | | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | | | | | |
| VIRTUAL | | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | | | | | |

- *1 During playback in PURE DIRECT mode, the surround parameters are the same as in DIRECT mode.
- *7 This setting is unavailable when the set sound mode name contains "+PLII Music" or "+NEO:X Music". For information on how to check the sound mode, see [page 86](#).
- *8 This setting is possible when the sound mode is "Movie" mode.
- *9 This item can be selected when a Dolby TrueHD signal is played.
- *10 This item can be selected when a Dolby Digital or DTS signal is played.
- *11 This item can be selected when a Dolby Digital or DTS signal or DVD-Audio is played.
- *12 This setting is available when the set sound mode name contains "+PLIIz". For information on how to check the sound mode, see [page 86](#).

| Sound Mode (page 86) | Tone *13 (page 122) | Audyssey (page 123) | | | | | M-DAX *15 (page 122) |
|--------------------------------------|---|---|---|---|--|---|--|
| | | MultEQ® XT 32 (page 123) | Dynamic EQ *14 (page 124) | Dynamic Volume *14 (page 124) | Audyssey LFC™ *14 (page 124) | Audyssey DSX® (page 125) | |
| DIRECT/PURE DIRECT (2 channel)*1 | | | | | | | |
| DIRECT/PURE DIRECT (Multi-channel)*1 | | | | | | | |
| DSD DIRECT (2 channel)*1 | | | | | | | |
| DSD DIRECT (Multi-channel)*1 | | | | | | | |
| 7.1CH IN | | | | | | | |
| STEREO | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> |
| MULTI CH IN | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> |
| DOLBY PRO LOGIC IIz | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> |
| DOLBY PRO LOGIC IIx | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> |
| DOLBY PRO LOGIC II | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> |
| DOLBY PRO LOGIC IIx A-DSX | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> |
| DOLBY PRO LOGIC II A-DSX | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> |
| DTS NEO:X | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> |
| Audyssey DSX® | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> |
| DOLBY DIGITAL | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> |
| DOLBY DIGITAL Plus | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> |
| DOLBY TrueHD | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> |
| DTS SURROUND | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> |
| DTS 96/24 | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> |
| DTS-HD | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> |
| DTS Express | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> |
| MULTI CH STEREO | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> |
| VIRTUAL | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> |

- *1 During playback in PURE DIRECT mode, the surround parameters are the same as in DIRECT mode.
- *13 This item cannot be set when "Dynamic EQ" [\(page 124\)](#) is set to "On".
- *14 This item cannot be set when "MultEQ® XT 32" [\(page 123\)](#) is set to "Off" or "Graphic EQ".
- *15 This item can be set when the input signal is analog, PCM 48 kHz or 44.1 kHz.

Types of input signals, and corresponding sound modes

This table shows the input signal that can be played in each sound mode. Check the audio signal of the input source then select the sound mode.

Symbols in the table

- This indicates the default sound mode.
- This indicates the selectable sound mode.

| Sound Mode (page 86) | NOTE | Input signal types and formats | | | | | | | | | | | | | | | | | |
|--------------------------|------|--------------------------------|----------------|-----------|---------------------|------------------------------|-------------|--------------------------|-------------------------|-------------|-----------|--------------|--------------------|------------------------------|---------------------------------|-----------------------|---------------------|----------------|-----------|
| | | ANALOG | PCM | | DTS-HD | | DTS | | | | | DOLBY | | DOLBY DIGITAL | | | | Super Audio CD | |
| | | | PCM (multi ch) | PCM (2ch) | DTS-HD Master Audio | DTS-HD High Resolution Audio | DTS EXPRESS | DTS ES DSCRT (With Flag) | DTS ES MTRX (With Flag) | DTS (5.1ch) | DTS 96/24 | DOLBY TrueHD | DOLBY DIGITAL Plus | DOLBY DIGITAL EX (With Flag) | DOLBY DIGITAL EX (With no Flag) | DOLBY DIGITAL (5.1ch) | DOLBY DIGITAL (2ch) | DSD (multi ch) | DSD (2ch) |
| DTS SURROUND | | | | | | | | | | | | | | | | | | | |
| DTS-HD MSTR | *1 | | | ● | | | | | | | | | | | | | | | |
| DTS-HD HI RES | *1 | | | | ● | | | | | | | | | | | | | | |
| DTS ES DSCRT6.1 | *2 | | | | | | ● | | | | | | | | | | | | |
| DTS ES MTRX6.1 | *2 | | | | | | | ● | | | | | | | | | | | |
| DTS SURROUND | *1 | | | | | | ○ | ○ | ● | | | | | | | | | | |
| DTS 96/24 | *1 | | | | | | | | | ● | | | | | | | | | |
| DTS (-HD) + PLIIx Movie | *3 | | | ○ | ○ | ○ | | | | ○ | ○ | | | | | | | | |
| DTS (-HD) + PLIIx Music | *2 | | | ○ | ○ | ○ | | | | ○ | ○ | | | | | | | | |
| DTS (-HD) + PLIIz | *4 | | | ○ | ○ | ○ | | ○ | ○ | ○ | ○ | | | | | | | | |
| DTS EXPRESS | *1 | | | | | | ● | | | | | | | | | | | | |
| DTS (-HD) + NEO:X Cinema | | | | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | | | | | | | | |
| DTS (-HD) + NEO:X Music | | | | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | | | | | | | | |
| DTS (-HD) + NEO:X Game | | | | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | | | | | | | | |
| DTS NEO:X Cinema | *1 | ○ | | ○ | | | | | | | | | | | | | | ○ | |
| DTS NEO:X Music | *1 | ○ | | ○ | | | | | | | | | | | | | | ○ | |
| DTS NEO:X Game | *1 | ○ | | ○ | | | | | | | | | | | | | | ○ | |
| Audyssey DSX® | | | | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | | | | | | | | |

- *1 If "Audyssey DSX®" (page 125) is set to "Wides/Heights", "Heights" or "Wides", the Audyssey DSX® effect is added to the sound mode marked with *1.
- *2 If "Speaker Config." - "Surr. Back" (page 138) is set to "None", this sound mode cannot be selected.
- *3 If "Speaker Config." - "Surr. Back" (page 138) is set to "1spkr" or "None", this sound mode cannot be selected.
- *4 If "Speaker Config." - "Front Height" (page 138) is set to "None", this sound mode cannot be selected.

| Sound Mode (page 86) | NOTE | Input signal types and formats | | | | | | | | | | | | | | | | | |
|------------------------------------|------|--------------------------------|----------------|-----------|---------------------|------------------------------|-------------|--------------------------|-------------------------|-------------|-----------|--------------|--------------------|------------------------------|---------------------------------|-----------------------|---------------------|----------------|-----------|
| | | ANALOG | PCM | | DTS-HD | | DTS | | | | | DOLBY | | DOLBY DIGITAL | | | | Super Audio CD | |
| | | | PCM (multi ch) | PCM (2ch) | DTS-HD Master Audio | DTS-HD High Resolution Audio | DTS EXPRESS | DTS ES DSCRT (With Flag) | DTS ES MTRX (With Flag) | DTS (5.1ch) | DTS 96/24 | DOLBY TrueHD | DOLBY DIGITAL Plus | DOLBY DIGITAL EX (With Flag) | DOLBY DIGITAL EX (With no Flag) | DOLBY DIGITAL (5.1ch) | DOLBY DIGITAL (2ch) | DSD (multi ch) | DSD (2ch) |
| DOLBY SURROUND | | | | | | | | | | | | | | | | | | | |
| DOLBY TrueHD | *1 | | | | | | | | | | | | ● | | | | | | |
| DOLBY DIGITAL+ | *1 | | | | | | | | | | | | ● | | | | | | |
| DOLBY DIGITAL EX | *2 | | | | | | | | | | | | | | ○ | ○ | ○ | | |
| DOLBY (D+) (HD) +EX | *2 | | | | | | | | | | | | ○ | ○ | | | | | |
| DOLBY DIGITAL | *1 | | | | | | | | | | | | | | ● | ● | ● | | |
| DOLBY (D) (D+) (HD) + PLIIx Movie | *3 | | | | | | | | | | | | ○ | ○ | ○ | ○ | ○ | | |
| DOLBY (D) (D+) (HD) + PLIIx Music | *2 | | | | | | | | | | | | ○ | ○ | ○ | ○ | ○ | | |
| DOLBY (D) (D+) (HD) + PLIIz | *4 | | | | | | | | | | | | ○ | ○ | ○ | ○ | ○ | | |
| DOLBY (D) (D+) (HD) + NEO:X Cinema | | | | | | | | | | | | | ○ | ○ | ○ | ○ | ○ | | |
| DOLBY (D) (D+) (HD) + NEO:X Music | | | | | | | | | | | | | ○ | ○ | ○ | ○ | ○ | | |
| DOLBY (D) (D+) (HD) + NEO:X Game | | | | | | | | | | | | | ○ | ○ | ○ | ○ | ○ | | |
| DOLBY PRO LOGIC IIx Movie | *2 | ○ | | | | | | | | | | | | | | | | ○ | ○ |
| DOLBY PRO LOGIC IIx Music | *2 | ○ | | | | | | | | | | | | | | | | ○ | ○ |
| DOLBY PRO LOGIC IIx Game | *2 | ○ | | | | | | | | | | | | | | | | ○ | ○ |
| DOLBY PRO LOGIC IIx Movie A-DSX | | ○ | | | | | | | | | | | | | | | | ○ | ○ |
| DOLBY PRO LOGIC IIx Music A-DSX | | ○ | | | | | | | | | | | | | | | | ○ | ○ |
| DOLBY PRO LOGIC IIx Game A-DSX | | ○ | | | | | | | | | | | | | | | | ○ | ○ |
| DOLBY PRO LOGIC IIz | *4 | ○ | | | | | | | | | | | | | | | | ○ | ○ |
| DOLBY PRO LOGIC II Movie | *1 | ○ | | | | | | | | | | | | | | | | ○ | ○ |
| DOLBY PRO LOGIC II Music | *1 | ○ | | | | | | | | | | | | | | | | ○ | ○ |
| DOLBY PRO LOGIC II Game | *1 | ○ | | | | | | | | | | | | | | | | ○ | ○ |
| DOLBY PRO LOGIC II Movie A-DSX | | ○ | | | | | | | | | | | | | | | | ○ | ○ |
| DOLBY PRO LOGIC II Music A-DSX | | ○ | | | | | | | | | | | | | | | | ○ | ○ |
| DOLBY PRO LOGIC II Game A-DSX | | ○ | | | | | | | | | | | | | | | | ○ | ○ |
| Audyssey DSX® | | | | | | | | | | | | | ○ | ○ | ○ | ○ | ○ | | |

- *1 If "Audyssey DSX®" (page 125) is set to "Wides/Heights", "Heights" or "Wides", the Audyssey DSX® effect is added to the sound mode marked with *1.
- *2 If "Speaker Config." - "Surr. Back" (page 138) is set to "None", this sound mode cannot be selected.
- *3 If "Speaker Config." - "Surr. Back" (page 138) is set to "1spkr" or "None", this sound mode cannot be selected.
- *4 If "Speaker Config." - "Front Height" (page 138) is set to "None", this sound mode cannot be selected.

| Sound Mode (🔗 page 86) | NOTE | Input signal types and formats | | | | | | | | | | | | | | | | | |
|----------------------------|------|--------------------------------|----------------|-----------|---------------------|------------------------------|-------------|--------------------------|-------------------------|-------------|-----------|--------------|--------------------|------------------------------|---------------------------------|-----------------------|---------------------|----------------|-----------|
| | | ANALOG | PCM | | DTS-HD | | DTS | | | | | DOLBY | | DOLBY DIGITAL | | | | Super Audio CD | |
| | | | PCM (multi ch) | PCM (2ch) | DTS-HD Master Audio | DTS-HD High Resolution Audio | DTS EXPRESS | DTS ES DSCRT (With Flag) | DTS ES MTRX (With Flag) | DTS (5.1ch) | DTS 96/24 | DOLBY TrueHD | DOLBY DIGITAL Plus | DOLBY DIGITAL EX (With Flag) | DOLBY DIGITAL EX (With no Flag) | DOLBY DIGITAL (5.1ch) | DOLBY DIGITAL (2ch) | DSD (multi ch) | DSD (2ch) |
| MULTI CH IN | | | | | | | | | | | | | | | | | | | |
| MULTI CH IN | *1 | | ● | | | | | | | | | | | | | | | ○ | |
| MULTI CH IN + PLIIx Movie | *3 | | ○ | | | | | | | | | | | | | | | ○ | |
| MULTI CH IN + PLIIx Music | *2 | | ○ | | | | | | | | | | | | | | | ○ | |
| MULTI CH IN + PLIIz | *4 | | ○ | | | | | | | | | | | | | | | ○ | |
| MULTI CH IN + NEO:X Cinema | | | ○ | | | | | | | | | | | | | | | | |
| MULTI CH IN + NEO:X Music | | | ○ | | | | | | | | | | | | | | | | |
| MULTI CH IN + NEO:X Game | | | ○ | | | | | | | | | | | | | | | | |
| MULTI CH IN + Dolby EX | *2 | | ○ | | | | | | | | | | | | | | | ○ | |
| MULTI CH IN 7.1 | *2 | | ● (7.1) | | | | | | | | | | | | | | | | |
| Audyssey DSX® | | | ○ | | | | | | | | | | | | | | | ○ | |
| DIRECT | | | | | | | | | | | | | | | | | | | |
| DIRECT | | ○ | ○ | ○*5 | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ |
| PURE DIRECT | | | | | | | | | | | | | | | | | | | |
| PURE DIRECT | | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ |
| Original sound mode | | | | | | | | | | | | | | | | | | | |
| MULTI CH STEREO | | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ |
| VIRTUAL | | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ |
| STEREO | | | | | | | | | | | | | | | | | | | |
| STEREO | | ● | ○ | ● | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ |

- *1 If "Audyssey DSX®" (🔗 page 125) is set to "Wides/Heights", "Heights" or "Wides", the Audyssey DSX® effect is added to the sound mode marked with *1.
- *2 If "Speaker Config." - "Surr. Back" (🔗 page 138) is set to "None", this sound mode cannot be selected.
- *3 If "Speaker Config." - "Surr. Back" (🔗 page 138) is set to "1spkr" or "None", this sound mode cannot be selected.
- *4 If "Speaker Config." - "Front Height" (🔗 page 138) is set to "None", this sound mode cannot be selected.
- *5 During AirPlay playback, the sound mode becomes "DIRECT" (Default).

Relationship between video signals and monitor output

| MAIN ZONE MONITOR OUT | | | | | | | | | | |
|-----------------------|-----------------|-----------------|-------|------------------|---------------|---------------|----------------------------|---------------|---------------|---------------|
| Video Conversion | Input connector | | | Output connector | | | Menu displayed | | | |
| | HDMI | COMPONENT | VIDEO | HDMI | COMPONENT | VIDEO | HDMI | COMPONENT | VIDEO | |
| On | × | × | × | × | × | × | Only the menu is displayed | | | |
| On | × | × | ○ | ○ <VIDEO> | ○ <VIDEO> | ○ <VIDEO> | ○ (VIDEO) | ○ (VIDEO) | ○ (VIDEO) | |
| On | × | ○ (1080p) | × | ○ <COMPONENT> | ○ <COMPONENT> | × | ○ (COMPONENT) | × | × | |
| On | × | ○ (480p – 720p) | × | | | ○ <COMPONENT> | | ○ (COMPONENT) | ○ (COMPONENT) | ○ (COMPONENT) |
| On | × | ○ (480i/576i) | × | | | ○ <VIDEO> | | × | × | × |
| On | × | ○ (1080p) | ○ | | | ○ <VIDEO> | | × | ○ (VIDEO) | ○ (VIDEO) |
| On*1 | × | ○ (1080p) | ○ | | | × | | ○ (COMPONENT) | ○ (COMPONENT) | × |
| On | × | ○ (480p – 720p) | ○ | | | ○ <COMPONENT> | | ○ <COMPONENT> | ○ (COMPONENT) | ○ (COMPONENT) |
| On | × | ○ (480i/576i) | ○ | ○ <HDMI> | × | × | ○ (HDMI) | × | × | |
| On | ○ | × | ○ | | | ○ <VIDEO> | | × | × | × |
| On | ○ | ○ | × | | | × | | × | × | × |
| On | ○ | ○ | ○ | | | ○ <COMPONENT> | | × | × | × |
| On | ○ | ○ | ○ | | | × | | × | × | × |
| On | ○ | ○ | ○ | | | ○ <COMPONENT> | | × | × | × |
| On*3 | × | × | ○ | ○ <VIDEO> | × | ○ <VIDEO> | ○ (VIDEO) | × | × | |
| On*3 | × | ○ (1080p) | × | ○ <COMPONENT> | ○ <COMPONENT> | × | ○ (COMPONENT) | × | × | |
| On*3 | × | ○ (480p – 720p) | × | | | × | | | | × |
| On*3 | × | ○ (480i/576i) | × | | | × | | | | × |
| On*3 | × | ○ (1080p) | ○ | | | ○ <VIDEO> | | | | × |
| On*3 | × | ○ (480p – 720p) | ○ | | | × | | | | × |
| On*3 | × | ○ (480i/576i) | ○ | | | × | | | | × |
| Off | × | × | × | × | × | × | Only the menu is displayed | | | |
| Off | × | × | ○ | | | ○ <VIDEO> | | | | × |
| Off | × | ○ | × | | | × | | | | × |
| Off | × | ○ | ○ | | | ○ <COMPONENT> | | | | ○ <VIDEO> |
| Off | ○ | × | × | | | × | | | | × |
| Off | ○ | × | ○ | | | × | | | | ○ <VIDEO> |
| Off | ○ | ○ | × | ○ <HDMI> | × | × | | | | × |
| Off | ○ | ○ | × | | | × | | | | × |
| Off | ○ | ○ | ○ | | | ○ <COMPONENT> | | | | × |
| Off | ○ | ○ | ○ | | | × | | | | × |
| Off | ○ | ○ | ○ | | | ○ <VIDEO> | | | | ○ <VIDEO> |
| Off | ○ | ○ | ○ | | | ○ <VIDEO> | | | | ○ <VIDEO> |

○ : Video signal input present

×

*1 When no HDMI monitor is connected or the HDMI monitor's power is not on.

*2 Only the menu is displayed when no HDMI monitor is connected or the HDMI monitor's power is not on.

*3 When "Resolution" (page 129) is set to "4K" for outputting analog video input signals from the HDMI connector.

○ <>: The input signal between the < > marks is output.

×

: No video signal output

○ () : Superimposed on the picture indicated in ().

×

() : Only the picture in () is output.

×

: Neither the picture nor the menu is output.

| ZONE MONITOR OUT | | | | | |
|------------------|-----------|-------|------------------|-------------------|---------------|
| Input connector | | | Output connector | | |
| HDMI | COMPONENT | VIDEO | HDMI ZONE4 | COMPONENT (ZONE2) | VIDEO (ZONE2) |
| × | × | × | × | × | × |
| × | × | ○ | | ○ <VIDEO> | |
| × | ○ | × | | × | |
| × | ○ | ○ | | ○ <VIDEO> | |
| ○ | × | × | ○ <HDMI> | × | × |
| ○ | × | ○ | | ○ <VIDEO> | |
| ○ | ○ | × | | × | |
| ○ | ○ | ○ | | ○ <VIDEO> | |
| | | | | ○ <COMPONENT> | × |
| | | | | ○ <COMPONENT> | ○ <VIDEO> |

○ : Video signal input present
 × : No video signal input

○ <>: The input signal between the < > marks is output.
 × : No video signal output



The main zone video conversion function is compatible with the following formats: NTSC, PAL, SECAM, NTSC4.43, PAL-N, PAL-M and PAL-60.

NOTE

- The status display screen cannot be displayed at a computer's resolution (e.g. VGA) or while certain 3D video contents is being played.
- When the menu is operated on a computer's resolution (e.g. VGA) or during playback of certain 3D video content, the playback image switches to the menu screen image.

Video signal resolution conversion table

When “Video Conversion” (page 129) is set to “On”, “i/p Scaler” (page 129) is set to “Analog”, “Analog & HDMI” or “HDMI” are set, the resolution of the input video signal can be converted to a different resolution for output (page 7 “Converting input video signals for output (Video conversion function)”).

The relationship between the resolution of the convertible video signal and HDMI output resolution is shown in the table below.

| | Input resolution | Output resolution | HDMI Output | | | | | | |
|-----------------------|------------------|-------------------|--------------|-----------|-------|------|-------|------------|-------|
| | | | 480i/576i *1 | 480p/576p | 1080i | 720p | 1080p | 1080p 24Hz | 4K *2 |
| Video input | 480i/576i | | ○ | ○ | ○ | ○ | ○ | ○ | ○ |
| Component video input | 480i/576i | | ○ | ○ | ○ | ○ | ○ | ○ | ○*5 |
| | 480p/576p | | - | ○ | ○ | ○ | ○ | ○ | ○*5 |
| | 1080i | | - | - | ○ | ○ | ○ | ○ | ○*5 |
| | 720p | | - | - | ○ | ○ | ○ | ○ | ○*5 |
| | 1080p | | - | - | - | - | ○ | ○ | ○*5 |
| HDMI input | 480i/576i | | ○ | ○ | ○ | ○ | ○ | ○ | ○ |
| | 480p/576p | | - | ○ | ○ | ○ | ○ | ○ | ○ |
| | 1080i | | - | - | ○ | ○ | ○ | ○ | ○ |
| | 720p | | - | - | ○ | ○ | ○ | ○ | ○ |
| | 1080p 24Hz | | - | - | - | - | ○*3 | ○*4 | ○ |
| | 1080p | | - | - | - | - | ○ | ○ | ○ |
| | 4K | | - | - | - | - | - | - | ○*6 |

○ The resolution set in “Resolution” (page 130) in the menu is output.

- Output at the same resolution as the input video signal resolution.

*1 Only output when “i/p Scaler” in the menu is set to “Off”.

*2 Output at a resolution of 3840 x 2160 (24/25/30Hz).

*3 The resolution set in “Resolution” (page 130) in the menu is set to “Auto”, and a television that does not support 1080p 24Hz video signals is connected.

*4 The resolution set in “Resolution” (page 130) in the menu is set to “Auto”, and a television that supports 1080p 24Hz video signals is connected.

*5 While signals are being upscaled to 4K, the menu screen is only displayed on a TV that is connected to this unit via HDMI.

*6 Output at the same resolution as the input video signal resolution.

NOTE

- Component video and video output are output at the same resolution as the input video signal resolution.
- The 4K, 3D, Computer resolution, “x.v.Color”, sYCC601 color, Adobe RGB color or Adobe YCC601 color input to HDMI is output at the same resolution as the input video signal.
- When “Video Mode” in the menu is set to “Game” or “Auto” and game contents are played, the same resolution as the input video signal is output.
- When “Resolution” in the menu is set to “Auto”, the number of pixels in the television panel connected to the HDMI output connector is automatically detected, and the optimum resolution is output according to the table above.
- If 1080p 24Hz signals input from the HDMI terminal are converted into 1080p 60Hz/1080p 50Hz for output, they are output according to the specified “Format” (page 131) setting in the menu:
 - “NTSC” – Output as 1080p 60Hz.
 - “PAL” – Output as 1080p 50Hz.
- You can not convert 60Hz into 50Hz or vice versa.
- You can not convert 50Hz into 24Hz.
- This item does not support the HDMI ZONE4 function.

Explanation of terms

A

A2DP

A2DP is one profile of Bluetooth defined for in-car devices or AV devices that use wireless communication instead of a cable.

Adobe RGB color, Adobe YCC601 color

The color space defined by Adobe Systems Inc. Because it is a wider color space than RGB, it can produce more vivid and natural images.

AirPlay

AirPlay sends (plays) contents recorded in iTunes or on an iPhone/iPod touch/iPad to a compatible device via the network.

ALAC (Apple Lossless Audio Codec)

This is a codec for lossless audio compression method developed by Apple Inc. This codec can be played back on iTunes, iPod or iPhone. Data compressed to approximately 60 – 70 % can be decompressed to exactly the same original data.

App Store

App Store is a site that sells application software for such devices as the iPhone or iPod Touch, and is operated by Apple Inc.

Audyssey Dynamic EQ®

Dynamic EQ solves the problem of deteriorating sound quality as volume is decreased by taking into account human perception and room acoustics. Audyssey Dynamic EQ® works in tandem with Audyssey MultEQ® XT 32 to provide well-balanced sound for every listener at any volume level.

Audyssey Dynamic Surround Expansion (A-DSX)

Audyssey DSX® is a scalable system that adds new speakers to improve surround impression. Starting with a 5.1 system Audyssey DSX® first adds Wide channels for the biggest impact on envelopment. Research in human hearing has proven that information from the Wide channels is much more critical in the presentation of a realistic soundstage than the Back Surround channels found in traditional 7.1 systems. Audyssey DSX® then creates a pair of Height channels to reproduce the next most important acoustical and perceptual cues. In addition to these new Wide and Height channels, Audyssey DSX® applies Surround Envelopment Processing to enhance the blend between the front and surround channels.

Audyssey Dynamic Volume®

Dynamic Volume solves the problem of large variations in volume level between television programs, commercials, and between the soft and loud passages of movies. Audyssey Dynamic EQ® is integrated into Dynamic Volume so that as the playback volume is adjusted automatically, the perceived bass response, tonal balance, surround impression, and dialog clarity remain the same.

Audyssey LFC™ (Low Frequency Containment)

Audyssey LFC™ solves the problem of low frequency sounds disturbing people in neighboring rooms or apartments. Audyssey researchers found the range of frequencies that most readily penetrate wood and cement construction typical of homes and apartments and then created a technology to contain them. Audyssey LFC™ dynamically monitors the audio content and removes the low frequencies able to pass through walls, floors and ceilings. Audyssey LFC™ then applies psychoacoustic processing to restore the perception of low bass for listeners in the room. The result is great sound that no longer disturbs the neighbors.

Audyssey MultEQ® XT 32

MultEQ® XT 32 is a room equalization solution that calibrates any audio system so that it can achieve optimum performance for every listener in a large listening area. Based on several room measurements, MultEQ® XT 32 calculates an equalization solution that corrects for both time and frequency response problems in the listening area and also performs a fully automated surround system setup.

Auto Lip Sync

If you connect the unit to a TV that supports the Auto Lip Sync function, it can automatically correct delay between the audio and video.

B

Bass Sync

Audio sources such as BD and DVD inherently have time delay between the bass components of the satellite channel and the LFE channel. This function adjusts such a delay for reproducing (replaying) richer bass sound during playback. This function is by default set to 0 msec. Since the delay varies according to the title, play back the audio source and adjust to the most effective value for playback. For some audio sources that are played back, this function may have little effect.

Bluetooth

Bluetooth is a short-distance wireless communication technology used for connecting handheld devices several meters apart. This enables notebook computers, PDA s, mobile phones, etc. to connect without a cable for transmitting audio and data.

D

Deep Color

An imaging technology supported by HDMI. Unlike RGB, which uses 8 bits (256 shades) per color, it can use 10 bits (1024 shades), 12 bits (4096 shades), or 16 bits (65536 shades) to produce colors in higher definition.

Both devices linked via HDMI must support Deep Color.

DLNA

DLNA and DLNA CERTIFIED are trademarks and/or service marks of Digital Living Network Alliance. Some contents may not be compatible with other DLNA CERTIFIED® products.

Dolby Digital

Dolby Digital is a multi-channel digital signal format developed by Dolby Laboratories.

A total of 5.1 channels are played: 3 front channels ("FL", "FR" and "C"), 2 surround channels ("SL" and "SR") and the "LFE" channel for low frequencies.

Because of this, there is no crosstalk between channels and a realistic sound field with a "three-dimensional" feeling (sense of distance, movement and positioning) is achieved.

A realistic, powerful sense of presence is achieved when playing movie sources in AV rooms as well.

Dolby Digital EX

Dolby Digital EX is a 6.1-channel surround format proposed by Dolby Laboratories that allows users to enjoy in their homes the "DOLBY DIGITAL SURROUND EX" audio format jointly developed by Dolby Laboratories and Lucas Films.

The 6.1 channels of sound, including surround back channels, provide improved sound positioning and expression of space.

Dolby Digital Plus

Dolby Digital Plus is an improved Dolby Digital signal format that is compatible with up to 7.1 channels of discrete digital sound and also improves sound quality thanks to extra data bit rate performance. It is upwardly compatible with conventional Dolby Digital, so it offers greater flexibility in response to the source signal and the conditions of the playback device.

Dolby Pro Logic II

Dolby Pro Logic II is a matrix decoding technology developed by Dolby Laboratories.

Regular music such as that on CDs is encoded into 5 channels to achieve an excellent surround effect. The surround channel signals are converted into stereo and full band signals (with a frequency response of 20 Hz to 20 kHz or greater) to create a "three-dimensional" sound image offering a rich sense of presence for all stereo sources.

Dolby Pro Logic IIx

Dolby Pro Logic IIx is a further improved version of the Dolby Pro Logic II matrix decoding technology. Audio signals recorded in 2 channels are decoded to achieve a natural sound with up to 7.1 channels. There are three modes: "Music" suited for playing music, "Movie" suited for playing movies, and "Game" which is optimized for playing games.

Dolby Pro Logic IIz

Dolby Pro Logic IIz introduces a new dimension to Home Entertainment through the addition of a pair of front height channels. Compatible with stereo, 5.1-channel and 7.1-channel content, Dolby Pro Logic IIz provides enhanced spaciousness, depth and dimension to movies, concert video and video game playback while maintaining the full integrity of the source mix.

Dolby Pro Logic IIz identifies and decodes spatial cues that occur naturally in all content, directing this information to the front height channels, complementing the performance of left and right surround sound speakers. Content that is encoded with Dolby Pro Logic IIz height channel information can be even more revealing, with perceptually discrete height channel information bringing an exciting new dimension to home entertainment.

Dolby Pro Logic IIz, with front height channels is also an ideal alternative for households that cannot support the placement of back surround speakers of a typical 7.1-channel system but may have bookshelf space available to support the addition of height speakers.

Dolby TrueHD

Dolby TrueHD is a high definition audio technology developed by Dolby Laboratories, using lossless coding technology to faithfully reproduce the sound of the studio master.

This format provides the facility to support up to 8 audio channels with a sampling frequency of 96 kHz/24 bit resolution and up to 6 audio channels with a sampling frequency of 192 kHz/24 bit resolution. Dolby TrueHD is adopted for applications that put very high importance on sound quality.

Downmix

This function converts the number of channels of surround audio to less number of channels and plays back.

DTS

This is an abbreviation of Digital Theater System, which is a digital audio system developed by DTS. When playing back audio by connecting this system with a device such as DTS amplifier, accurate sound field position and realistic sound effect as if you are in a movie theater can be obtained.

DTS 96/24

DTS 96/24 is a digital audio format enabling high sound quality playback in 5.1 channels with a sampling frequency of 96 kHz and 24 bit quantization on DVD-Video.

DTS Digital Surround

DTS Digital Surround is the standard digital surround format of DTS, Inc., compatible with a sampling frequency of 44.1 or 48 kHz and up to 5.1 channels of digital discrete surround sound.

DTS-ES™ Discrete 6.1

DTS-ES™ Discrete 6.1 is a 6.1-channel discrete digital audio format adding a surround back (SB) channel to the DTS digital surround sound.

Decoding of conventional 5.1-channel audio signals is also possible according to the decoder.

DTS-ES™ Matrix 6.1

DTS-ES™ Matrix 6.1 is a 6.1-channel discrete digital audio format inserting a surround back (SB) channel to the DTS digital surround sound through matrix encoding. Decoding of conventional 5.1-channel audio signals is also possible according to the decoder.

DTS Express

DTS Express is an audio format supporting low bit rates (max. 5.1 channels, 24 to 256 kbps).

DTS-HD

This audio technology provides higher sound quality and enhanced functionality than the conventional DTS and is adopted as an optional audio for Blu-ray Disc. This technology supports multi-channel, high data transfer speed, high sampling frequency, and lossless audio playback. Maximum 7.1-channels are supported in Blu-ray Disc.

DTS-HD High Resolution Audio

DTS-HD High Resolution Audio is an improved version of the conventional DTS, DTS-ES and DTS 96/24 signals formats, compatible with sampling frequencies of 96 or 48 kHz and up to 7.1 channels of discrete digital sound. High data bit rate performance provides high quality sound. This format is fully compatible with conventional products, including conventional DTS digital surround 5.1-channel data.

DTS-HD Master Audio

DTS-HD Master Audio is a lossless audio format created by Digital Theater System (DTS). This format provides the facility to support up to 8 audio channels with a sampling frequency of 96 kHz/24 bit resolution and up to 6 audio channels with a sampling frequency of 192 kHz/24 bit resolution. It is fully compatible with conventional products, including conventional DTS digital surround 5.1-channel data.

DTS Neo:X

This matrix decoding technology uses the DTS NEO:X decoder to playback 2-channel source or 5.1/6.1/7.1 channel surround sources as a maximum of 11.1 channel surround sound. There are 3 modes: "Music" suited for playing music, "Cinema" suited for playing movies, and "Game" which is optimized for playing games.

Dynamic range

The difference between the maximum undistorted sound level and the minimum discernible level above the noise emitted by the device.

F**FLAC**

FLAC stands for Free lossless Audio Codec, and is a lossless free audio file format. Lossless means that the audio is compressed without any loss in quality. The FLAC license is as shown below.

Copyright (C) 2000,2001,2002,2003,2004,2005,2006,2007,2008,2009 Josh Coalson

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
 - Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
 - Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.
- THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

H**HDCP**

When transmitting digital signals between devices, this copyright protection technology encrypts the signals to prevent content from being copied without authorization.

HDMI

This is an abbreviation of High-Definition Multimedia Interface, which is an AV digital interface that can be connected to a TV or amplifier. Video signal and audio signal can be connected using 1 cable.

I**iTunes**

iTunes is the name of the multimedia player provided by Apple Inc. It enables management and playback of multimedia contents including music and movies. iTunes supports many main file formats including AAC, WAV, and MP3.

L**LFE**

This is an abbreviation of Low Frequency Effect, which is an output channel that emphasizes low frequency effect sound. Surround audio is intensified by outputting 20 Hz to 120 Hz deep bass.

M**MAIN ZONE**

The room where this unit is placed is called the MAIN ZONE.

MP3 (MPEG Audio Layer-3)

This is an internationally standardized audio data compression scheme, using the "MPEG-1" video compression standard. It compresses the data volume to about one eleventh its original size while maintaining sound quality equivalent to a music CD.

MPEG (Moving Picture Experts Group),**MPEG-2, MPEG-4**

These are the names for digital compression format standards used for the encoding of video and audio. Video standards include "MPEG-1 Video", "MPEG-2 Video", "MPEG-4 Visual", "MPEG-4 AVC". Audio standards include "MPEG-1 Audio", "MPEG-2 Audio", "MPEG-4 AAC".

P**Pairing**

Pairing is an operation required for settings to connect two Bluetooth devices. Pairing enables Bluetooth devices to access each other.

Progressive (sequential scanning)

This is a scanning system of video signal that displays 1 frame of video as one image. Compared to the interlace system, this system provides images with less flickering and bleeding.

S**Sampling frequency**

Sampling involves taking a reading of a sound wave (analog signal) at regular intervals and expressing the height of the wave at each reading in digitized format (producing a digital signal).

The number of readings taken in one second is called the "sampling frequency". The larger the value, the closer the reproduced sound is to the original.

sYCC601 color

Like "x.v.Color", each of these color spaces defines a palette of available colors that is larger than the traditional RGB color model.

V**vTuner**

This is a free online content server for Internet Radio. Note that usage fees are included in upgrade costs.

For inquiries about this service, visit the vTuner site below.

vTuner website: <http://www.radiomarantz.com>

This product is protected by certain intellectual property rights of Nothing Else Matters Software and BridgeCo. Use or distribution of such technology outside of this product is prohibited without a license from Nothing Else Matters Software and BridgeCo or an authorized subsidiary.

W**Windows Media DRM**

This is a copyright protection technology developed by Microsoft.

Content providers are using the digital rights management technology for Windows Media contained in this device (WM-DRM) to protect the integrity of their content (Secure Content) so that their intellectual property, including copyright, in such content is not misappropriated. This device uses WM-DRM software to play Secure Content (WM-DRM Software). If the security of the WM-DRM Software in this device has been compromised, owners of Secure Content (Secure Content Owners) may request that Microsoft revoke the WM-DRM Software's right to acquire new licenses to copy, display and/or play Secure Content. Revocation does not alter the WM-DRM Software's ability to play unprotected content. A list of revoked WM-DRM Software is sent to your device whenever you download a license for Secure Content from the Internet or from a PC. Microsoft may, in conjunction with such license, also download revocation list onto your device on behalf of Secure Content Owners.

Windows Media Player Ver.11 or later

This is a media player distributed free of charge by Microsoft Corporation.

It can play playlists created with Ver.11 or later of Windows Media Player, as well as WMA, DRM WMA, WAV, and other files.

WMA (Windows Media Audio)

This is audio compression technology developed by Microsoft Corporation.

WMA data can be encoded using Windows Media® Player Ver.7, 7.1, Windows Media® Player for Windows® XP and Windows Media® Player 9 Series.

To encode WMA files, only use applications authorized by Microsoft Corporation. If you use an unauthorized application, the file may not work properly.

X**x.v.Color**

This function lets HDTVs display colors more accurately. It enables display with natural, vivid colors. "x.v.Color" is trademark of Sony Corporation.

Z**ZONE2**

This unit can operate in a room other than the room where this unit is placed (MAIN ZONE) (ZONE2 playback). The room for ZONE2 playback is called ZONE2.

ZONE3

This unit can operate in a room other than the room where this unit is placed (MAIN ZONE) (ZONE3 playback). The room for ZONE3 playback is called ZONE3.

ZONE4

This unit can operate in a room other than the room where this unit is placed (MAIN ZONE) (ZONE4 playback). The room for ZONE4 playback is called ZONE4.

Troubleshooting

If a problem should arise, first check the following:

1. Are the connections correct?

2. Is the set being operated as described in the owner's manual?

3. Are the other devices operating properly?

If this unit does not operate properly, check the items listed in the table below. Should the problem persist, there may be a malfunction.

In this case, disconnect the power immediately and contact your store of purchase.

[General]

| Symptom | Cause/Solution | Page |
|---|--|---|
| Power does not turn on. | <ul style="list-style-type: none"> Check whether the power plug is correctly inserted into the power outlet. | 34 |
| Power automatically switches to standby mode. | <ul style="list-style-type: none"> The sleep timer is set. Turn on the power again, or change the sleep timer settings. "Auto Standby" is triggered when there is no operation for a set amount of time. To disable "Auto Standby", set "Auto Standby" on the menu to "Off". | 105, 113 147 |
| Display is off. | <ul style="list-style-type: none"> Set "Display" on the menu to something other than "Off". | 147 |
| Set does not operate properly. | <ul style="list-style-type: none"> Reset the microprocessor. | 186 |

[HDMI]

| Symptom | Cause/Solution | Page |
|--|--|--|
| No audio is output with HDMI connection. | <ul style="list-style-type: none"> Check the connection of the HDMI connectors. When outputting HDMI audio from the speakers, set "HDMI Audio Out" on the menu to "AVP". When outputting HDMI audio from a TV, set "HDMI Audio Out" on the menu to "TV". | 11, 12 127 127 |
| No video is output with HDMI connection. | <ul style="list-style-type: none"> Check the connection of the HDMI connectors. Set the input source to match the connected HDMI connector. Check whether the TV is compatible with copyright protection (HDCP). If connected to a device not compatible with HDCP, video will not be output correctly. | 11, 12 11, 12, 43 14 |

| Symptom | Cause/Solution | Page |
|---|---|-----------------------------------|
| When the following operations are performed on devices compatible with HDMI control, the same operations occur on this unit. <ul style="list-style-type: none"> Power ON/OFF Switching audio output devices Adjust volume Switch input source | <ul style="list-style-type: none"> Set "HDMI Control" in the menu to "Off". <p>Furthermore, if you do not want to link the power off operation with devices compatible with HDMI control, set "Power Off Control" in the menu to "Off".</p> | 102, 128, 129 |
| When the HDMI ZONE4 function is used and an operation is performed in MAIN ZONE, the following operations occur. <ul style="list-style-type: none"> The player is turned off or playback pauses. The input source on this unit automatically changes. | <ul style="list-style-type: none"> "HDMI Control" is set to "On" and "Control Monitor" is set to "Monitor 1" or "Monitor 2". In this case, the HDMI control function set for MAIN ZONE affects playback in ZONE4. When using the HDMI ZONE4 function, from the menu, set "HDMI Control" to "Off" or set "Control Monitor" to "ZONE4". When the input source for ZONE4 is "SOURCE", select an input source that is different from the one for MAIN ZONE. | 102, 128 - |
| When the HDMI ZONE4 function is used, Dolby TrueHD/ DTS HD Master Audio/Dolby Digital/ DTS cannot be played back in MAIN ZONE. | <ul style="list-style-type: none"> Make sure that "HDMI Audio Out" in the menu is set to "AVP". <p>When a same input source is selected for MAIN ZONE and ZONE4, set the ZONE4 ON/OFF button to "OFF", or change the input source for ZONE4 to an input source that is different from the one for MAIN ZONE.</p> | 127 |

| Symptom | Cause/Solution | Page |
|---|---|--------------------------|
| When the HDMI ZONE4 function is used, no video or audio is output to TV in ZONE4. | • Make sure that the power is on for ZONE4. | 113 |
| | • Check the input source for ZONE4. | 113 |
| | • Check the output settings (resolution/audio format) for the input device. | – |
| | • The HDMI 7 / MHL connector on the front panel does not support the HDMI ZONE4 function. | – |
| • For ZONE4, playback is only possible when the input signals are HDMI signals. | – | – |
| When playing back the input device just to use the HDMI ZONE4 function, the TV used for MAIN ZONE is turned on. | • “HDMI Control” in the menu is set to “On”. When using the HDMI ZONE4 function, set “HDMI Control” in the menu to “Off”. | 102, 128 |

[Video]

| Symptom | Cause/Solution | Page |
|---------------------|---|------------------------|
| No picture appears. | • Check the connection between the video output terminal of this unit and the input terminal of the TV. | 11, 17 |
| | • Match the input settings to the input terminal of the TV connected to this unit. | – |

[Audio]

| Symptom | Cause/Solution | Page |
|--|---|--|
| Audio is not output. | • Check the connections for all devices. | 11, 12, 17, 18, 19, 20, 21, 22, 23, 24, 26, 27, 28, 29, 30, 31, 33 |
| | • Check the speaker connections and configurations. • Check the connections for PRE OUT terminals. • Check whether the audio device power is turned on. • Adjust the master volume. • Cancel the mute mode. • Check the connection with the playback device and select the proper input source. • Match the input mode and the terminal assigned to be the digital input terminal. • Disconnect the headphones. No sound is output from the PRE OUT terminals when headphones are connected. | 31, 95, 96, 97, 31, 95, 96, 97 – 44, 113 44, 113 43, 113 136 162 |
| The volume does not increase. | • The maximum volume is set too low. Set the maximum volume using “Limit” on the menu. | 123 |
| | • Power for external devices connected to the output connectors of the unit may not be turned on. Check the power of connected external devices. | – |
| No sound is produced from surround speaker. | • Check if the surround speakers are connected to the SURROUND terminals of power amplifier. | – |
| No sound is produced from surround back speaker. | • Set “Speaker Config.” – “Surr. Back” on the menu to something other than “None”. | 138 |
| | • Set the sound mode to something other than “STEREO” and “VIRTUAL”. | 86 |
| No sound is produced from front height speaker. | • Set “Speaker Config.” – “Front Height” on the menu to something other than “None”. | 138 |
| No sound is produced from front wide speaker. | • Set “Speaker Config.” – “Front Wide” on the menu to something other than “None”. | 138 |

| Symptom | Cause/Solution | Page |
|---|---|--|
| No sound is produced from subwoofer. | <ul style="list-style-type: none"> • Check the subwoofer connections. • Turn on the subwoofer's power. • Set "Speaker Config." – "Subwoofer" on the menu to "2spkr" or "1spkr". • If "Front" and "Center" for "Speaker Config." are set to "Large", and "Subwoofer Mode" is set to "LFE", no sound may be output from the subwoofers, depending on the input signal or selected sound mode. | 95, 96, 97 – 138 138, 140 |
| DTS sound is not output. | <ul style="list-style-type: none"> • Set "Decode Mode" on the menu to "Auto" or "DTS". | 136 |
| Dolby TrueHD, DTS-HD, Dolby Digital Plus audio is not output. | <ul style="list-style-type: none"> • Make HDMI connections. | 11, 12 |
| Dolby PLII mode or DTS NEO:X mode cannot be selected. | <ul style="list-style-type: none"> • Check that "Speaker Config." – "Center" or "Surround" is set to other than "None". If the speaker system is 2.0/2.1ch, this sound mode cannot be selected. • When headphones are used, Dolby PLII or DTS NEO:X cannot be selected. | 138 – |
| Audyssey MultEQ® XT 32, Audyssey Dynamic EQ® and Audyssey Dynamic Volume® cannot be selected. | <ul style="list-style-type: none"> • Switch the sound mode to other than "DIRECT" or "PURE DIRECT". • When headphones are used, Audyssey MultEQ® XT 32, Audyssey Dynamic EQ® and Audyssey Dynamic Volume® cannot be selected. | 86 – |
| Audyssey DSX® cannot be selected. | <ul style="list-style-type: none"> • Check that "Speaker Config." – "Front Height" or "Front Wide" is set to other than "None". • Check that "Speaker Config." – "Center" is set to other than "None". • Switch the sound mode to DOLBY listening mode or DTS listening mode. • When headphones are used, Audyssey DSX® cannot be selected. | 138 138 86 – |
| Audyssey Dynamic EQ® and Audyssey Dynamic Volume® cannot be selected. | <ul style="list-style-type: none"> • Run Audyssey® Setup. | 35, 98 |

| Symptom | Cause/Solution | Page |
|-----------------------------|---|---|
| "M-DAX" cannot be selected. | <ul style="list-style-type: none"> • Check that an analog signal or PCM signal (Sample Rate=44.1/48 kHz) is input. For playback of multichannel signals such as Dolby Digital or DTS surround, "M-DAX" cannot be used. • Switch the sound mode to other than "DIRECT" or "PURE DIRECT". | 122 86 |

[FM]

| Symptom | Cause/Solution | Page |
|--|---|--|
| Reception fails, or there is a lot of noise or distortion. | <ul style="list-style-type: none"> • Change the antenna orientation or position. • Use an FM outdoor antenna. • Separate the antenna from other connection cables. | 28 28 28 |


 
 

[iPod / USB memory device / Internet Radio / Media Server / Last.fm / Flickr / Spotify]

| Symptom | Cause/Solution | Page |
|--|--|---|
| iPod cannot be played. | <ul style="list-style-type: none"> Some iPods do not support being used connected directly to the iPod/USB port. | 24 |
| The file names are not displayed properly ("...", etc.). | <ul style="list-style-type: none"> Characters that cannot be displayed are used. This is not a malfunction. On this unit, characters that cannot be displayed are replaced with a "." (period). Invalid tags are used for files within the USB memory device connected to this unit. Use tags that are supported by this unit. | – 49 |
| When a USB memory device is connected, "No Connection" is displayed. | <ul style="list-style-type: none"> The set cannot recognize a USB memory device. Check the connection. This unit supports mass storage class and MTP-compatible USB memory devices. It will not recognize other USB memory devices. A USB memory device that the set cannot recognize is connected. This is not a malfunction. marantz does not guarantee that all USB memory devices will operate or receive power. USB memory device is connected via USB hub. Connect the USB memory device directly to the iPod/USB port. The unit supports file structures with up to 8 levels and a total maximum of 5000 subfolders and files per 1 folder. Change the file structure of the USB memory device if necessary. | 24 – – – 49 |
| Files on a USB memory device cannot be played. | <ul style="list-style-type: none"> The USB memory device format should be set to FAT16 or FAT32. For details, refer to the USB memory device's operating instructions. If the USB memory device is divided into multiple partitions, only files in partition one can be played. Files are stored in a non-compatible format. Record the files in a compatible format. You are attempting to play a file that is copyright protected. Files that are copyright protected cannot be played on this unit. | – – 49 49 |
| Internet Radio cannot be played. | <ul style="list-style-type: none"> Ethernet cable is not properly connected or network is disconnected. Check the connection status. Program is being broadcast in non-compatible format. Only Internet Radio programs in MP3 and WMA can be played on this unit. The firewall of the PC or router has been activated. Check the firewall settings of the connected PC or router. Radio station is not currently broadcasting. Choose a radio station that is currently broadcasting. IP address is wrong. Check the set's IP address. Some radio stations may go silent at certain times of the day. In this case, no audio is output even when a station is received. Try again later, or switch to another radio station. | 33 63 – 63 142 – |

| Symptom | Cause/Solution | Page |
|--|---|---|
| Files stored on a computer cannot be played. | <ul style="list-style-type: none"> Files are stored in a non-compatible format. Record in a compatible format. You are attempting to play a file that is copyright protected. Files that are copyright protected cannot be played on this unit. Set and computer are connected by USB cable. The set's iPod/USB port cannot be used for connection to a computer. Media sharing settings are not correct. Change media sharing settings so that the unit can access the folders on your computer. | 66 66 – 67 |
| Music stored on a NAS cannot be played. | <ul style="list-style-type: none"> If you use a NAS in conformity with the DLNA standard, enable the DLNA server function in the NAS setting. If you use a NAS that does not conform with the DLNA standard, play the music via a PC. Set Windows Media Player's media sharing function and add NAS to the selected play folder. If connection is restricted, set audio equipment as the connection target. | – 67 – |
| Server is not found, or it is not possible to connect to the server. | <ul style="list-style-type: none"> The computer's or router's firewall is activated. Check the computer's or router's firewall settings. Computer's power is not turned on. Turn on the power. Server is not running. Launch the server. Set's IP address is wrong. Check the set's IP address. | – – – 142 |
| Cannot connect to preset or favorite radio stations. | <ul style="list-style-type: none"> Radio station is not currently broadcasting. Wait a while before trying again. Radio station is not currently in service. It is not possible to connect to radio stations that are no longer in service. | – – |
| A list of broadcasting stations is not displayed. | <ul style="list-style-type: none"> Connection to the network is unstable. Reconnect to the network or redo the "Network" setting in the menu. | 33 , 141 |
| For some radio stations, "Radio station server full" or "Connection down" is displayed and station cannot be connected to. | <ul style="list-style-type: none"> Station is congested or not currently broadcasting. Wait a while before trying again. | – |
| Sound is broken during playback. | <ul style="list-style-type: none"> Network or USB memory device's signal transfer speed is slow or communications lines or radio station is congested. This is not a malfunction. When playing broadcast data with a high bit rate, the sound may be broken, depending on the communications conditions. | – |

| Symptom | Cause/Solution | Page |
|--|--|------|
| Sound quality is poor or noise is heard during play. | <ul style="list-style-type: none"> File being played has a low bit rate. This is not a malfunction. | – |

[AirPlay]

| Symptom | Cause/Solution | Page |
|---|--|------------------------------|
| The AirPlay icon  is not displayed in iTunes or on the iPhone/iPod touch/iPad. | <ul style="list-style-type: none"> This unit and the computer or iPhone/iPod touch/iPad are not connected to the same network (LAN). Connect the computer or iPhone/iPod touch/iPad to the same network as this unit. iTunes or the iPhone/iPod touch/iPad do not have firmware that supports AirPlay installed. Update to the latest firmware. | 33 – |
| No sound. | <ul style="list-style-type: none"> The volume in iTunes or on the iPhone/iPod touch/iPad is set to the minimum setting. Adjust the volume to the optimum level. This unit is not selected in the screen that is displayed when iTunes or the iPhone/iPod touch/iPad is started. Start iTunes or switch on the iPhone/iPod touch/iPad, click the AirPlay icon  in the displayed screen, and select this unit. AirPlay playback has not started. Click the  button in iTunes or press the  button on the iPhone/iPod touch/iPad. | – 84 – |
| When using AirPlay with the iPhone/iPod touch/iPad, the sound suffers from intermittent breaks or AirPlay does not function. | <ul style="list-style-type: none"> Quit the application running in the background of the iPhone/iPod touch/iPad, and then play using AirPlay. When playing via a wireless connection, outside conditions may affect the unit. To remedy this, change the network environment, e.g. shorten the distance to the wireless LAN access point. Update the iPhone/iPod touch/iPad application or iTunes to the latest version. | – – – |

[M-XPort]


| Symptom | Cause/Solution | Page |
|--|---|------------------------------|
| Audio is not output when a wireless receiver (RX101 is connected). | <ul style="list-style-type: none"> Check that the Bluetooth device and Wireless receiver (RX101) are correctly paired. | 29, 178, 180 |

[Remote control unit]

| Symptom | Cause/Solution | Page |
|--|---|---|
| The set cannot be operated with the remote control unit. | <ul style="list-style-type: none"> Batteries are worn out. Replace with new batteries. Operate the remote control unit within a distance of about 7 m from this unit and at an angle of within 30°. Remove any obstacle between this unit and the remote control unit. Insert the batteries in the proper direction, checking the ⊕ and ⊖ marks. The set's remote control sensor is exposed to strong light (direct sunlight, inverter type fluorescent bulb light, etc.). Move the set to a place in which the remote control sensor will not be exposed to strong light. The setting of the zone to operate does not match. Press ZONE SELECT to select the zone to operate. | 167 167 167 167 36, 98, 113 |

Resetting the microprocessor

Perform this procedure if the display is abnormal or if operations cannot be performed.
When the microprocessor is reset, all the settings are reset to their default values.

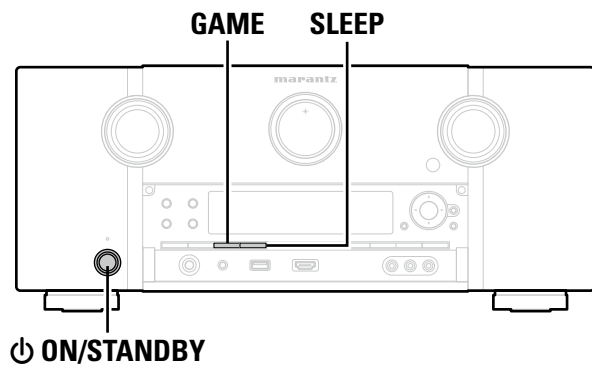

- 1** Turn off the power using **ON/STANDBY**.
- 2** Press **ON/STANDBY** while simultaneously pressing **GAME** and **SLEEP**.
- 3** Once the display starts flashing at intervals of about 1 second, release the two buttons.



If in step 3 the display does not flash at intervals of about 1 second, start over from step 1.

Specifications

□ Audio section

- **Analog**
 - Input sensitivity/Input impedance:** Unbalanced input: 200 mV/47 k Ω
Balanced input: 400 mV/94 k Ω
 - Frequency response:** 10 Hz – 100 kHz — +1, –3 dB (DIRECT mode)
 - S/N:** 105 dB (IHF–A weighted, DIRECT mode)
 - Distortion:** 0.005 % (20 Hz – 20 kHz) (DIRECT mode)
 - Rated output:** Unbalanced pre-output: 1.2 V
Balanced pre-output: 2.4 V
- **Digital**
 - D/A output:** Rated output — 2 V (at 0 dB playback)
Total harmonic distortion — 0.008 % (1 kHz, at 0 dB)
S/N ratio — 102 dB
Dynamic range — 100 dB
 - Digital input:** Format — Digital audio interface
- **Phono equalizer (PHONO input – MEDIA PLAYER OUT)**
 - Input sensitivity:** 2.5 mV
 - RIAA deviation:** \pm 1 dB (20 Hz – 20 kHz)
 - S/N:** 74 dB (A weighting, with 5 mV input)
 - Rated output:** 150 mV
 - Distortion factor:** 0.03 % (1 kHz, 3 V)

□ Video section

- **Standard video connectors**
 - Input/output level and impedance:** 1 Vp-p, 75 Ω
 - Frequency response:** 5 Hz – 10 MHz — 0, –3 dB (when “Video Conversion” set to “Off”)
- **Color component video connector**
 - Input/output level and impedance:** Y signal — 1 Vp-p, 75 Ω
P_B / C_B signal — 0.7 Vp-p, 75 Ω
P_R / C_R signal — 0.7 Vp-p, 75 Ω
 - Frequency response:** 5 Hz – 60 MHz — 0, –3 dB (when “Video Conversion” set to “Off”)

□ Tuner section

(ANTENNA input – MEDIA PLAYER OUT)

- Receiving Range:** 87.50 MHz – 108.00 MHz
- Usable Sensitivity:** 1.2 μ V (12.8 dBf)
- 50 dB Quieting Sensitivity:** MONO 2.8 μ V (20.2 dBf)
- S/N (IHF–A weighted):** MONO 70 dB
STEREO 67 dB
- Distortion (1 kHz):** MONO 0.7 % (1 kHz)
STEREO 1.0 % (1 kHz)

[FM]

(Note: μ V at 75 Ω , 0 dBf = 1×10^{-15} W)

□ Switching hub

- Standard:** IEEE 802.3 (10 Base-T)-compliant
IEEE 802.3u (100 Base-TX)-compliant
- Number of ports:** 4 ports

□ General

- Power supply:** AC 230 V, 50/60 Hz
- Power consumption:** 90 W
- Power consumption in standby mode:** 0.2 W
- Power consumption in CEC standby mode:** 0.5 W
- Power consumption in network standby mode:** 5.1 W

For purposes of improvement, specifications and design are subject to change without notice.

Index

Numerics

| | |
|-------------|----|
| 2.1-channel | 97 |
| 3D | 13 |
| 4K | 13 |
| 5.1-channel | 96 |
| 6.1-channel | 96 |

A

| | |
|--------------------------------------|----------|
| A2DP | 29, 178 |
| Accessories | 2 |
| Add New Feature | 150 |
| Adjust EQ | 125 |
| Adjusting the master volume | 44 |
| Adobe RGB color / Adobe YCC601 color | 178 |
| AirPlay | 84, 178 |
| ALAC | 178 |
| All Zone Stereo Off | 83 |
| All Zone Stereo On | 82 |
| Analog Inputs | 135 |
| Analog Video Out | 130 |
| App Store | 178 |
| ARC | 10 |
| Aspect Ratio | 130 |
| Audio | 119 |
| Audio Delay | 122 |
| Audyssey | 123 |
| Audyssey DSX® | 93, 125 |
| Audyssey Dynamic EQ® | 124, 178 |
| Audyssey Dynamic Surround Expansion | 178 |
| Audyssey Dynamic Volume® | 124, 178 |
| Audyssey LFC™ | 124, 178 |
| Audyssey MultEQ® XT 32 | 123, 178 |
| Audyssey® Setup | 35, 98 |
| Auto Lip Sync | 127, 178 |
| Auto Preset Memory | 55 |
| Auto Standby | 147 |

B

| | |
|------------|---------------|
| Bass | 122, 140, 146 |
| Bass Sync | 120, 178 |
| Bluetooth | 29, 178 |
| Brightness | 127 |

C

| | |
|--------------------------|------------|
| Cable | |
| Audio cable | 15, 31, 32 |
| Coaxial digital cable | 15 |
| Component video cable | 15 |
| Ethernet cable | 15 |
| HDMI cable | 11, 12 |
| Optical cable | 15 |
| Speaker cable | 31, 32 |
| Video cable | 15 |
| XLR cable | 15 |
| Center Gain | 121 |
| Center Width | 121 |
| Channel | 146 |
| Channel Indicators | 147 |
| Characters | 118 |
| Check Results | 42 |
| Condensation | 4 |
| Connection | |
| 7.1CH IN | 30 |
| Blu-ray Disc player | 12, 20 |
| Cable TV | 18 |
| CD player | 26 |
| DC OUT | 101 |
| Digital camcorder | 12, 22 |
| DVD player | 12, 19 |
| External power amplifier | 31 |
| FM | 28 |
| Game console | 12, 21 |
| HDMI | 9 |
| Home network (LAN) | 33 |
| iPod (USB) | 24 |
| Media player | 12, 23 |
| Mobile | 12 |
| Power cord | 34 |
| Record player | 27 |
| Remote control jacks | 100 |
| RS-232C | 101 |
| Satellite tuner | 18 |
| Set-top box | 12, 18 |
| Speaker | 95 |
| TV | 11, 17 |
| USB memory device | 24 |
| Wireless receiver | 29 |
| Containment Amount | 124 |
| Content Type | 13 |
| Contrast | 127 |
| Control Monitor | 129 |
| Crossovers | 140 |
| Curve Copy | 125 |

D

| | |
|------------------------------|-------------|
| Decode Mode | 136 |
| Deep Color | 14, 178 |
| Diagnostics | 144 |
| Dialog Enhancer | 120 |
| Digital Inputs | 135 |
| Dimension | 121 |
| Direct Tune | 54 |
| Display | 147, 163 |
| Distances | 139 |
| DLNA | 178 |
| Dolby | |
| Dolby Digital | 90, 178 |
| Dolby Digital EX | 90, 178 |
| Dolby Digital Plus | 90, 178 |
| Dolby Pro Logic II | 90, 178 |
| Dolby Pro Logic IIx | 90, 178 |
| Dolby Pro Logic IIz | 90, 93, 178 |
| Dolby TrueHD | 90, 179 |
| Downmix | 179 |
| DTS | 179 |
| DTS 96/24 | 90, 179 |
| DTS Digital Surround | 179 |
| DTS-ES Discrete 6.1 | 90, 179 |
| DTS-ES Matrix 6.1 | 90, 179 |
| DTS Express | 90, 179 |
| DTS-HD | 90, 179 |
| DTS-HD High Resolution Audio | 179 |
| DTS-HD Master Audio | 179 |
| DTS Neo:X | 90, 93, 179 |
| Dual backup memory function | 108 |
| Dynamic Compression | 120 |
| Dynamic EQ | 124 |
| Dynamic range | 179 |
| Dynamic Volume | 124 |

E

| | |
|----------------------------------|----------|
| Edit Name | 142 |
| Enhancer | 120, 127 |
| Error messages (Audyssey® Setup) | 40 |

F

| | |
|-------------------|--------|
| Firmware | 149 |
| FLAC | 179 |
| Flickr | 70, 74 |
| FM | 52 |
| FM indoor antenna | 28 |
| Format | 131 |

| | |
|----------------------|--------|
| Friendly Name | 142 |
| Front Display | 147 |
| Front Height | 138 |
| Front height speaker | 94, 95 |
| Front Panel | 161 |
| Front Wide | 138 |
| Front wide speaker | 94, 95 |

G

| | |
|------------|-----|
| General | 145 |
| Graphic EQ | 125 |

H

| | |
|---------------------|------------|
| HDCP | 14, 179 |
| HDMI | 9, 13, 179 |
| HDMI Audio Out | 127 |
| HDMI Control | 102, 128 |
| HDMI Pass Through | 128 |
| HDMI Setup | 127 |
| HDMI ZONE4 function | 111 |
| Headphones | 162 |
| Height Gain | 121 |
| Hide Sources | 135 |
| High Pass Filter | 146 |
| Home Theater EQ | 120 |
| Hue | 127 |

I

| | |
|----------------------|----------|
| Info | 131 |
| Information | 142, 148 |
| Audio | 148 |
| Firmware | 148 |
| Video | 148 |
| ZONE | 148 |
| Input Assign | 133 |
| Input Mode | 136 |
| Inputs | 132 |
| Input Select | 136 |
| Input signal | 172 |
| Inputting characters | 118 |
| InstaPrevue | 104 |
| Internet Access | 144 |
| iPod Browse Mode | 47 |
| i/p Scaler | 129 |
| iTunes | 179 |

| | |
|-----------------------|--------|
| L | |
| Language | 146 |
| Last.fm | 70, 71 |
| Lch Level | 146 |
| Levels | 139 |
| LFE | 179 |
| Limit | 123 |
| Listening mode | 86 |
| Listening position | 35 |
| Lock | 150 |
| Loudness Management | 120 |
| Low Frequency Effects | 121 |

| | |
|------------------|----------|
| M | |
| Maintenance Mode | 144 |
| MAIN ZONE | 179 |
| Manual Setup | 138 |
| M-DAX | 122 |
| Menu map | 114 |
| Mode | 122 |
| MP3 | 179 |
| MPEG | 179 |
| MultEQ® XT 32 | 123 |
| Mute Level | 123, 146 |

| | |
|-----------------|--------------|
| N | |
| Network | 42, 141, 142 |
| Noise Reduction | 127 |
| Notifications | 149 |
| Now Playing | 131 |

| | |
|-------------------|-----|
| O | |
| On Screen Display | 131 |
| Output Settings | 129 |

| | |
|---------------------|---------|
| P | |
| Pairing | 180 |
| Panel lock function | 108 |
| Panorama | 121 |
| Pass Through Source | 128 |
| Physical Connection | 144 |
| Picture Adjust | 127 |
| Picture Mode | 82, 127 |

| | |
|-------------------------|------------|
| R | |
| Radio Text | 62 |
| Random | 48, 79 |
| Rch Level | 146 |
| RDS | 59 |
| Rear panel | 165 |
| Reference Level Offset | 124 |
| Playback | |
| ALAC | 49, 66 |
| Auto surround | 87 |
| Blu-ray Disc player | 44 |
| CD player | 45 |
| Direct | 86, 91 |
| DSD Direct | 86, 91 |
| DVD player | 44 |
| FLAC | 49, 66 |
| Flickr | 74 |
| FM | 52 |
| Internet Radio | 63 |
| iPod (USB) | 46 |
| JPEG | 49, 66 |
| Last.fm | 70, 71 |
| MP3 | 49, 63, 66 |
| MPEG-4 AAC | 49, 66 |
| NAS | 66 |
| Original listening mode | 91 |
| PC | 66 |
| PTY | 60 |
| Pure direct | 86, 91 |
| Radio Text | 62 |
| RDS | 59 |
| Spotify | 76 |
| Stereo | 91 |
| Super Audio CD | 44 |
| TP | 61 |
| USB memory device | 49 |
| WAV | 49, 66 |
| WMA | 49, 63, 66 |
| ZONE2/ZONE3/ZONE4 | 113 |
| Power Off Control | 129 |
| Power On Level | 123 |
| Power On Volume | 146 |
| Preset codes | 151, 190 |
| Preset Memory | 56 |
| Preset Name | 57 |
| Preset Skip | 58 |
| Progressive | 180 |
| Progressive Mode | 130 |
| PTY | 60 |

| | |
|------------------------|--------|
| R | |
| Radio Text | 62 |
| Random | 48, 79 |
| Rch Level | 146 |
| RDS | 59 |
| Rear panel | 165 |
| Reference Level Offset | 124 |

| | |
|------------------------------|------------|
| S | |
| Sampling frequency | 180 |
| Saturation | 127 |
| Save to Favorites | 80 |
| Scale | 123 |
| Selecting the input source | 43 |
| Settings | 143 |
| Setup Lock | 150 |
| Sleep timer | 105, 113 |
| Slideshow | 81 |
| Slideshow Interval | 81 |
| Sound Mode | 86, 169 |
| Source Level | 135 |
| Source Rename | 135 |
| Speaker | |
| Connect | 95 |
| Install | 93 |
| Set up | 35, 98 |
| Speaker Config. | 138 |
| Speakers | 137 |
| Speaker Selection | 125 |
| Spotify | 70, 76 |
| Stage Height | 125 |
| Stage Width | 125 |
| Subwoofer | 120 |
| Subwoofer 1 Level | 120 |
| Subwoofer 2 Level | 120 |
| Subwoofer Level | 120 |
| Subwoofer setting | 36 |
| Surr. Back | 138 |
| Surround back speaker | 94, 95, 96 |
| Surround Parameter | 120 |
| SW Level Matching | 41 |
| sYCC601 color | 180 |
| Remote control unit | 166 |
| Inserting the batteries | 167 |
| Learning function | 157 |
| Operating devices | 155 |
| Operating external devices | 154 |
| Registering preset codes | 151 |
| Setting the back light | 159 |
| Remote lock function | 109 |
| Remove from Favorites | 81 |
| Repeat | 48, 79 |
| Resetting the microprocessor | 186 |
| Resolution | 130 |
| Router Access | 144 |

| | |
|-----------------------------------|---------------|
| T | |
| Text Search | 78 |
| Tone | 122 |
| Tone Control | 122 |
| TP | 61 |
| Trademark | 168 |
| Treble | 122, 146 |
| Trigger Out 1/2 | 147 |
| Troubleshooting | 181 |
| Tune Mode | 53 |
| Turning off the sound temporarily | 44 |
| Turning the power on | 43 |
| TV Format | 131 |
| U | |
| Update | 149 |
| USB Select | 78 |
| V | |
| Vertical Stretch | 128 |
| Video | 126 |
| Video conversion | 7 |
| Video Conversion | 129 |
| Video Mode | 129 |
| Video Output | 128 |
| Video Select | 136 |
| Video Source | 136 |
| Volume | 123, 131 |
| Volume Level | 146 |
| Volume Limit | 146 |
| vTuner | 65, 180 |
| W | |
| Web control | 106 |
| Windows Media DRM | 180 |
| Windows Media Player | 180 |
| WMA | 180 |
| X | |
| x.v.Color | 180 |
| Z | |
| ZONE | 130 |
| ZONE2 Setup | 146 |
| ZONE2/ZONE3/ZONE4 | 111, 164, 180 |
| ZONE3 Setup | 146 |
| Zone mode setting | 36, 98 |
| Zone Rename | 147 |

List of preset codes

AVP

M marantz 0000

TV group (1***)

| | | |
|----------|---------------|--|
| A | Acer | 1141 |
| | Admiral | 1009, 1089, 1002 |
| | Aiko | 1059 |
| | Aiwa | 1117, 1118 |
| | Akai | 1001 |
| | Amtron | 1023 |
| | Anam | 1113 |
| | Anam National | 1023, 1069, 1092 |
| | AOC | 1003, 1049, 1024, 1127 |
| | Audiovox | 1023 |
| B | Bell & Howell | 1009, 1025 |
| | Benq | 1104, 1142 |
| | Broksonic | 1097, 1098, 1113, 1003 |
| C | Celebrity | 1001 |
| | Citizen | 1003, 1023, 1059, 1063, 1026, 1013 |
| | Colorlyme | 1003, 1043 |
| | Contec/Cony | 1045, 1047, 1023, 1113 |
| | Craig | 1023, 1113, 1020, 1022 |
| | Crown | 1023, 1067 |
| | Curtis Mathes | 1003, 1110, 1025, 1062, 1026, 1103, 1013 |
| D | Daewoo | 1003, 1059, 1024, 1084, 1101, 1013, 1035, 1036 |
| | Daytron | 1003, 1013, 1016 |
| | Dimensia | 1110, 1103 |
| | Dumont | 1010, 1003, 1153 |
| E | Electroband | 1001 |
| | Electrohome | 1003, 1133, 1001, 1069 |
| | Emerson | 1003, 1020, 1044, 1038, 1045, 1048, 1055, 1023, 1025, 1061, 1022, 1094, 1096, 1099, 1013, 1113, 1101, 1015, 1021 |
| | Envision | 1003 |
| F | Fisher | 1051, 1025, 1091, 1160 |
| | Fujitsu | 1038, 1124, 1125, 1155 |
| | Funai | 1038, 1023, 1113 |
| G | Gateway | 1150 |
| | GE | 1110, 1003, 1085, 1046, 1054, 1133, 1018, 1069, 1022, 1103, 1113, 1136, 1153 |
| | Goldstar | 1045, 1024, 1112, 1080, 1100, 1013, 1003, 1030, 1154 |

| | | |
|----------|-----------------------|--|
| H | Hallmark | 1003 |
| | Hisense | 1116 |
| | Hitachi | 1003, 1012, 1031, 1032, 1037, 1041, 1045, 1047, 1065, 1068, 1082, 1088, 1094, 1139, 1140, 1145, 1159 |
| I | Infinity | 1067 |
| J | Janeil | 1134 |
| | JBL | 1067 |
| | JC Penney | 1003, 1046, 1047, 1054, 1133, 1110, 1019, 1112, 1024, 1063, 1018, 1026, 1083, 1085, 1100, 1103, 1013, 1154 |
| | Jensen | 1003 |
| | JVC | 1045, 1047, 1050, 1060, 1065, 1028, 1029 |
| K | Kawasho | 1003, 1001 |
| | Kenwood | 1003 |
| | Kloss Novabeam | 1056, 1023, 1057, 1134 |
| | KTV | 1023, 1073, 1099, 1013, 1113, 1033, 1034 |
| L | LG | 1024, 1030 |
| M | M.Wards | 1002, 1009, 1038 |
| | Magnavox | 1003, 1052, 1053, 1056, 1057, 1063, 1081, 1067, 1106 |
| | marantz | 1000, 1003, 1122, 1067, 1031 |
| | Mitsubishi | 1003, 1051, 1133, 1122, 1024, 1115 |
| | Motorola | 1069, 1014 |
| N | NEC | 1003, 1043, 1024, 1069, 1012 |
| | NET-TV | 1137, 1150 |
| O | Orion | 1020, 1096 |
| P | Panasonic | 1017, 1067, 1069, 1111, 1095 |
| | Philips | 1003, 1045, 1052, 1054, 1056, 1057, 1058, 1063, 1069, 1067, 1011 |
| | Philips Magnavox | 1106, 1067 |
| | Pioneer | 1003, 1018, 1070, 1071, 1037, 1094, 1145, 1147, 1149 |
| | Plasmsync | 1135 |
| | Portland | 1003, 1059, 1024, 1013 |
| | Price Club | 1026 |
| | Prism | 1018 |
| | Proscan | 1110, 1085, 1103, 1004, 1005, 1006, 1007, 1008 |
| | Proton | 1003, 1045 |
| Q | Quasar | 1069, 1073, 1111, 1010, 1153 |
| R | Radio Shack | 1025, 1103, 1113, 1024 |
| | Radio Shack/Realistic | 1003, 1045, 1023, 1110, 1025, 1015, 1100, 1013 |

| | | |
|----------|--------------------|--|
| | RCA | 1110, 1003, 1049, 1024, 1069, 1075, 1079, 1085, 1087, 1088, 1093, 1094, 1101, 1103, 1085, 1113, 1004, 1005, 1006, 1007, 1008, 1153, 1014 |
| | Realistic | 1025, 1103 |
| | Runco | 1010, 1153 |
| S | Sampo | 1150 |
| | Sampo | 1150 |
| | Samsung | 1003, 1045, 1024, 1062, 1026, 1078, 1083, 1090, 1100, 1013, 1105, 1040, 1114, 1157, 1120, 1121, 1148, 1146 |
| | Sansui | 1119 |
| | Sanyo | 1003, 1051, 1025, 1072, 1077, 1091, 1156, 1157, 1158 |
| | Sharp | 1003, 1045, 1055, 1015, 1064, 1066, 1076, 1089, 1013, 1014, 1123 |
| | Signature | 1009 |
| | Sony | 1001, 1102, 1108 |
| | Soundesign | 1003, 1038, 1023, 1063, 1113 |
| | Starlite | 1023 |
| | Supre-Macy | 1134 |
| | Sylvania | 1003, 1042, 1052, 1053, 1063, 1056, 1057, 1067, 1089, 1151, 1039 |
| | Symphonic | 1044, 1023, 1039 |
| T | Tandy | 1014 |
| | Tatung | 1069 |
| | Technics | 1018 |
| | Techwood | 1003, 1018 |
| | Teknika | 1003, 1009, 1038, 1045, 1047, 1063, 1023, 1059, 1024, 1063, 1026, 1111, 1013, 1113 |
| | Telecaption | 1074 |
| | Toshiba | 1042, 1025, 1074, 1026, 1098, 1003, 1107, 1019, 1136, 1111, 1135 |
| | Totevision | 1013 |
| U | Universal | 1046, 1054 |
| V | Video Concepts | 1113 |
| | Viewsonic | 1130, 1128, 1006, 1131, 1129, 1109, 1143, 1150, 1022, 1145, 1138 |
| W | Wards | 1003, 1009, 1044, 1038, 1046, 1052, 1054, 1056, 1110, 1057, 1024, 1015, 1067, 1086, 1103 |
| | White Westinghouse | 1101, 1001 |
| Y | Yamaha | 1003, 1024 |
| Z | Zenith | 1132, 1010, 1003, 1009, 1144, 1153 |

DVD group (2***)

| | | |
|----------|---------------|------------------------------------|
| A | Aiwa | 2036, 2037 |
| | Apex | 2017, 2034, 2018, 2019, 2021, 2012 |
| B | Bluray | 2064 |
| | BOSE | 2038, 2039, 2063 |
| D | Denon | 2047, 2048 |
| F | Funai | 2049 |
| G | GE | 2020, 2029, 2033, 2009 |
| H | Harman Kardon | 2061 |
| | Hitachi | 2031, 2012, 2008 |
| J | JVC | 2006, 2010, 2040, 2041, 2042, 2043 |
| K | Kenwood | 2054, 2053 |
| | Koss | 2058 |
| M | Magnavox | 2023, 2025, 2011, 2007 |
| | marantz | 2000, 2025, 2065 |
| | Mitsubishi | 2011, 2015 |
| O | Onkyo | 2062 |
| | Oritron | 2030, 2009 |
| P | Panasonic | 2003, 2015, 2016, 2055 |
| | Philips | 2007, 2011, 2058 |
| | Pioneer | 2002, 2014, 2056 |
| | Proscan | 2020, 2032, 2009 |
| R | RCA | 2020, 2005, 2009, 2035, 2057 |
| S | Sampo | 2041 |
| | Samsung | 2008, 2022, 2024, 2027, 2012 |
| | Sanyo | 2050, 2052 |
| | Sharp | 2044, 2045 |
| | Sherwood | 2051 |
| | Sony | 2001, 2013, 2059 |
| T | Toshiba | 2004, 2026, 2028, 2008 |
| Y | Yamaha | 2046, 2060 |
| Z | Zenith | 2010 |

CD group (3***)

| | | |
|----------|------------|------------------------------|
| A | AIWA | 3001, 3002, 3003 |
| | AKAI | 3004, 3005, 3006 |
| | AUDIO | 3007 |
| | AUDIO LABS | 3008 |
| C | CALIFORNIA | 3008 |
| | CARVER | 3010, 3011, 3009 |
| | CASIO | 3012, 3020 |
| | CURTIS | 3020, 3012 |
| D | Denon | 3013 |
| E | EMERSON | 3014 |
| F | FISHER | 3011, 3015, 3016, 3017, 3018 |

| | | |
|----------|-------------|--|
| G | GE | 3019 |
| | GENEXXA | 3014, 3021, 3020 |
| H | HARMON | 3022, 3023, 3051 |
| | HITACHI | 3020 |
| I | INKEL | 3024 |
| J | JC PENNEY | 3012, 3020, 3025 |
| | JVC | 3026, 3027 |
| K | KARDON | 3022, 3051, 3023 |
| | KENWOOD | 3028, 3029, 3030, 3031, 3032, 3033 |
| | KRELL | 3010 |
| L | LUXMAN | 3035, 3036, 3037, 3038 |
| | LX I | 3012, 3020, 3014 |
| M | MAGNAVOX | 3010, 3039, 3040 |
| | marantz | 3000, 3010, 3041, 3042, 3043 |
| | MATHES | 3012, 3020 |
| | MCS | 3012, 3020 |
| | MGA | 3023 |
| | MISSION | 3010 |
| | MITSUBISHI | 3023, 3044 |
| N | NAD | 3034, 3045 |
| | NAKAMICHI | 3046, 3047, 3048 |
| | NEC MCS | 3025 |
| | NIKKO | 3007, 3016 |
| O | ONKYO | 3049, 3050, 3051, 3052, 3055, 3102, 3103 |
| | OPTIMUS | 3011, 3014, 3020, 3028, 3053, 3054, 3056, 3057, 3058, 3059 |
| P | PANASONIC | 3008, 3060, 3061 |
| | PHILIPS | 3009, 3010, 3010, 3040 |
| | PIONEER | 3020, 3021, 3062, 3063, 3064 |
| Q | QUASAR | 3008 |
| R | RCA | 3011, 3014, 3065, 3066, 3067, 3068, 3069 |
| | REALISTIC | 3011, 3014, 3020, 3042, 3054, 3057 |
| | ROTEL | 3010 |
| | RS ORIGINAL | 3070 |
| S | SAE | 3010, 3083 |
| | SAMSUNG | 3071 |
| | SANSUI | 3014, 3068, 3072, 3073 |
| | SANYO | 3011, 3018, 3074, 3075, 3076 |
| | SCOTT | 3014 |
| | SEARS | 3012, 3014, 3020, 3028, 3042 |
| | SHARP | 3028, 3042, 3077 |
| | SHERWOOD | 3042, 3056, 3070, 3078, 3024 |
| | SHURE | 3025 |

| | |
|-----------------|--|
| SONY | 3039, 3079, 3080, 3081, 3082, 3097, 3098, 3099, 3100, 3101 |
| SYLVANIA | 3010 |
| SYMPHONIC | 3083 |
| T TEAC | 3016, 3042, 3057, 3083, 3084, 3085, 3086 |
| TECHNICA | 3007, 3008, 3061, 3087, 3088 |
| THETA DIGITAL | 3040 |
| TOSHIBA | 3045 |
| V VICTOR | 3026 |
| Y YAMAHA | 3007, 3089, 3090, 3091, 3092 |
| Z ZENITH | 3016, 3093, 3094, 3095, 3096 |

CBL/SAT group (4***)

| | |
|-------------------------|--|
| A Alphastar | 4027 |
| Amstrad | 4046, 4047, 4050 |
| Apple TV | 4068 |
| Atsky | 4048 |
| B BSkyB | 4021, 4045, 4046 |
| C Chaparral | 4039 |
| D Direct Tv | 4001, 4016, 4044 |
| DISH Network | 4030 |
| Drake | 4026 |
| E Echostar | 4007, 4017, 4018, 4019, 4020, 4062, 4063, 4064 |
| Eurosky | 4056, 4047 |
| Express Vu | 4017 |
| F Foxtel | 4051 |
| Freesat | 4056 |
| Fujitsu | 4025 |
| G GE | 4002, 4008, 4009 |
| General Instruments | 4036, 4037 |
| Gradiente | 4044, 4057 |
| H Hitachi | 4001, 4015 |
| Hughes Network | 4001, 4016 |
| Humax | 4049, 4050, 4051, 4052, 4053 |
| J Janeil | 4025 |
| JVC | 4017 |
| L LG Smart TV | 4069 |
| M marantz | 4000 |
| Mitsubishi | 4001 |
| N NETGEAR Neo TV | 4072 |
| Nokia | 4058, 4059, 4060, 4061 |
| Optima | 4048 |
| P Panasonic | 4004, 4010 |
| Philips | 4031, 4044, 4057, 4035 |
| Proscan | 4002, 4008, 4009, 4011 |
| R Radio Shack | 4036, 4037 |
| RCA | 4002, 4008, 4009, 4029 |

| | |
|-----------------------------------|--|
| Realistic | 4040 |
| Roku XDS | 4073 |
| Rural Cable | 4036 |
| S Samsung | 4022, 4027, 4042, 4043, 4054, 4055, 4050 |
| Schneider | 4041, 4043 |
| SKY | 4044, 4045, 4057 |
| Skyplus | 4048 |
| Skysat | 4041, 4047, 4056 |
| Sony | 4003, 4012, 4014, 4065, 4066, 4067, 4070 |
| Star Choice | 4032 |
| Star Trak | 4024 |
| STS | 4038 |
| SuperDish | 4028 |
| T Teac | 4049 |
| Thomson | 4046, 4056 |
| Toshiba | 4001, 4034 |
| U Universum | 4056 |
| Uniden | 4005, 4006, 4013 |
| V Video Pall | 4025 |
| W Western Digital WD TV | 4071 |
| Z Zenith | 4033, 4025, 4023 |

BD group (5***)

| | |
|--------------------|------------------------------------|
| D Denon | 5034, 5035, 5036 |
| H Hitachi | 5031, 5032, 5033 |
| I Integra | 5013 |
| J JVC | 5014, 5015, 5017, 5018, 5019, 5020 |
| L LG | 5010, 5011 |
| M marantz | 5000, 5026, 5027 |
| Mitsubishi | 5024, 5025 |
| O Onkyo | 5013 |
| P Panasonic | 5001, 5002, 5003 |
| Philips | 5004 |
| Pioneer | 5005 |
| R RCA | 5012 |
| S Samsung | 5005 |
| Sharp | 5028, 5029, 5030 |
| Sony | 5007, 5008, 5009, 5016 |
| T Toshiba | 5012 |
| Y Yamaha | 5021, 5022, 5023 |

License

This section describes software license used for this unit. To maintain the correct content, the original (English) is used.

☐ Boost

<http://www.boost.org/>

Boost Software License - Version 1.0 - August 17th, 2003

Permission is hereby granted, free of charge, to any person or organization obtaining a copy of the software and accompanying documentation covered by this license (the "Software") to use, reproduce, display, distribute, execute, and transmit the Software, and to prepare derivative works of the Software, and to permit third-parties to whom the Software is furnished to do so, all subject to the following:

The copyright notices in the Software and this entire statement, including the above license grant, this restriction and the following disclaimer, must be included in all copies of the Software, in whole or in part, and all derivative works of the Software, unless such copies or derivative works are solely in the form of machine-executable object code generated by a source language processor.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE AND NON-INFRINGEMENT. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR ANYONE DISTRIBUTING THE SOFTWARE BE LIABLE FOR ANY DAMAGES OR OTHER LIABILITY, WHETHER IN CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

☐ Expat

<http://www.jclark.com/xml/expat.html>

Expat License. Copyright (c) 1998, 1999, 2000 Thai Open Source Software Center Ltd

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

☐ FastDelegate

<http://www.codeproject.com/KB/cpp/FastDelegate.aspx>

THE WORK (AS DEFINED BELOW) IS PROVIDED UNDER THE TERMS OF THIS CODE PROJECT OPEN LICENSE ("LICENSE"). THE WORK IS PROTECTED BY COPYRIGHT AND/OR OTHER APPLICABLE LAW. ANY USE OF THE WORK OTHER THAN AS AUTHORIZED UNDER THIS LICENSE OR COPYRIGHT LAW IS PROHIBITED.

BY EXERCISING ANY RIGHTS TO THE WORK PROVIDED HEREIN, YOU ACCEPT AND AGREE TO BE BOUND BY THE TERMS OF THIS LICENSE. THE AUTHOR GRANTS YOU THE RIGHTS CONTAINED HEREIN IN CONSIDERATION OF YOUR ACCEPTANCE OF SUCH TERMS AND CONDITIONS. IF YOU DO NOT AGREE TO ACCEPT AND BE BOUND BY THE TERMS OF THIS LICENSE, YOU CANNOT MAKE ANY USE OF THE WORK.

- Definitions.
 - "Articles" means, collectively, all articles written by Author which describes how the Source Code and Executable Files for the Work may be used by a user.
 - "Author" means the individual or entity that offers the Work under the terms of this License.
 - "Derivative Work" means a work based upon the Work or upon the Work and other pre-existing works.
 - "Executable Files" refer to the executables, binary files, configuration and any required data files included in the Work.
 - "Publisher" means the provider of the website, magazine, CD-ROM, DVD or other medium from or by which the Work is obtained by You.
 - "Source Code" refers to the collection of source code and configuration files used to create the Executable Files.
 - "Standard Version" refers to such a Work if it has not been modified, or has been modified in accordance with the consent of the Author, such consent being in the full discretion of the Author.
 - "Work" refers to the collection of files distributed by the Publisher, including the Source Code, Executable Files, binaries, data files, documentation, whitepapers and the Articles.
 - "You" is you, an individual or entity wishing to use the Work and exercise your rights under this License.
- Fair Use/Fair Use Rights. Nothing in this License is intended to reduce, limit, or restrict any rights arising from fair use, fair dealing, first sale or other limitations on the exclusive rights of the copyright owner under copyright law or other applicable laws.

3. License Grant. Subject to the terms and conditions of this License, the Author hereby grants You a worldwide, royalty-free, non-exclusive, perpetual (for the duration of the applicable copyright) license to exercise the rights in the Work as stated below:

- You may use the standard version of the Source Code or Executable Files in Your own applications.
- You may apply bug fixes, portability fixes and other modifications obtained from the Public Domain or from the Author. A Work modified in such a way shall still be considered the standard version and will be subject to this License.
- You may otherwise modify Your copy of this Work (excluding the Articles) in any way to create a Derivative Work, provided that You insert a prominent notice in each changed file stating how, when and where You changed that file.
- You may distribute the standard version of the Executable Files and Source Code or Derivative Work in aggregate with other (possibly commercial) programs as part of a larger (possibly commercial) software distribution.
- The Articles discussing the Work published in any form by the author may not be distributed or republished without the Author's consent. The author retains copyright to any such Articles. You may use the Executable Files and Source Code pursuant to this License but you may not repost or republish or otherwise distribute or make available the Articles, without the prior written consent of the Author.

Any subroutines or modules supplied by You and linked into the Source Code or Executable Files this Work shall not be considered part of this Work and will not be subject to the terms of this License.

- Patent License. Subject to the terms and conditions of this License, each Author hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable (except as stated in this section) patent license to make, have made, use, import, and otherwise transfer the Work.
- Restrictions. The license granted in Section 3 above is expressly made subject to and limited by the following restrictions:
 - You agree not to remove any of the original copyright, patent, trademark, and attribution notices and associated disclaimers that may appear in the Source Code or Executable Files.
 - You agree not to advertise or in any way imply that this Work is a product of Your own.
 - The name of the Author may not be used to endorse or promote products derived from the Work without the prior written consent of the Author.
 - You agree not to sell, lease, or rent any part of the Work. This does not restrict you from including the Work or any part of the Work inside a larger software distribution that itself is being sold. The Work by itself, though, cannot be sold, leased or rented.

- You may distribute the Executable Files and Source Code only under the terms of this License, and You must include a copy of, or the Uniform Resource Identifier for, this License with every copy of the Executable Files or Source Code You distribute and ensure that anyone receiving such Executable Files and Source Code agrees that the terms of this License apply to such Executable Files and/or Source Code. You may not offer or impose any terms on the Work that alter or restrict the terms of this License or the recipients' exercise of the rights granted hereunder. You may not sublicense the Work. You must keep intact all notices that refer to this License and to the disclaimer of warranties. You may not distribute the Executable Files or Source Code with any technological measures that control access or use of the Work in a manner inconsistent with the terms of this License.
 - You agree not to use the Work for illegal, immoral or improper purposes, or on pages containing illegal, immoral or improper material. The Work is subject to applicable export laws. You agree to comply with all such laws and regulations that may apply to the Work after Your receipt of the Work.
- Representations, Warranties and Disclaimer. THIS WORK IS PROVIDED "AS IS", "WHERE IS" AND "AS AVAILABLE", WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES OR CONDITIONS OR GUARANTEES. YOU, THE USER, ASSUME ALL RISK IN ITS USE, INCLUDING COPYRIGHT INFRINGEMENT, PATENT INFRINGEMENT, SUITABILITY, ETC. AUTHOR EXPRESSLY DISCLAIMS ALL EXPRESS, IMPLIED OR STATUTORY WARRANTIES OR CONDITIONS, INCLUDING WITHOUT LIMITATION, WARRANTIES OR CONDITIONS OF MERCHANTABILITY, MERCHANTABLE QUALITY OR FITNESS FOR A PARTICULAR PURPOSE, OR ANY WARRANTY OF TITLE OR NON-INFRINGEMENT, OR THAT THE WORK (OR ANY PORTION THEREOF) IS CORRECT, USEFUL, BUG-FREE OR FREE OF VIRUSES. YOU MUST PASS THIS DISCLAIMER ON WHENEVER YOU DISTRIBUTE THE WORK OR DERIVATIVE WORKS.
 - Indemnity. You agree to defend, indemnify and hold harmless the Author and the Publisher from and against any claims, suits, losses, damages, liabilities, costs, and expenses (including reasonable legal or attorneys' fees) resulting from or relating to any use of the Work by You.
 - Limitation on Liability. EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW, IN NO EVENT WILL THE AUTHOR OR THE PUBLISHER BE LIABLE TO YOU ON ANY LEGAL THEORY FOR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL, PUNITIVE OR EXEMPLARY DAMAGES ARISING OUT OF THIS LICENSE OR THE USE OF THE WORK OR OTHERWISE, EVEN IF THE AUTHOR OR THE PUBLISHER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

9. Termination.
- This License and the rights granted hereunder will terminate automatically upon any breach by You of any term of this License. Individuals or entities who have received Derivative Works from You under this License, however, will not have their licenses terminated provided such individuals or entities remain in full compliance with those licenses. Sections 1, 2, 6, 7, 8, 9, 10 and 11 will survive any termination of this License.
 - If You bring a copyright, trademark, patent or any other infringement claim against any contributor over infringements You claim are made by the Work, your License from such contributor to the Work ends automatically.
 - Subject to the above terms and conditions, this License is perpetual (for the duration of the applicable copyright in the Work). Notwithstanding the above, the Author reserves the right to release the Work under different license terms or to stop distributing the Work at any time; provided, however that any such election will not serve to withdraw this License (or any other license that has been, or is required to be, granted under the terms of this License), and this License will continue in full force and effect unless terminated as stated above.
10. Publisher. The parties hereby confirm that the Publisher shall not, under any circumstances, be responsible for and shall not have any liability in respect of the subject matter of this License. The Publisher makes no warranty whatsoever in connection with the Work and shall not be liable to You or any party on any legal theory for any damages whatsoever, including without limitation any general, special, incidental or consequential damages arising in connection to this license. The Publisher reserves the right to cease making the Work available to You at any time without notice
11. Miscellaneous
- This License shall be governed by the laws of the location of the head office of the Author or if the Author is an individual, the laws of location of the principal place of residence of the Author.
 - If any provision of this License is invalid or unenforceable under applicable law, it shall not affect the validity or enforceability of the remainder of the terms of this License, and without further action by the parties to this License, such provision shall be reformed to the minimum extent necessary to make such provision valid and enforceable.
 - No term or provision of this License shall be deemed waived and no breach consented to unless such waiver or consent shall be in writing and signed by the party to be charged with such waiver or consent.
 - This License constitutes the entire agreement between the parties with respect to the Work licensed herein. There are no understandings, agreements or representations with respect to the Work not specified herein. The Author shall not be bound by any additional provisions that may appear in any communication from You. This License may not be modified without the mutual written agreement of the Author and You

libogg

<http://www.xiph.org/ogg/>

Copyright (c) 2002, Xiph.org Foundation

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

libvorbis

<http://www.xiph.org/vorbis/>

Copyright (c) 2002-2004 Xiph.org Foundation

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Tremolo

<http://wss.co.uk/pinknoise/tremolo>

Copyright (C) 2002-2009 Xiph.org Foundation
 Copyright (C) 2009-2010 Robin Watts for Pinknoise Productions Ltd

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Tremor

<http://wiki.xiph.org/index.php/Tremor>

Copyright (c) 2002, Xiph.org Foundation

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Mersenne Twister

<http://www.math.sci.hiroshima-u.ac.jp/~m-mat/MT/MT2002/CODES/mt19937ar.c>

Copyright (C) 1997 - 2002, Makoto Matsumoto and Takuji Nishimura,
 All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- The names of its contributors may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

zlib

<http://www.zlib.net/>

zlib.h – interface of the 'zlib' general purpose compression library version 1.2.3, July 18th, 2005

Copyright (C) 1995-2004 Jean-loup Gailly and Mark Adler

This software is provided 'as-is', without any express or implied warranty. In no event will the authors be held liable for any damages arising from the use of this software.

Permission is granted to anyone to use this software for any purpose, including commercial applications, and to alter it and redistribute it freely, subject to the following restrictions:

- The origin of this software must not be misrepresented; you must not claim that you wrote the original software. If you use this software in a product, an acknowledgment in the product documentation would be appreciated but is not required.
- Altered source versions must be plainly marked as such, and must not be misrepresented as being the original software.
- This notice may not be removed or altered from any source distribution.

Jean-loup Gailly jloup@gzip.org, Mark Adler madler@alumni.caltech.edu

cURL

<http://curl.haxx.se>

COPYRIGHT AND PERMISSION NOTICE

Copyright (c) 1996 - 2011, Daniel Stenberg, <daniel@haxx.se>.

All rights reserved.

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Except as contained in this notice, the name of a copyright holder shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Software without prior written authorization of the copyright holder.

c-ares

<http://c-ares.haxx.se>

Copyright 1998 by the Massachusetts Institute of Technology.

Permission to use, copy, modify, and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of M.I.T. not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission. M.I.T. makes no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

License Information for the Software Used in the Unit

About GPL (GNU-General Public License), LGPL (GNU Lesser General Public License) License


This product uses GPL/LGPL software and software made by other companies.

After you purchase this product, you may procure, modify or distribute the source code of the GPL/LGPL software that is used in the product.

marantz provides the source code based on the GPL and LPGL licenses at the actual cost upon your request to our customer service center. However, note that we make no guarantees concerning the source code. Please also understand that we do not offer support for the contents of the source code.

Dimensions

Unit : mm

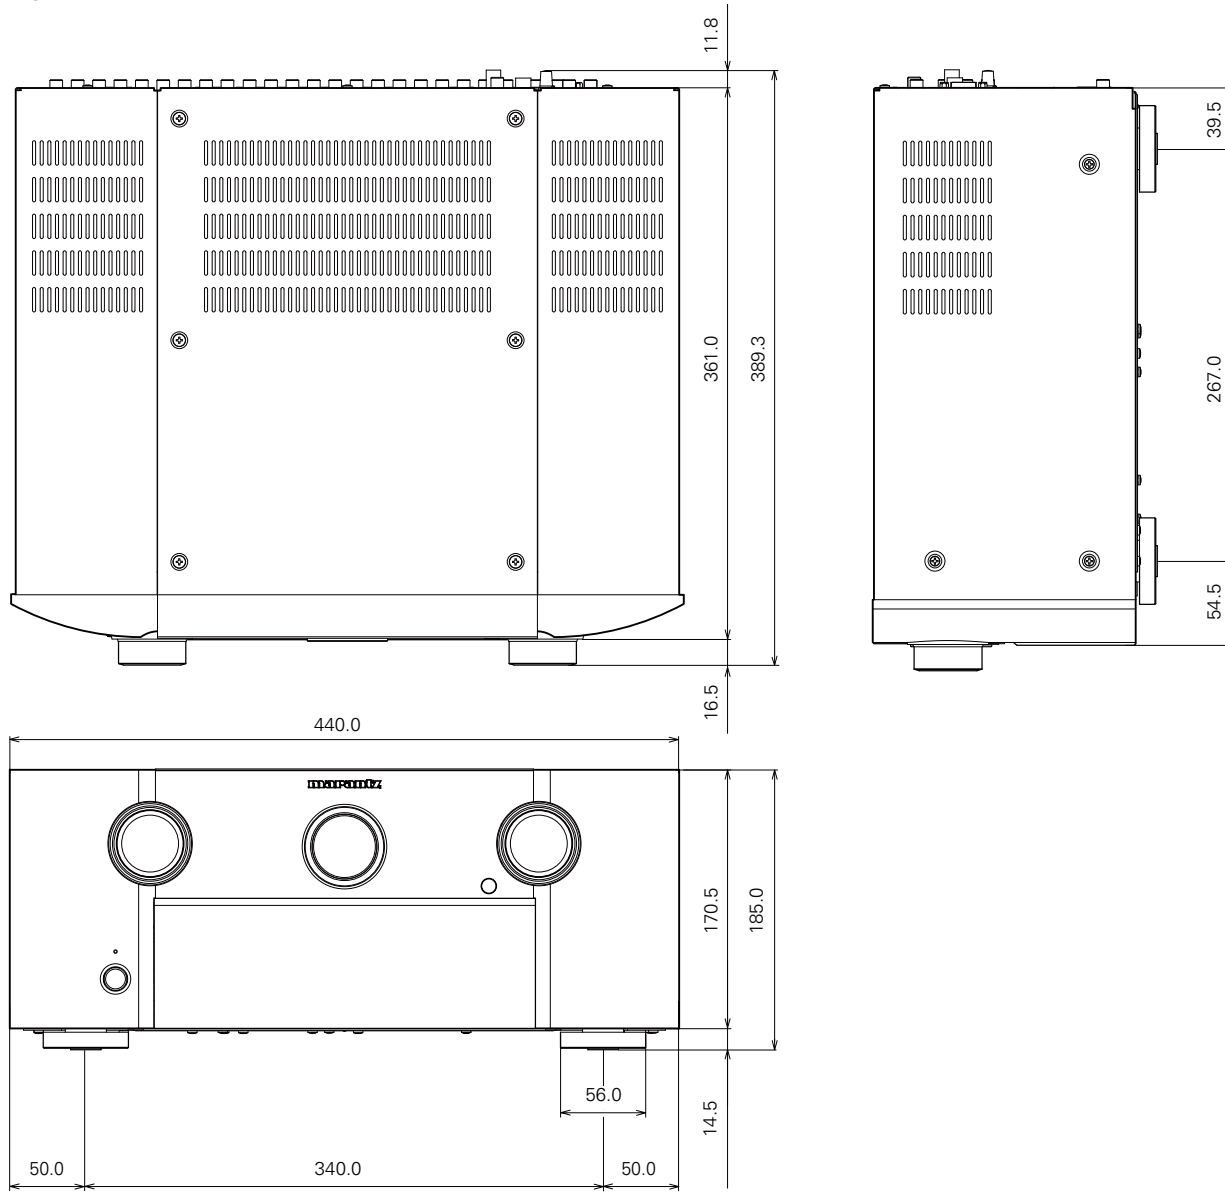

Weight : 13.9 kg

www.marantz.com

You can find your nearest authorized distributor or dealer on our website.

marantz[®] is a registered trademark.