

ORDER:

A349

REMOTE COMMANDS TABLE FOR MODEL :				PM6004
Name	Code			NOTE
	AMP1	AMP2	AMP3	
POWER	16-12	16-118-20	16-119-20	Power On/Standby
POWER ON	16-12-01	16-118-21	16-119-21	Power On
POWER OFF	16-12-02	16-118-22	16-119-22	Standby
MUTE	16-13	16-118-23	16-119-23	Mute On/Off
MUTE ON	16-13-00	16-118-24	16-119-24	Mute On
MUTE OFF	16-13-01	16-118-25	16-119-25	Mute Off
VOLUME UP	16-16	16-118-26	16-119-26	Master volume up
VOLUME DOWN	16-17	16-118-27	16-119-27	Master volume down
PHONO	21-63	16-118-17	16-119-17	Input select PHONO
CD	20-63	16-118-16	16-119-16	Input select CD
TUNER	17-63	16-118-18	16-119-18	Input select TUNER
	17-63-10			
AUX	16-00-06	16-118-13	16-119-13	Input select AUX/DVD
DVD	16-00-10	16-118-10	16-119-10	
RECORDER1(CD-R)	26-63	16-118-14	16-119-14	Input select RECORDER1
RECORDER2(MD)	23-63	16-118-15	16-119-15	Input select RECORDER2
RECORDER2(TAPE)	18-63			
INPUT FWD	16-00-13	16-118-51	16-119-51	Next input select
INPUT REV	16-00-14	16-118-52	16-119-52	Previous input select
SOURCE DIRECT	16-34	16-118-39	16-119-39	Source Direct On/Off
SPEAKER A/B	16-29	16-118-28	16-119-28	Speaker A/B toggle
SPEAKER A ON	16-35-00	16-118-29	16-119-29	Speaker A On
SPEAKER A OFF	16-35-01	16-118-30	16-119-30	Speaker A Off
SPEAKER B ON	16-39-00	16-118-31	16-119-31	Speaker B On
SPEAKER B OFF	16-39-01	16-118-32	16-119-32	Speaker B Off
LOUDNESS	16-50	16-50-02	16-50-03	Loudness On/Off
CONT VOLUME UP	16-16-19	16-118-61	16-119-61	Continuous volume up
CONT VOLUME DOWN	16-17-19	16-118-62	16-119-62	Continuous volume down
CONT VOLUME STOP	16-17-20	16-118-63	16-119-63	Continuous volume stop
AMP1	-	16-118-01	16-118-01	Switch AMP1 RC code
AMP2	16-118-02	-	16-118-02	Switch AMP2 RC code
AMP3	16-118-03	16-118-03	-	Switch AMP3 RC code
SERVICE MODE	16-63-63	16-63-63	16-63-63	Service Mode