
## marantz

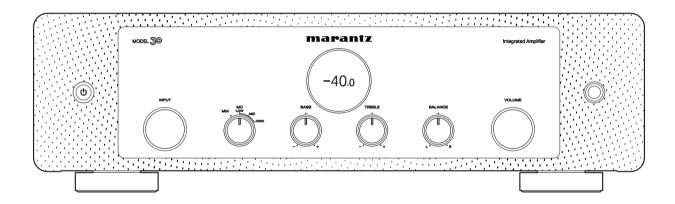

MODEL 30 | Integrated Amplifier

QUICK START GUIDE

## Welcome

Thank you for choosing a Marantz amplifier. This guide provides step-by-step instructions for setting up your amplifier.

# Before You Begin

#### What's In the Box

Quick Start Guide



Amplifier



Safety Instructions



Power cord



Warranty (for USA/ for CANADA)



Remote control unit (RC002PMND)



R03/AAA batteries



#### Required for Setup







CD Player

Speaker systems


Speaker cables




These drawings are for illustrative purposes only and may not represent the actual product(s).

#### There are five steps to the setup process.

 
- Install batteries in the remote control unit
- Connect the speakers to MODEL 30
- Connect the CD player to MODEL 30
- Plug the power cord into a power outlet
- Begin CD playback



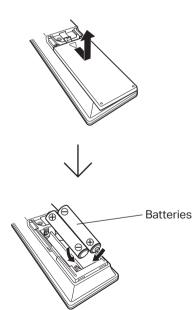

## 2

## Connect the speakers to MODEL 30

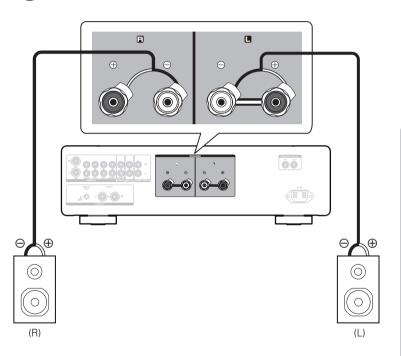

## Connecting the speaker cables

① Peel off about 3/8 inch (10 mm) of sheathing from the tip of the speaker cable, then either twist the core wire tightly or apply solder to it.



2 Turn the speaker terminal counterclockwise to loosen it.




3 Insert the speaker cable's core wire to all the way into the speaker terminal.




4 Turn the speaker terminal clockwise to tighten it.



## 3 Connect the CD player to MODEL 30

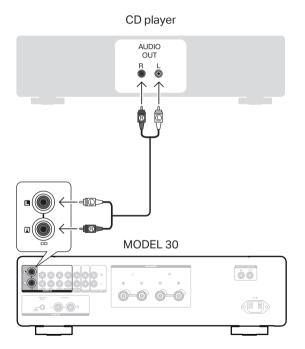

# Plug the power cord into a power outlet

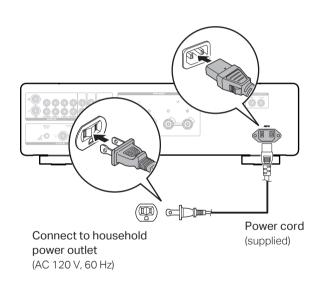

## Owner's Manual

• Refer to the Online Manual for other functions information and operation procedure details.

manuals.marantz.com/Model30/NA/EN/



1 Press the power operation button.



2 Set the input source to "CD".



Play the CD player.



4 Adjust the volume.









• For more information, visit **www.marantz.com** 

#### www.marantz.com

You can find your nearest authorized distributor or dealer on our website.

marantz is a registered trademark.